



# HTC Wizard 100 Back Case Replacement

How to remove the speakers of phone.

Written By: Eric W



## INTRODUCTION

In order to remove speakers, we have to remove the phone plastic case and keyboard. This requires the spudger tool and torx screwdriver.

### **TOOLS:**

- [Heavy-Duty Spudger \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery





- Power the phone off.
- Use your thumb to gently press downward and away from the camera to remove the battery cover.

## Step 2



- Pull on the plastic tab to release the battery.

## Step 3 — Back Case

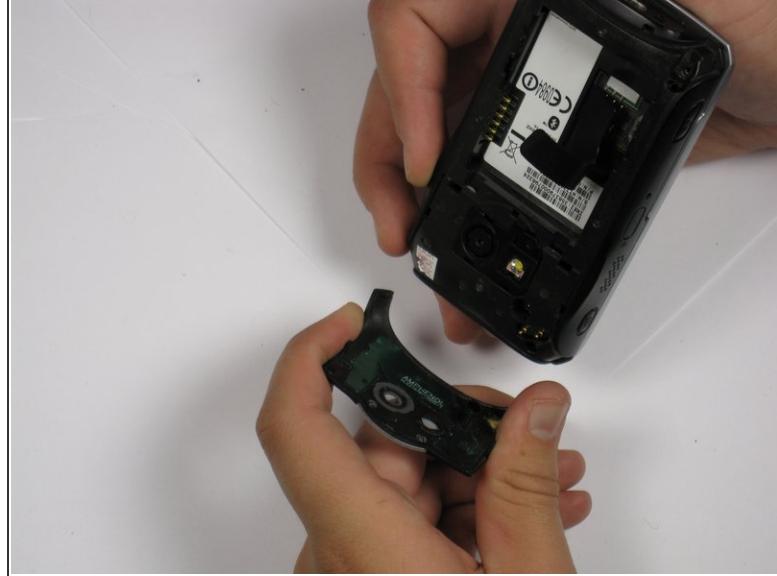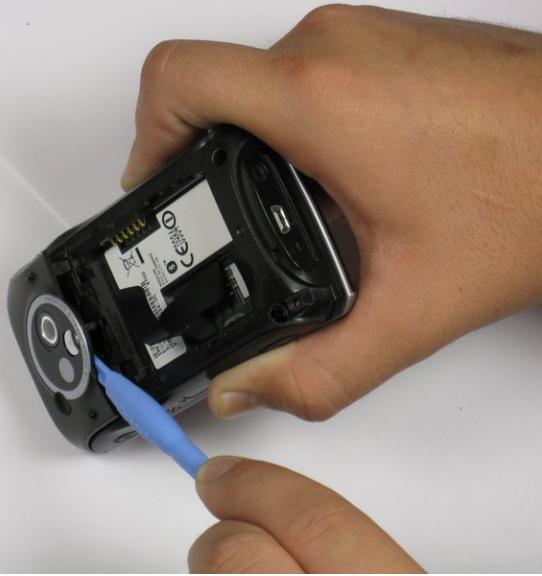

- Use a plastic opening tool to remove the camera cover.

 Work around the corners to avoid breaking the plastic clips that hold the camera cover on.

- Lift the camera cover off of the phone.

## Step 4



- Remove the stylus from the phone.
  - Remove the four 5.5 mm screws with the T6 Torx Screwdriver.
-  One of the screws might be under a sticker, which will void your warranty.

## Step 5



**⚠** Be Careful! Do not insert the spudger in between the keyboard and screen. This could break the keyboard off the phone.

- ⓘ If your phone contains a memory card, you may want to remove it before proceeding with this step.
  - Insert spudger in the bottom corner as seen in the picture. Carefully slide the spudger from the bottom towards the top as seen in the second picture.
  - Lift the back case off completely.
- ⓘ The speakers might be dangling and unsecured.

To reassemble your device, follow these instructions in reverse order.