




HUAWEI HONOR 5X Motherboard Replacement

Use this guide to replace the motherboard of the Huawei Honor 5X.

Written By: Gloriane Delgadillo

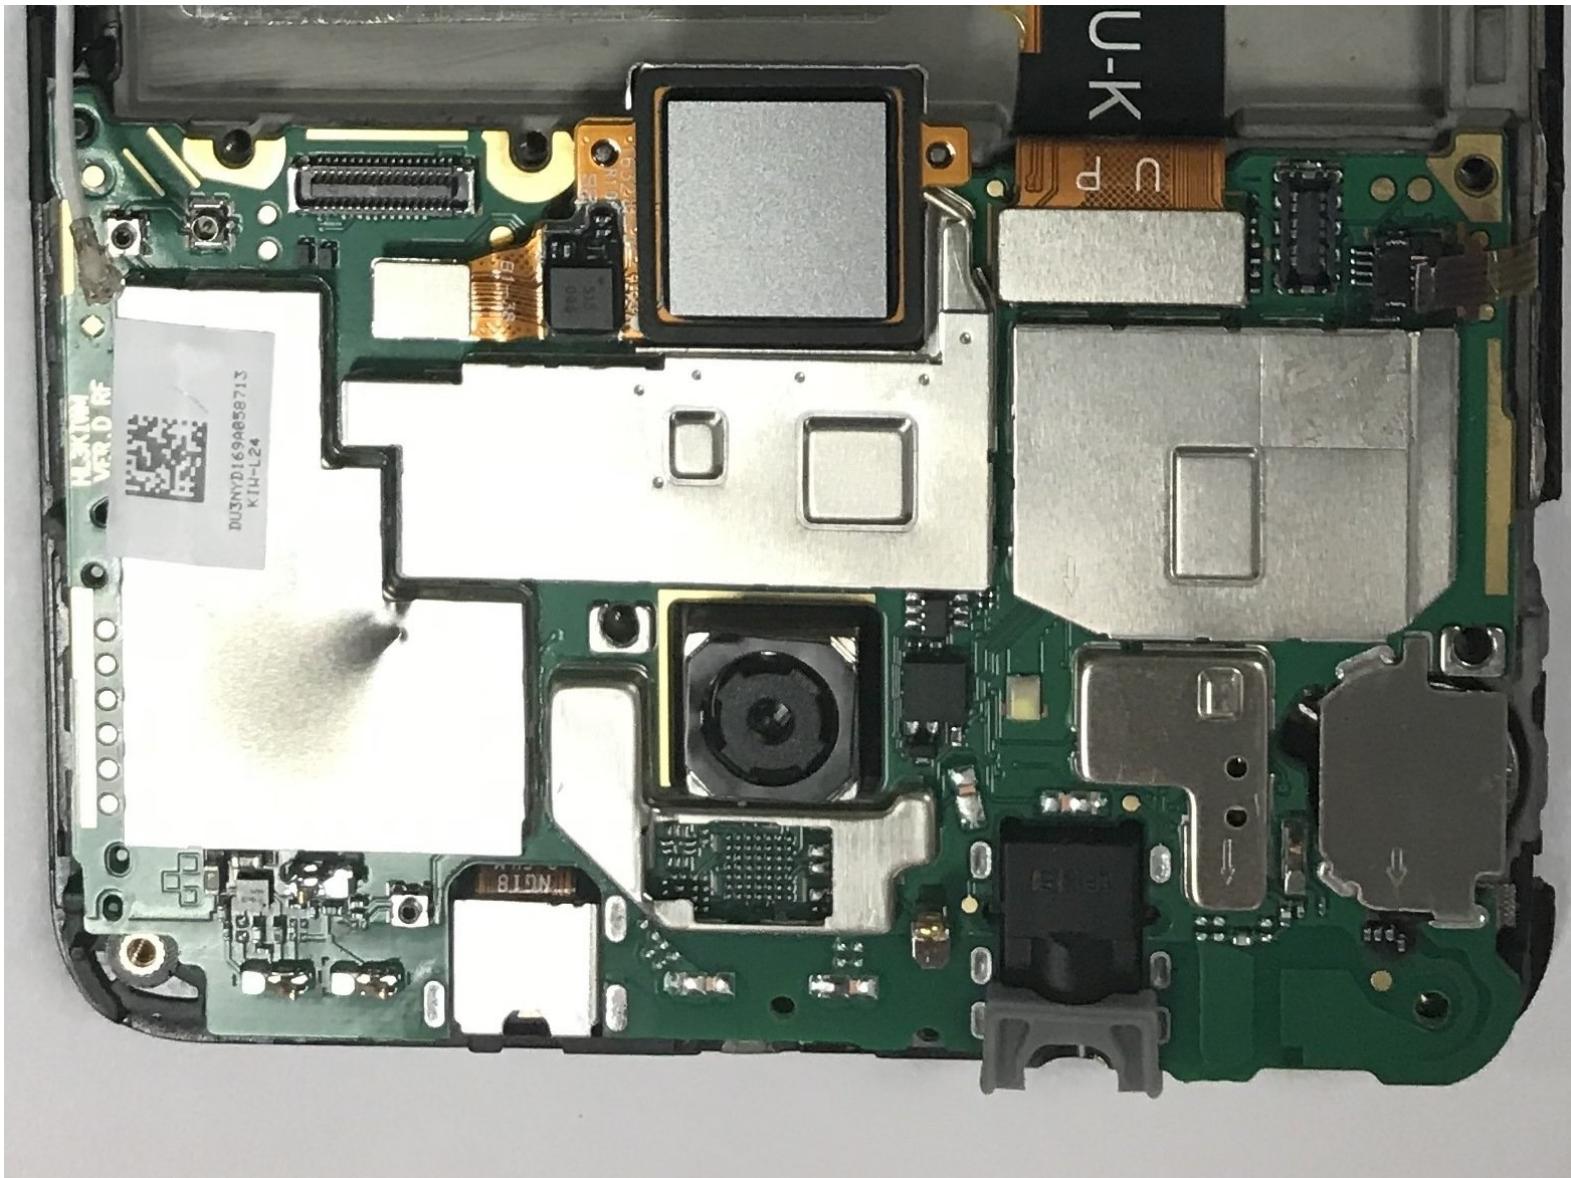

INTRODUCTION

The motherboard may have to be replaced if the cellphone is not responding at all. This guide will instruct the steps on this process.

TOOLS:

- [T3 Torx Screwdriver](#) (1)
- [iOpener](#) (1)
- [iFixit Opening Tools](#) (1)
- [SIM Card Eject Tool](#) (1)
- [Phillips PH000 Screwdriver](#) (1)

Step 1 — HUAWEI HONOR 5X Disassembly



- Turn off your cell phone before disassembling.

Step 2



- Remove the two 1.17mm Torx T3 screws from the bottom of the phone.

Step 3



- Use the Sim card ejection tool to remove both the sim card trays.

Step 4





- To prepare the iOpener insert it in the microwave for 30 seconds and apply it on the side edges of the phone so that the glue underneath will soften.

Step 5




- Pry off the back with a plastic opening tool.

Step 6 — Motherboard

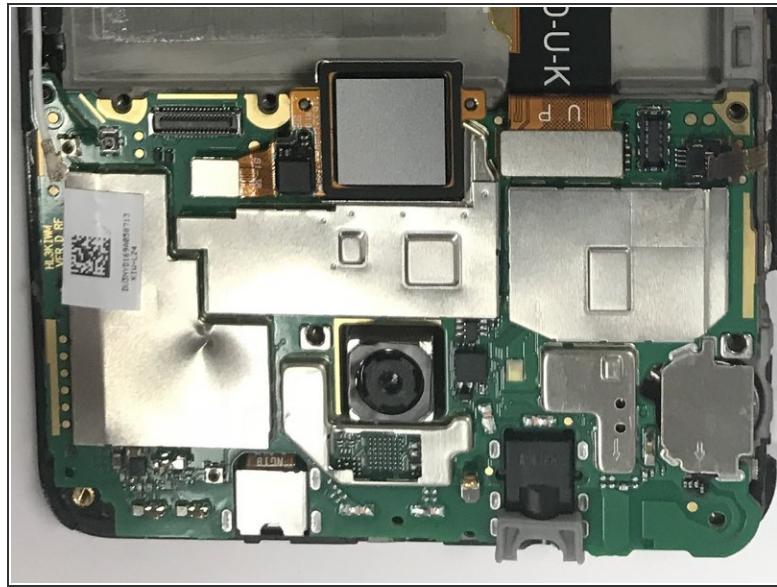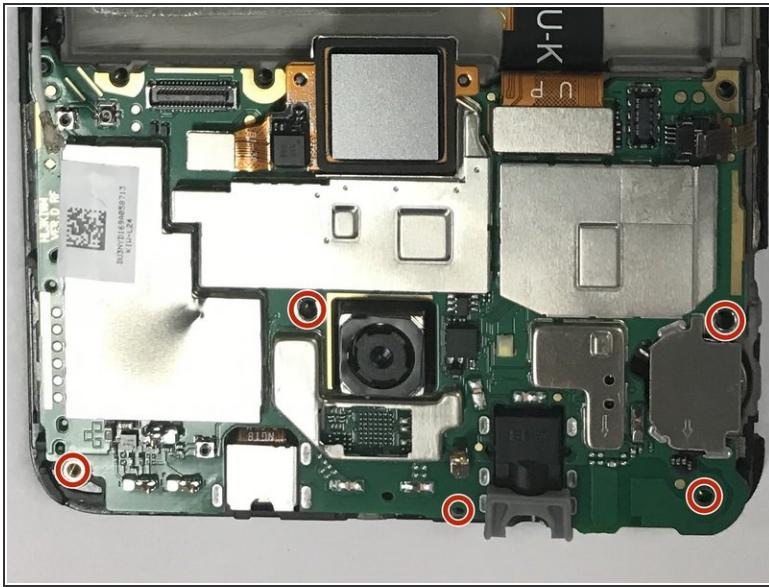

- Remove the five 1.5mm Phillips #000 screws from the motherboard.

Step 7

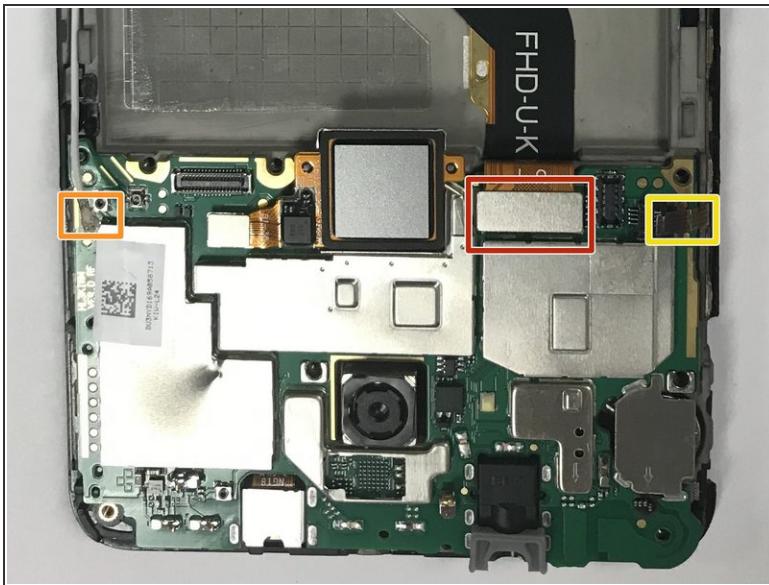

- Use a plastic opening tool to pry up and disconnect the display cable from the motherboard.
- Use tweezers to disconnect the white coax cable.
- Use tweezers to disconnect the power and volume cable.

Step 8



- Remove the motherboard.

To reassemble your device, follow these instructions in reverse order.