




# Handspring Visor Deluxe PDA Touch Screen Replacement

How to install a new touch screen into the Handspring Visor Deluxe PDA.

Written By: David Faltemier

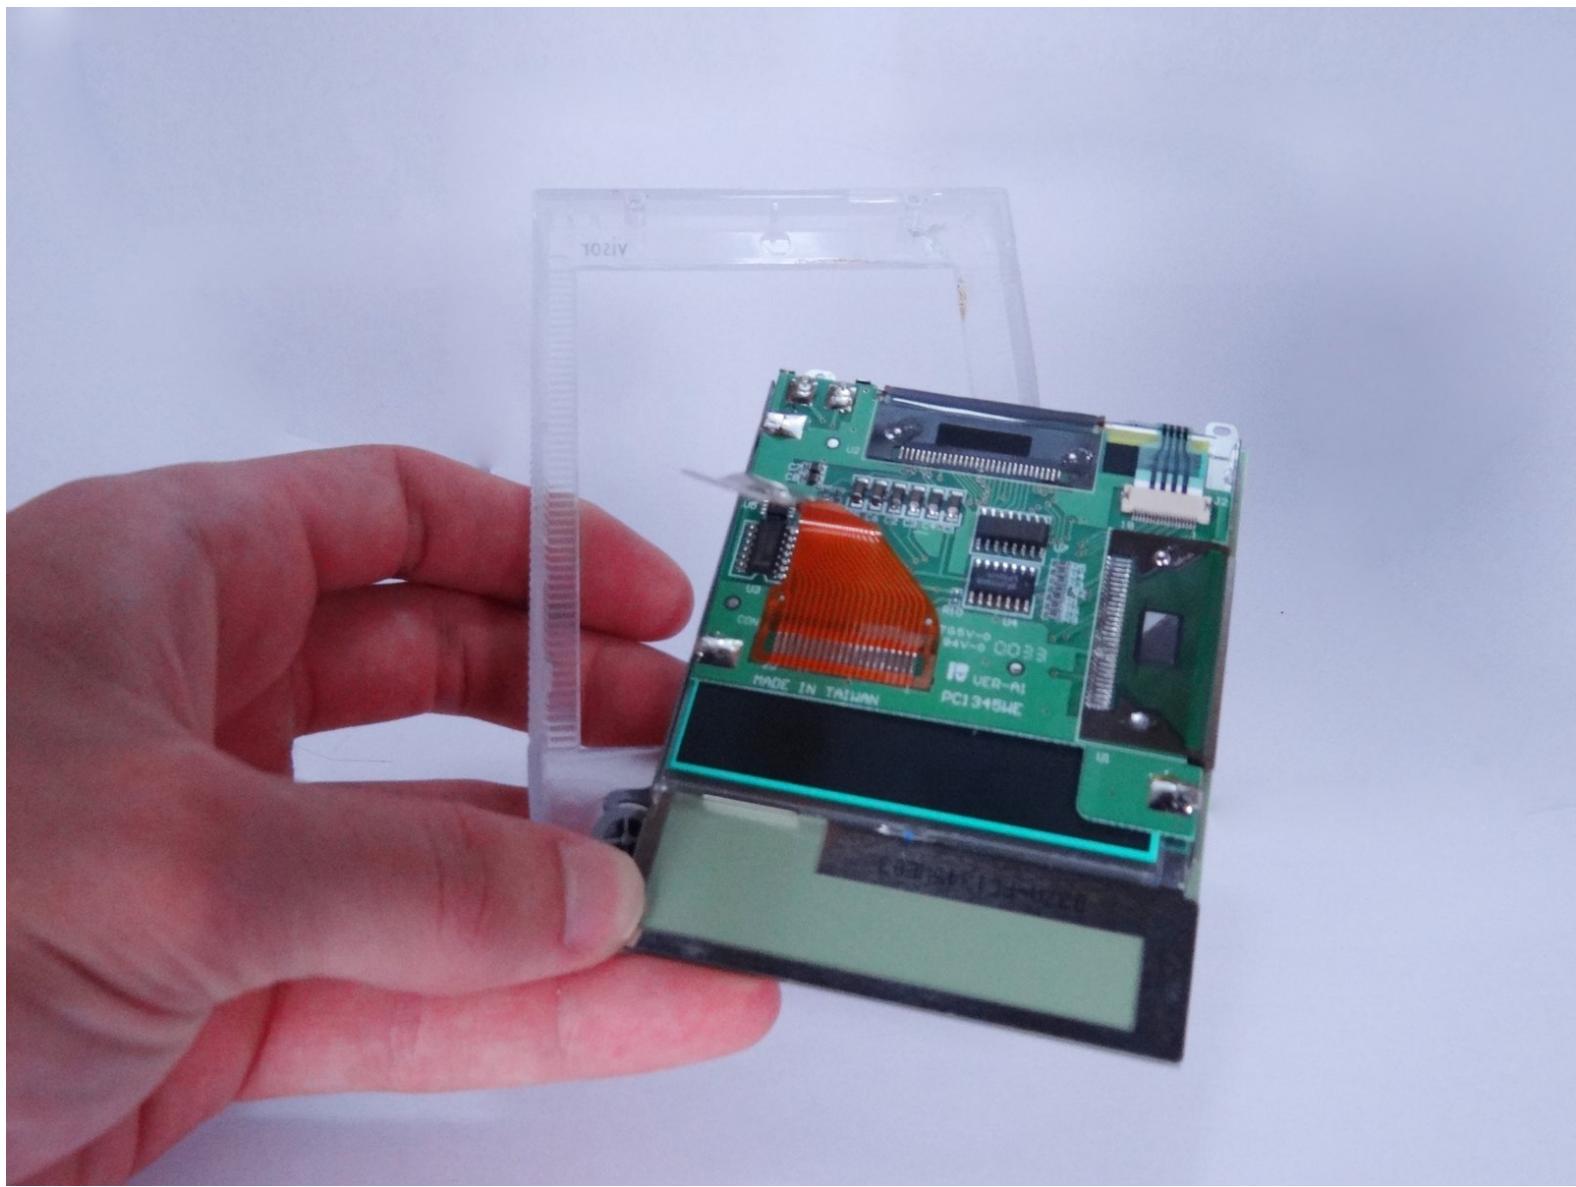

## INTRODUCTION

Use this guide to replace the Touch Screen.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Outside cover and stylus



- Remove the outer screen cover by releasing the top clip from the main body of the device.

## Step 2




- Pull out the stylus from the top right corner of the device.

## Step 3




- Slide the memory cartridge cover up and off the device.

## Step 4 — Batteries

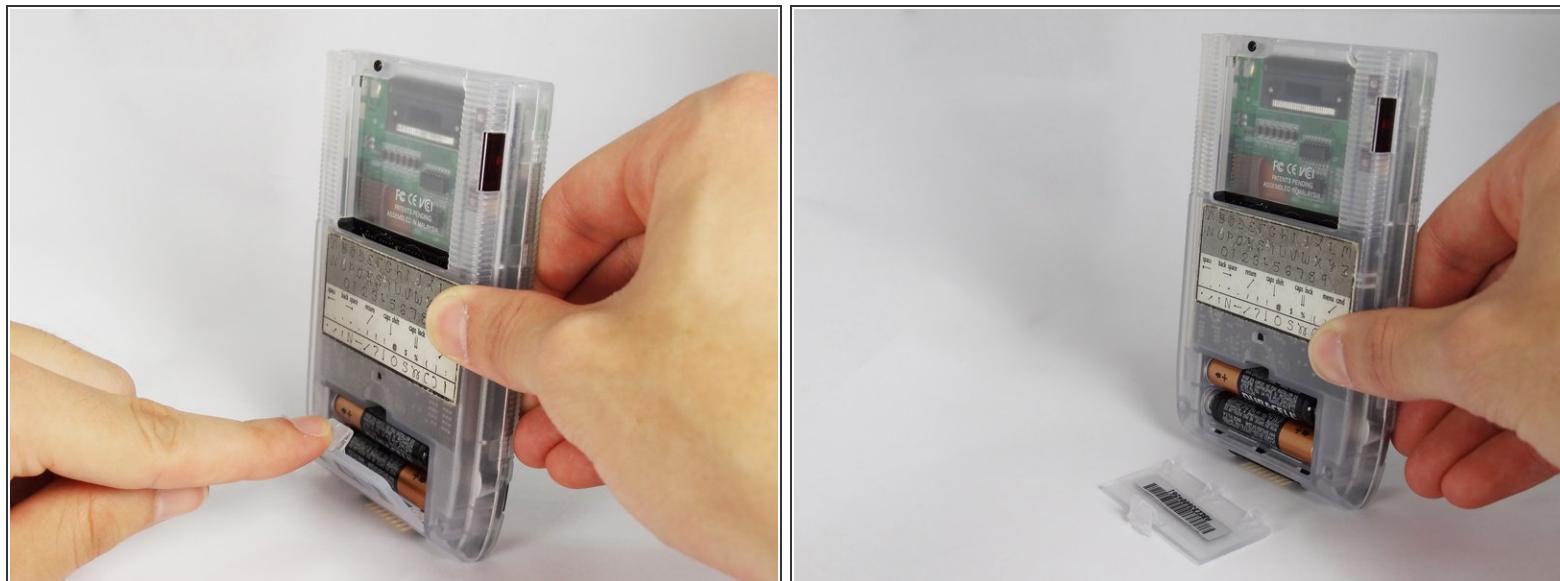

- Remove the battery cover by releasing the clip from the main body of the device.

## Step 5

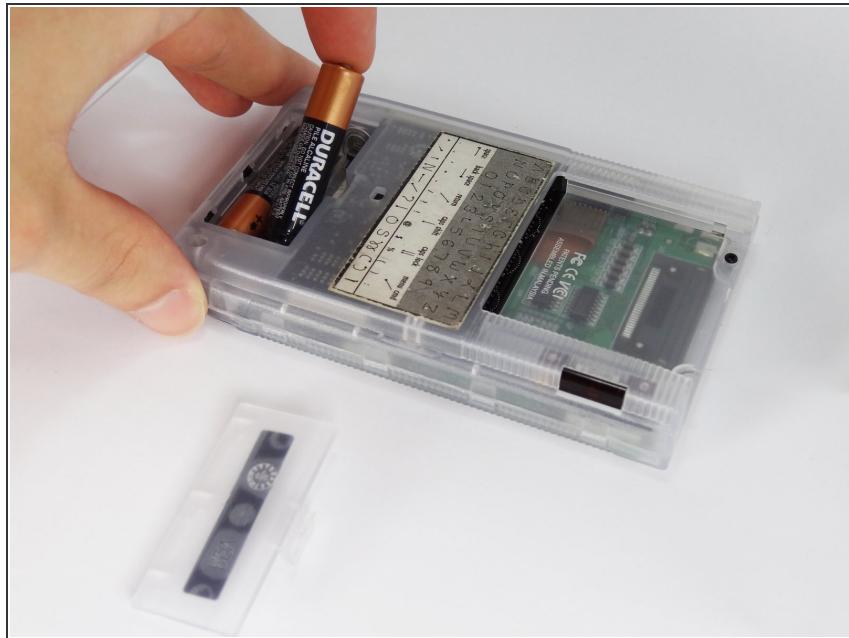

- Remove the batteries from the device.


## Step 6 — Back Cover



- Unscrew the four 2.94mm screws with a #00 Phillips screwdriver.

*(i)* One end of the OEM stylus can unscrew and contains a mini #00 Phillips screwdriver.

## Step 7

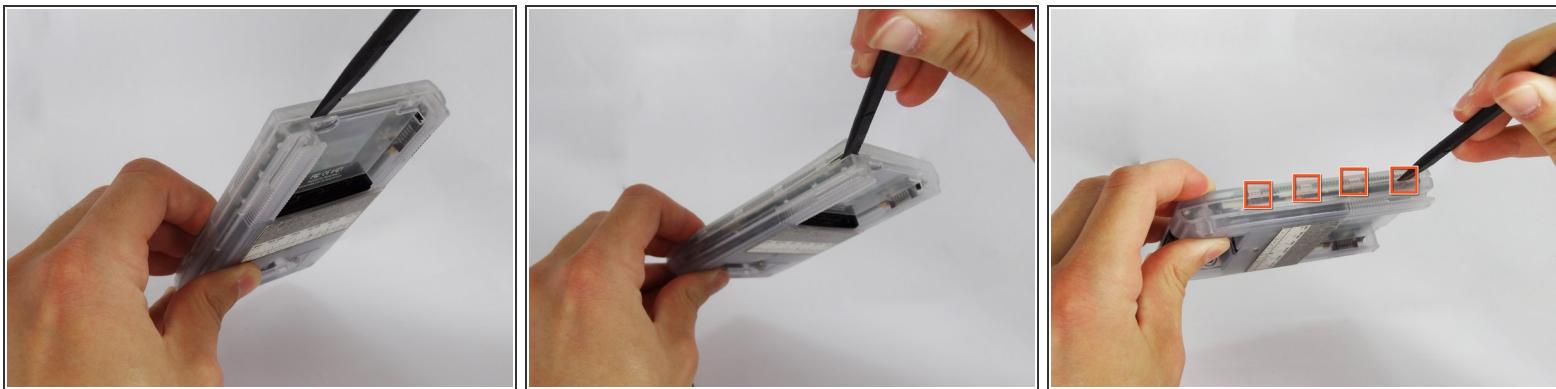

- Use the spudger to pry open the casing by applying pressure at 4 clips on both sides of the device.


 Be careful while opening the casing as there is a flex strip connecting the two halves.

## Step 8



- Disconnect the flex strip from the motherboard with tweezers.

## Step 9 — Touch Screen

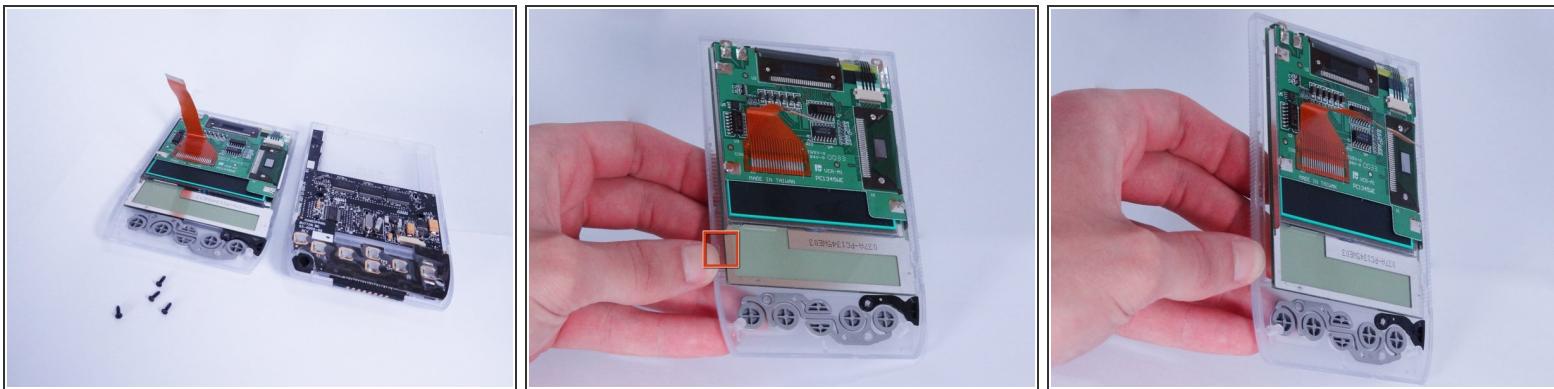

- Release the latch in bottom right corner of the touchscreen.
- ⓘ Use the spudger (if needed) to pry the screen from the front case.

To reassemble your device, follow these instructions in reverse order.