




# Huawei Honor 5X Volume and Power Buttons Replacement

These are step-by-step instructions on how to replace the volume and power buttons on your Huawei Honor 5X.

Written By: Eric Petrou

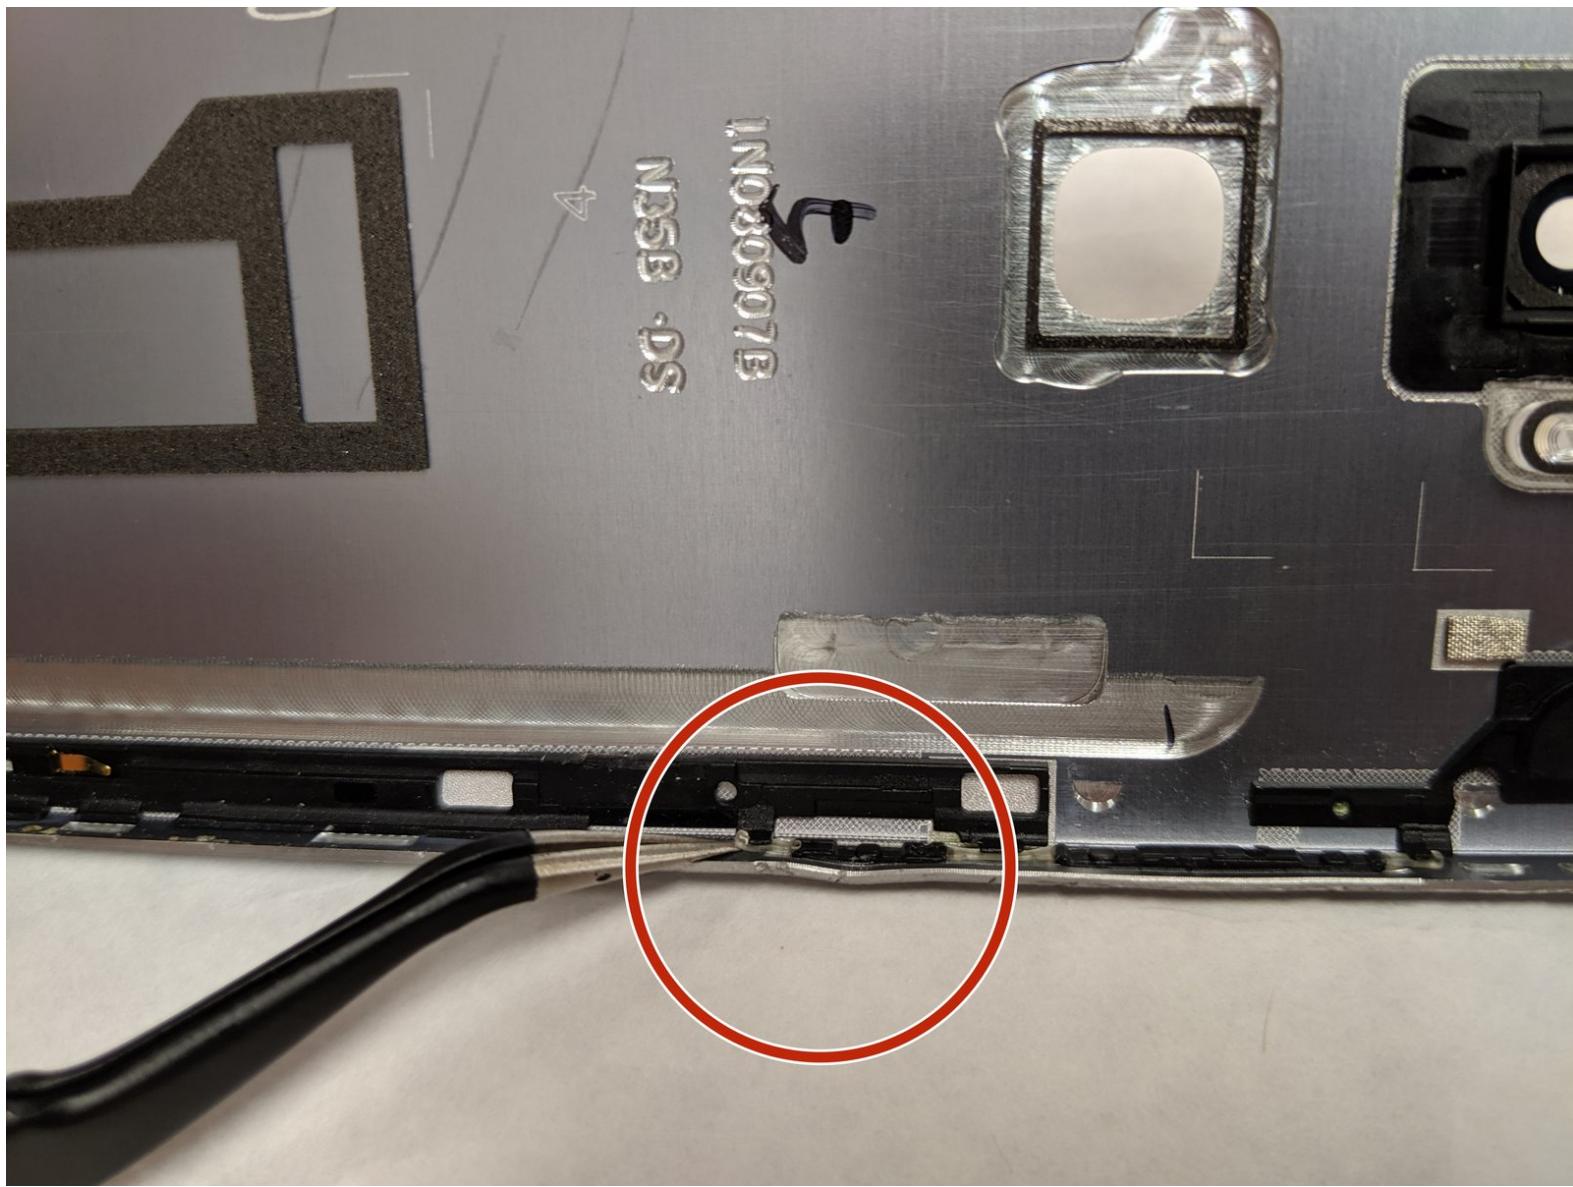

## INTRODUCTION

Use this guide if you want to replace the power and volume button on your Huawei Honor 5X. The volume and power buttons should be replaced if one or both aren't working.

### TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
- [T3 Torx Screwdriver](#) (1)
- [iOpener](#) (1)
- [iFixit Opening Tools](#) (1)
- [SIM Card Eject Tool](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [T2 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — HUAWEI HONOR 5X Disassembly



- Turn off your cell phone before disassembling.

## Step 2



- Remove the two 1.17mm Torx T3 screws from the bottom of the phone.

### Step 3



- Use the Sim card ejection tool to remove both the sim card trays.

## Step 4



- To prepare the iOpener insert it in the microwave for 30 seconds and apply it on the side edges of the phone so that the glue underneath will soften.

## Step 5



- Pry off the back with a plastic opening tool.

## Step 6 — Battery




- Remove the pink sticker.

## Step 7



- Remove the three 1.5mm Phillips #000 screws.

## Step 8

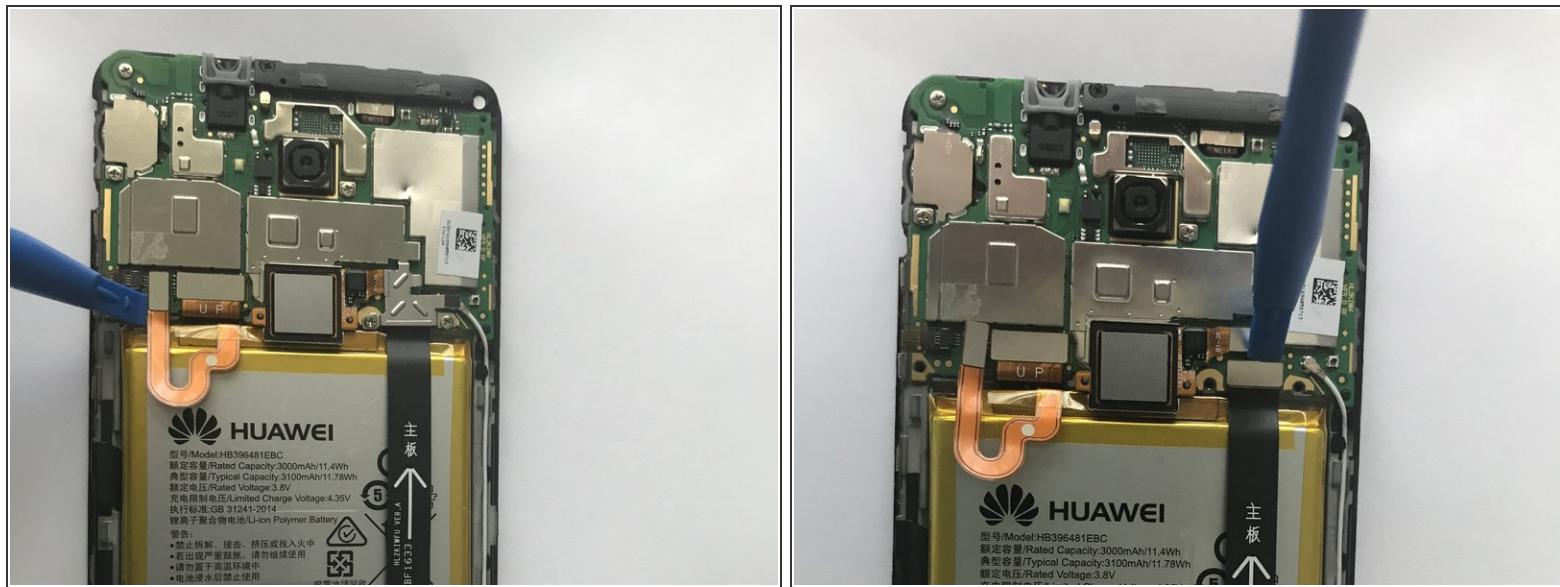



- Use a plastic opening tool to disconnect the orange and black battery cables from the motherboard.

## Step 9




- Remove the battery from the phone.

## Step 10 — Motherboard

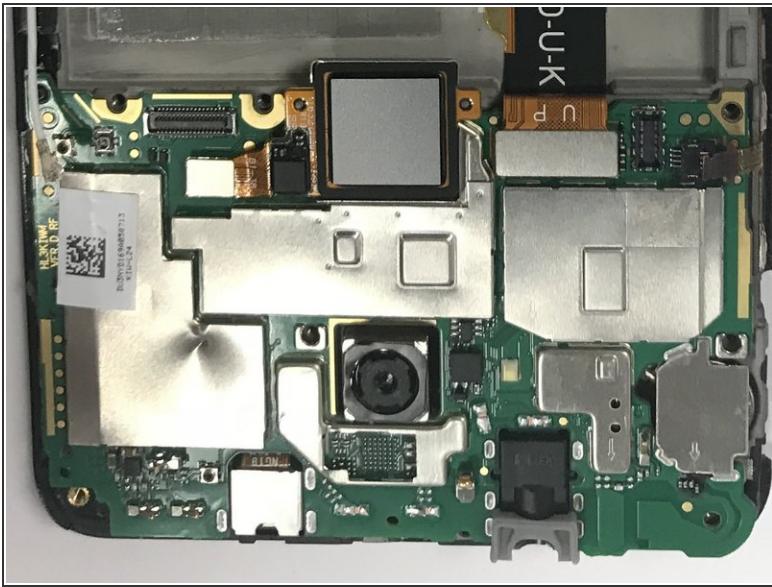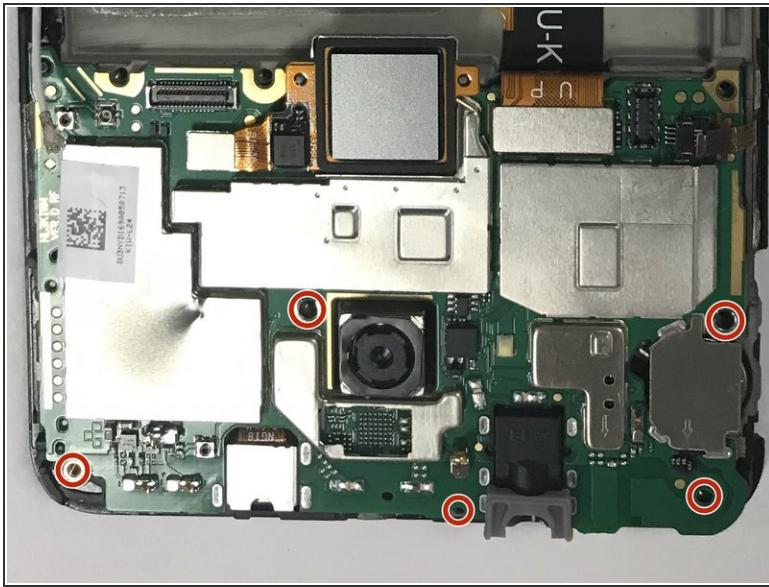

- Remove the five 1.5mm Phillips #000 screws from the motherboard.

## Step 11

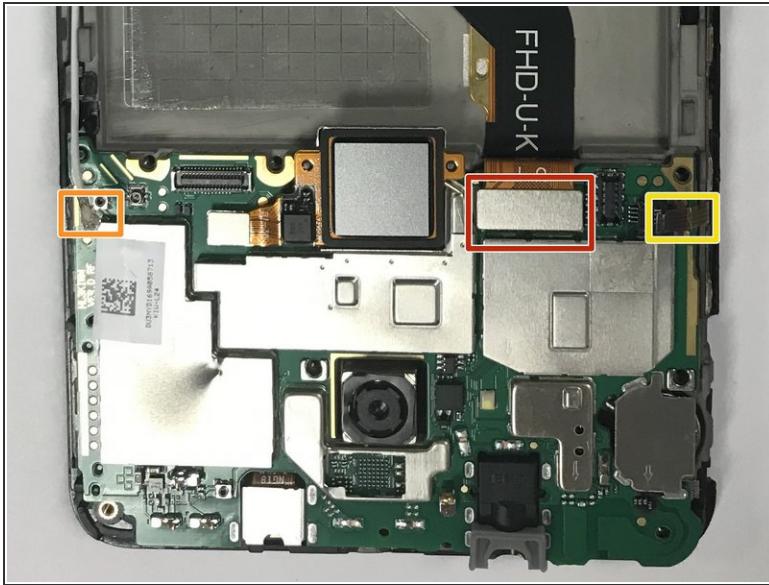

- Use a plastic opening tool to pry up and disconnect the display cable from the motherboard.
- Use tweezers to disconnect the white coax cable.
- Use tweezers to disconnect the power and volume cable.

## Step 12



- Remove the motherboard.

## Step 13 — Volume and Power Buttons



- Use the tweezers to pull the button assembly from the small black clips on the back plate of the phone.

To reassemble your device, follow these instructions in reverse order.