




Huawei P10 Plus Rear Camera Replacement

Replace the rear camera in your Huawei P10 Plus smartphone.

Written By: Dominik Schnabelrauch

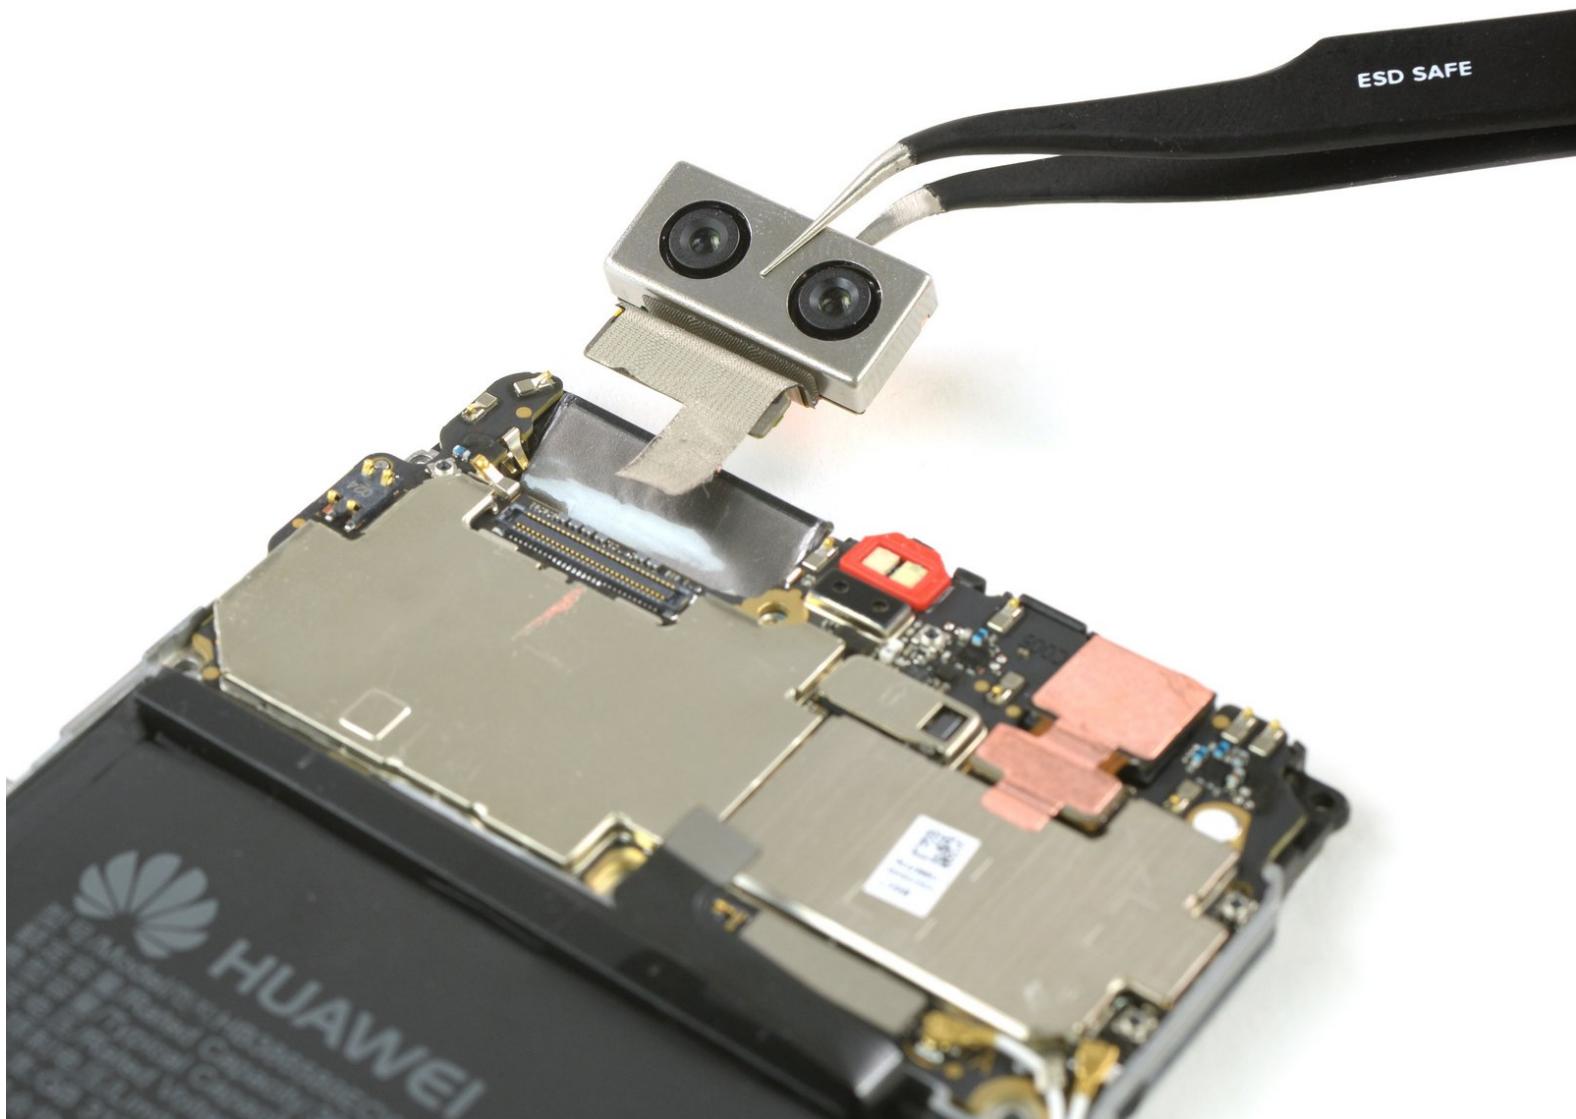

INTRODUCTION

In this guide we show you how to replace the rear camera in your Huawei P10 Plus smartphone.

TOOLS:

- [iFlex Opening Tool](#) (1)
- [iOpener](#) (1)
- [SIM Card Eject Tool](#) (1)
- [iSclack](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Display



- Use an [iOpener](#) to loosen the adhesive beneath the display, focusing on the upper and lower part of the display.
- Use an opening pick, or iFlex, to separate the adhesive on all sides of the display.

 To avoid damage to the display, do not push the tool too deeply into the phone.


Step 2



 There is a thin display cable between the screen and phone, be very careful not to rip it when opening the device.

- Place a suction cup, or iSclack, on the upper portion of the phone and lift the display off the midframe.
- Don't remove the display, the cable is trapped under a bracket screwed to the phone. You can flip the display to lay it down without straining the cable, or simply hold it in the next steps.


Step 3

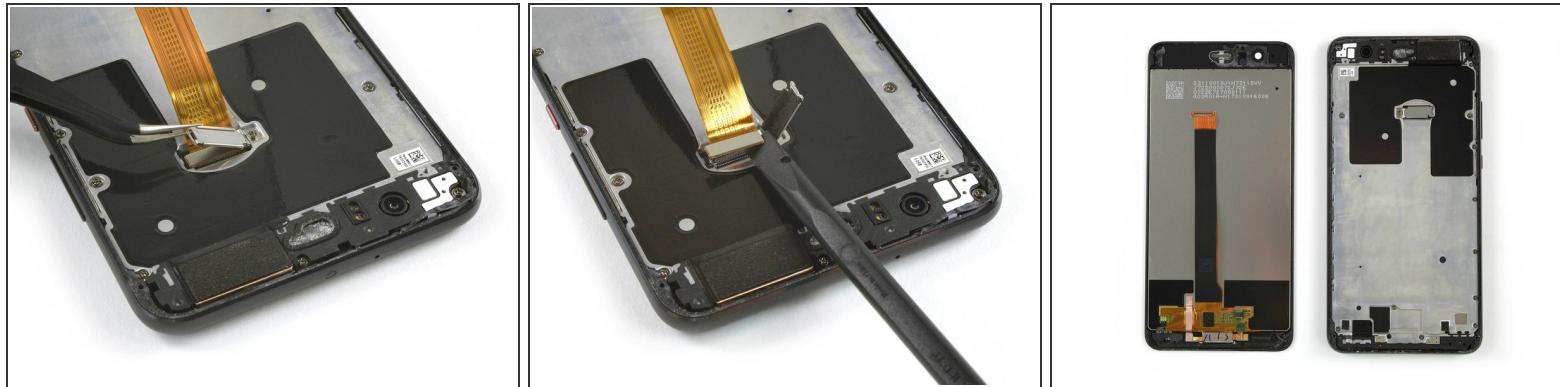

- Open the metal shield that covers the display flex cable.
- Use a spudger to disconnect the display flex cable.
- Remove the display.


When reassembling your phone replace old adhesive with [double-sided tape](#) or [pre-cut adhesive strips](#).

Step 4 — Midframe

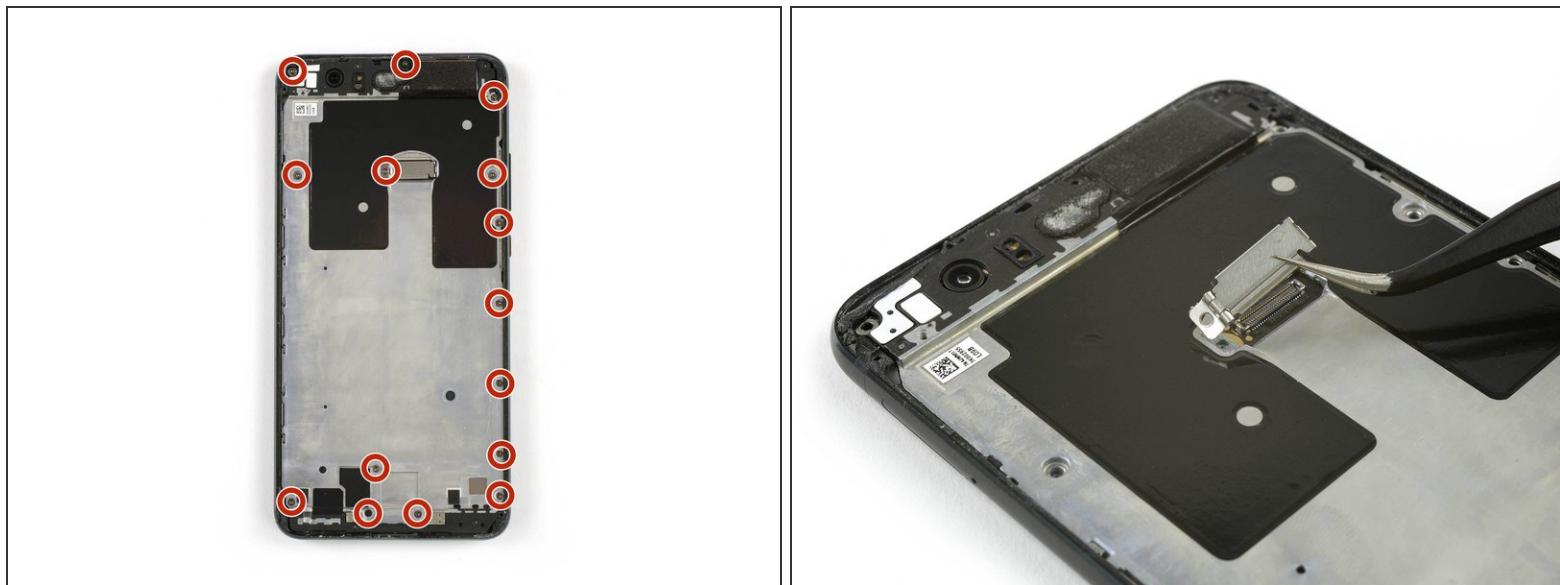


- Remove the 15 Phillips #00 screws.
- Remove the metal shield which held down the display flex connector.

Step 5

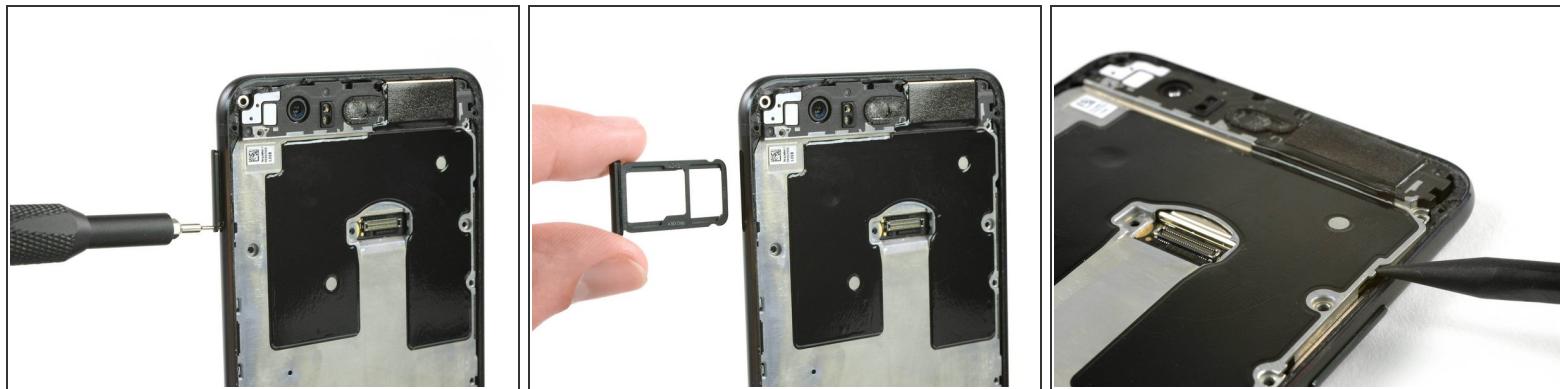

- Remove the SIM card tray.
- Use the pointed end of a spudger to pry out the mid frame until you can get a good grip.

Step 6

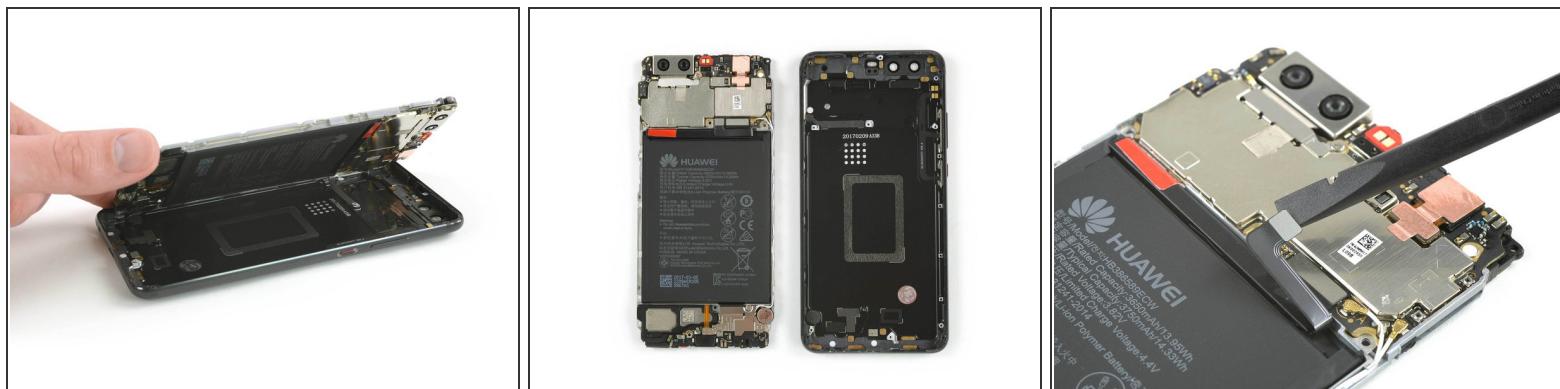


- Remove the mid frame.
- Disconnect the battery flex cable with a spudger.

Step 7 — Rear Camera



- Remove the Phillips #000 screw.
- Remove the metal clamp.
- Peel off the adhesive tape that connects the rear camera to the motherboard.

Step 8

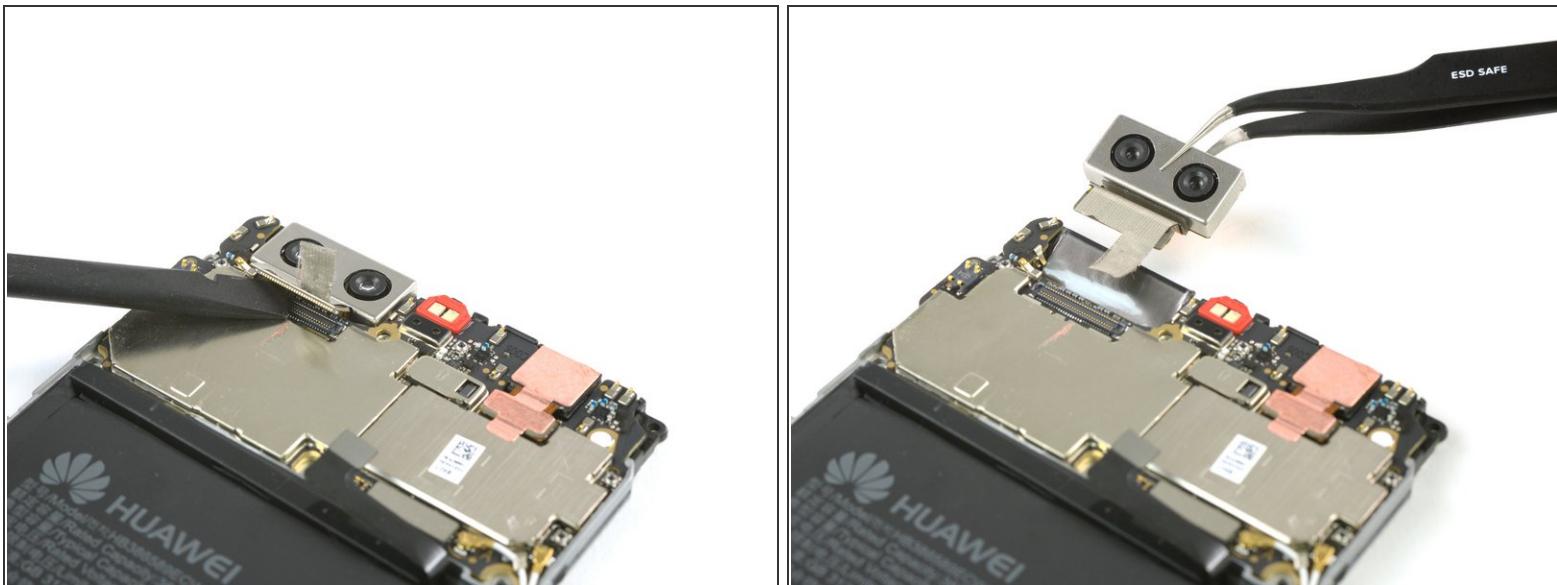

- Use a spudger, to disconnect the rear camera flex cable.
- Remove the camera.

To reassemble your device, follow these instructions in reverse order. When reassembling your phone apply new adhesive where it is necessary.