




Huawei P10 battery disconnect prereq

This guide shows how disconnect the battery in your Huawei P10.

Written By: Dominik Schnabelrauch

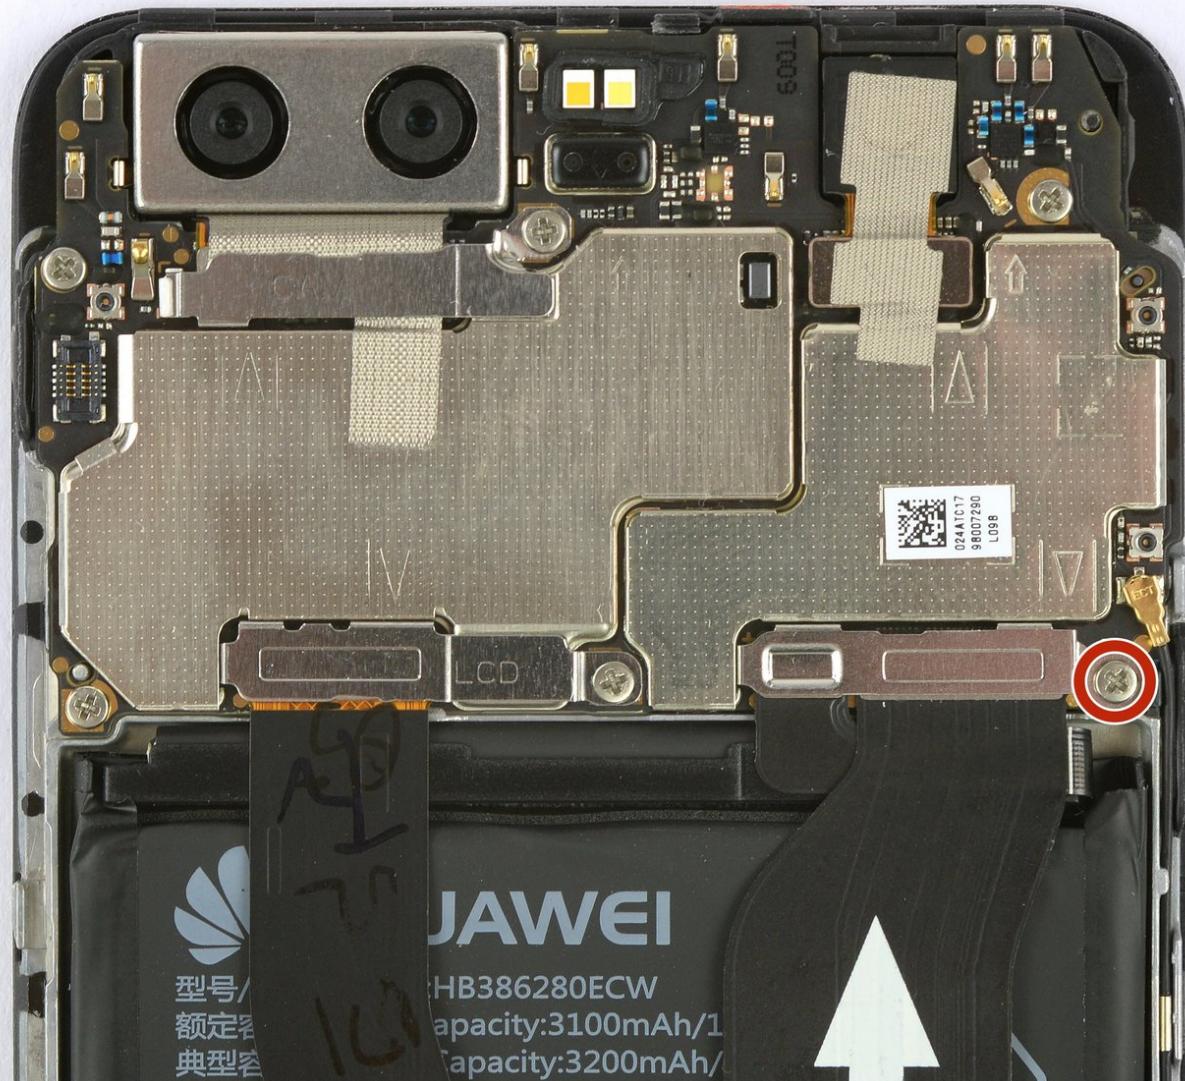

INTRODUCTION

Use this guide to disconnect the battery in your Huawei P10 smartphone.

TOOLS:

- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Back Cover




- Switch off your phone.
- Remove the two Pentalobe P2 screws at the bottom.
- Remove the SIM card tray.

Step 2



- Insert a plastic opening tool between the display and the case starting at the bottom area of your phone.
- Carefully pry the display with its parts out of the case.
- *(i)* Getting the prying tool in will require some effort, be careful not to slide the tool too much or you might slightly damage the housing.
- After you pried out the bottom end, use the opening tool to open the clamps on both sides.

Step 3

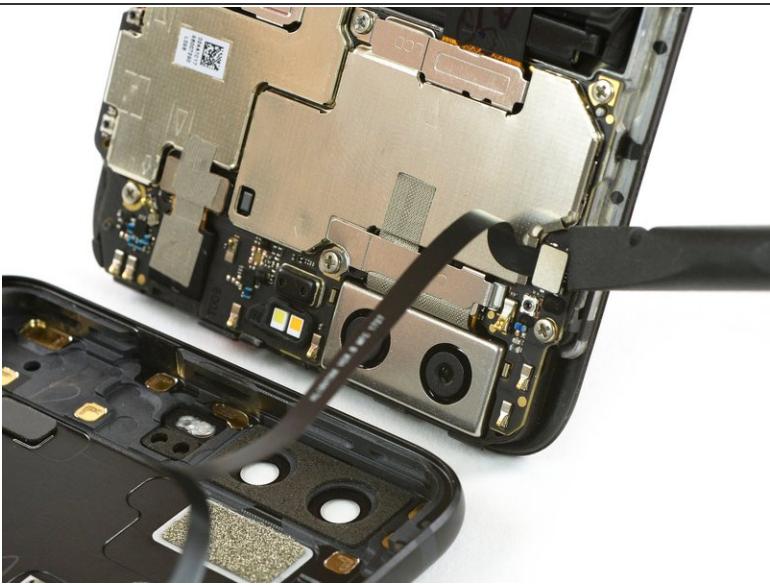

⚠ Don't open the phone all the way, yet. The cable for the standby and volume buttons is still connected to the back cover.

- Swing open the phone backwards.
- Use a spudger to disconnect the power- and volume button flex cable.

Step 4 — Battery disconnect



- Remove the Phillips #00 screw.
- Use tweezers to remove the metal plate.
- Use a spudger to disconnect the battery flex cable.

To reassemble your device, follow these instructions in reverse order. Reapply adhesive where it is necessary.