




# JBL Clip 2 Audio AUX Cord Replacement

Replace your audio AUX cord to allow your JBL Clip 2 to connect to music devices and play music.

Written By: Michael Hong

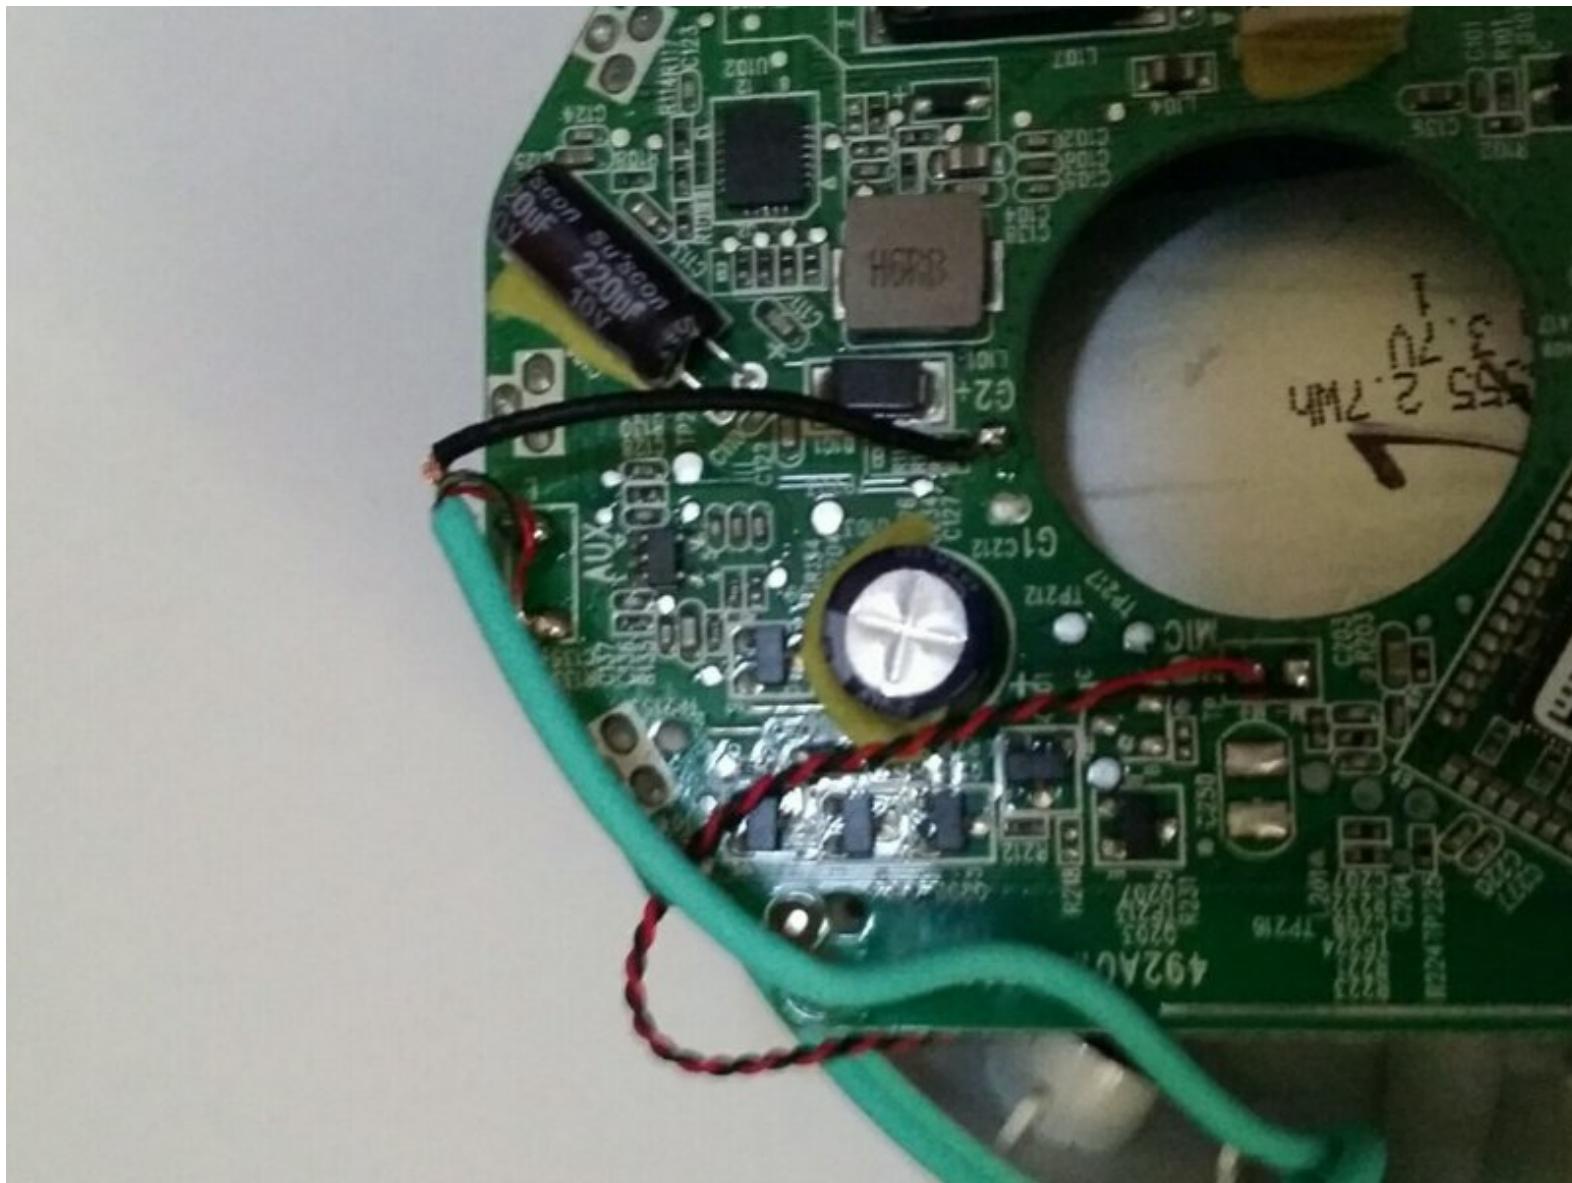


## INTRODUCTION

If your JBL Clip 2's built in AUX cord is not playing music from your music device there may be an issue with the cord itself. The device will be taken apart and the audio AUX cord will be removed and replaced.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T8 Torx Screwdriver](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Audio AUX Cord

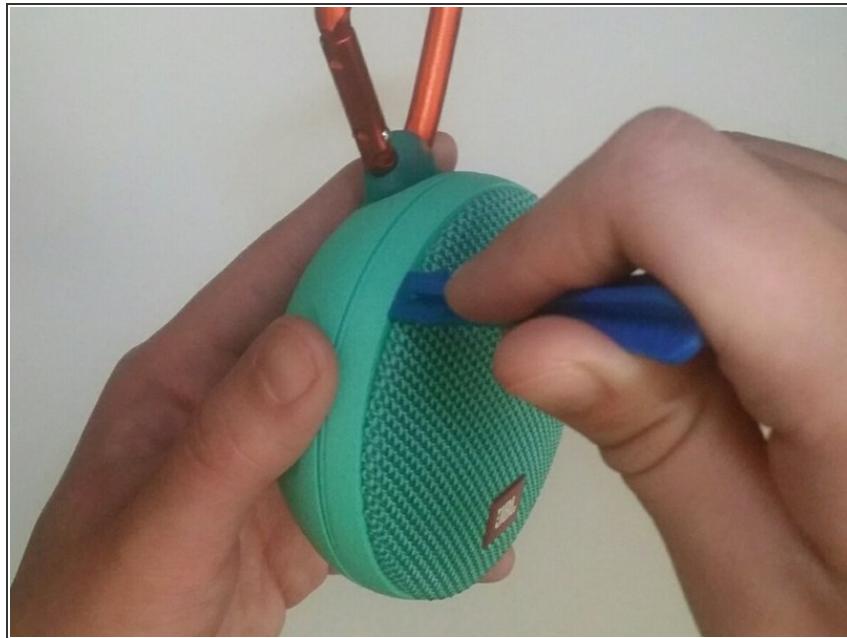

- Begin by removing the front cap of the JBL Clip 2 by using the blue plastic opening tool to get in between the creases.


⚠ If your JBL Clip 2 has never been opened this procedure will require moderate amount of force.

## Step 2



- There will be six 3 mm T8 screws under the cap, remove these six screws. Save
- If you are not trying to replace the speaker please ignore the two middle 3 mm T8 screws during this procedure.

## Step 3

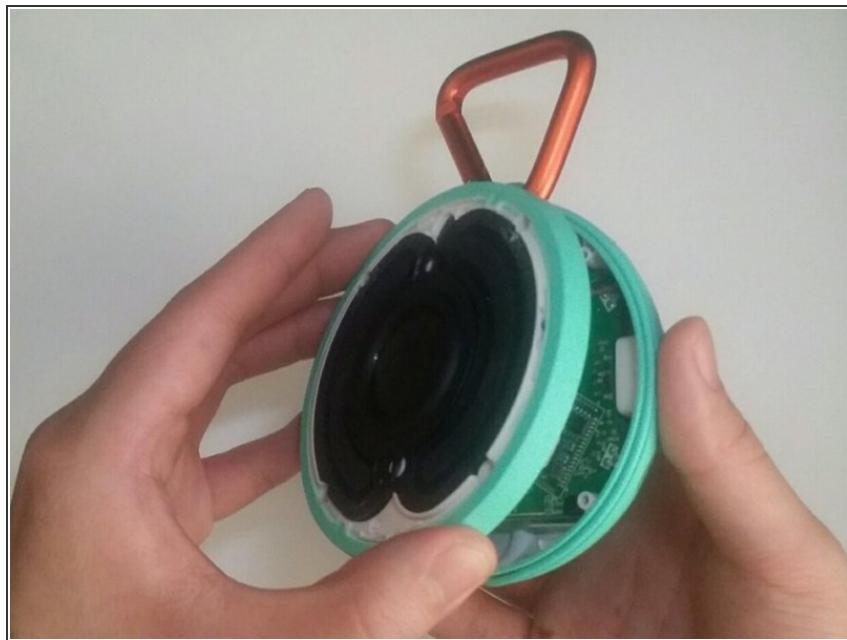

- The front cover will lift open easily and the components will be visible.


## Step 4



- To completely remove the top portion, disconnect the speaker from the motherboard using the blue plastic opening tool.


**⚠** While disconnecting be sure to not use too much force as these two parts are meant to become disconnected.

## Step 5

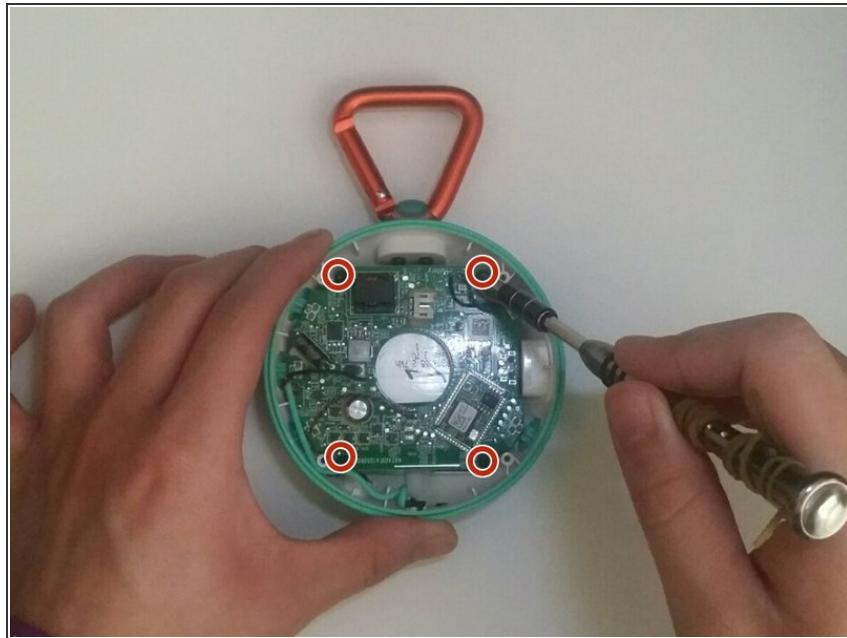

- There will be four 3 mm T8 screws holding the motherboard in place, remove these four screws.

## Step 6

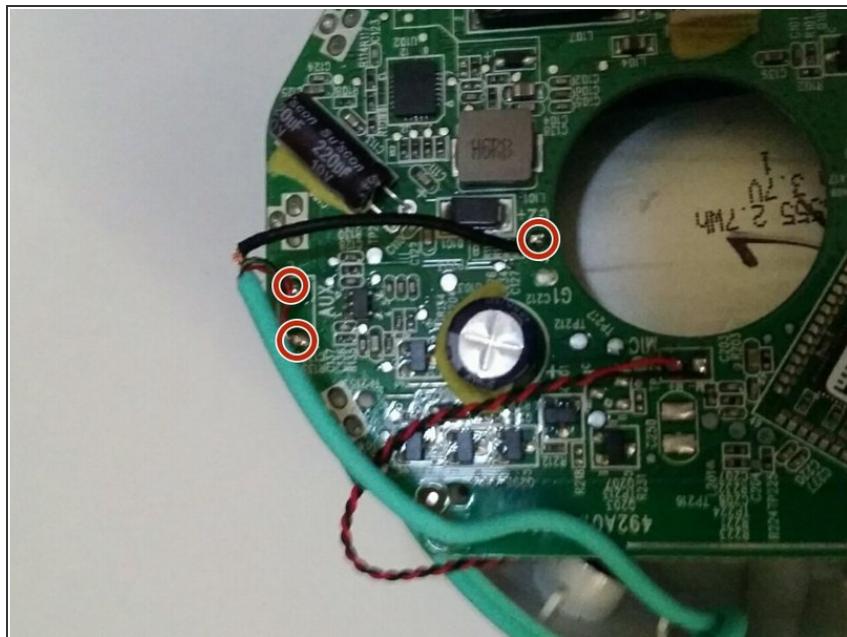

- Disconnect the three solder points connecting the AUX cord to the motherboard.
- ⓘ* If you need help with desoldering refer to [How to Solder and Desolder Connections](#) help.
- Remove the AUX cord.

To reassemble your device, follow these instructions in reverse order.