



# JBL Pulse 3 Outside Casing Replacement

This guide will show you how to take off the outside casing of the JBL Pulse 3 for replacement.

Written By: Kaitlyn Greenfield



## INTRODUCTION

The outside casing of the JBL Pulse 3 is the top portion of the device above the speaker grill. In order to take this part off the device, you will need to have removed the speaker grill first. For more information regarding troubleshooting, please visit our [Troubleshooting Page](#).

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)



### PARTS:

- [JBL Pulse 3 Outside Casing](#) (1)

## Step 1 — Speaker Grill



- Lay the JBL Pulse 3 on its side as shown in the picture.
- Use a plastic opening tool to lift the top right corner of the speaker grill. A small amount of force is necessary to remove the grill.

## Step 2



- Repeat step 1 for bottom right corner of speaker grill.

## Step 3



- After pulling the right side of the grill off, place thumb underneath grill as shown in the picture.
- Lift and pull straight out to pull grill off the posts.

## Step 4



- Repeat steps 1-3 for the left side of the speaker grill on the JBL Pulse 3. The speaker grill should now be completely removed from the JBL Pulse 3.

## Step 5 — Outside Casing



- Use a Phillips #00 screwdriver to remove the six black 6mm screws on the inside of the top of the bottom section.

## Step 6



- Turn the JBL Pulse 3 right-side up and unscrew the top ring of the device. A small amount of force and/or a cotton cloth may be necessary to remove this piece.

## Step 7




- Remove the six 5mm screws on top of the JBL Pulse 3 with a Phillips #0 screwdriver.

## Step 8



- Pull off the top disc of the JBL Pulse 3.

## Step 9

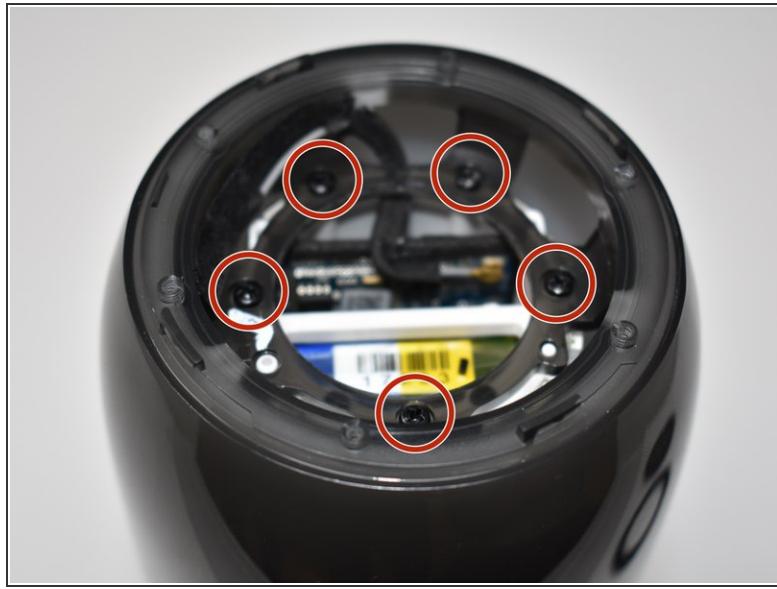

- Remove the five 7mm screws on the inside of the JBL Pulse 3 with a Phillips #1 screwdriver.

## Step 10



- Peel off black, taped-on electrical lead from the inside side of the JBL Pulse 3.

## Step 11



- Pull the top section of the JBL Pulse 3 up. The outside casing to the JBL Pulse 3 should now be removed.

To reassemble your device, follow these instructions in reverse order.