



Keurig 2.0-400 LCD Screen Replacement

After reading this guide, you will be able to replace the LCD screen that displays the information about the coffee being made.

Written By: Alec Jamosmos



INTRODUCTION

In this guide, you will replace the LCD screen. This is necessary if the screen is faulty and does not display information properly.

TOOLS:

- Metal Spudger (1)
- Phillips #1 Screwdriver (1)


Step 1 — LCD Screen



- Open the K-Cup Chamber Housing Lid by lifting up the silver handle below the LCD screen.

(i) This is the part of the brewer you open to place a K-Cup inside.


Step 2

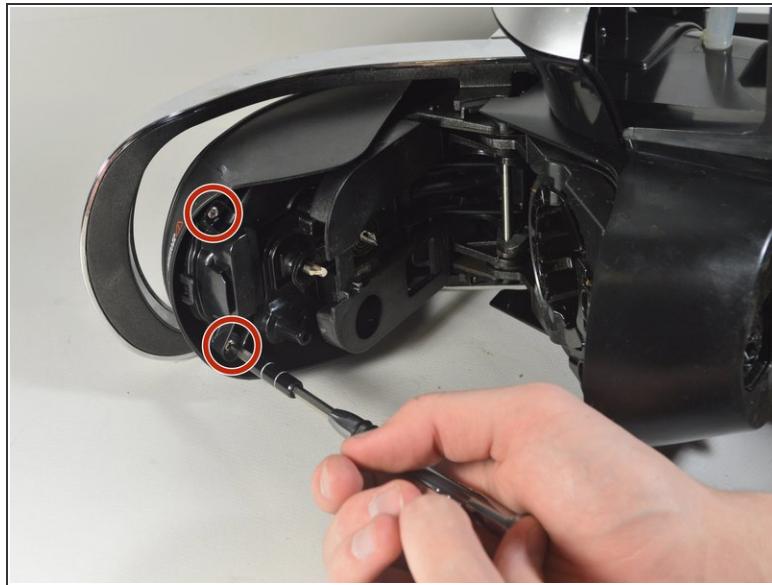

- Place the Keurig on its side.
- Remove the two 140mm screws located on the underside of the Chamber Lid using the Phillips #1 screwdriver.
- Remove the top black housing that surrounds the screen.

This document was generated on 2019-09-16 02:35:31 PM (MST).

Step 3

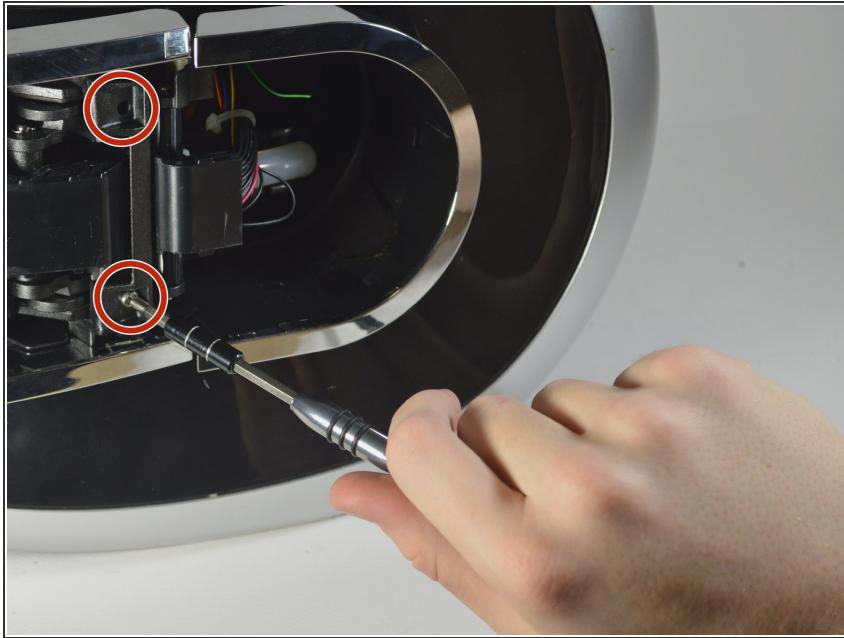

- Using the Phillips #1 screwdriver, remove the two 140mm screws connecting the silver handle to the top of the Keurig.


Step 4



- Pull out the front silver handle from the top of the brewer.

i This will further expose the LCD screen.


Step 5

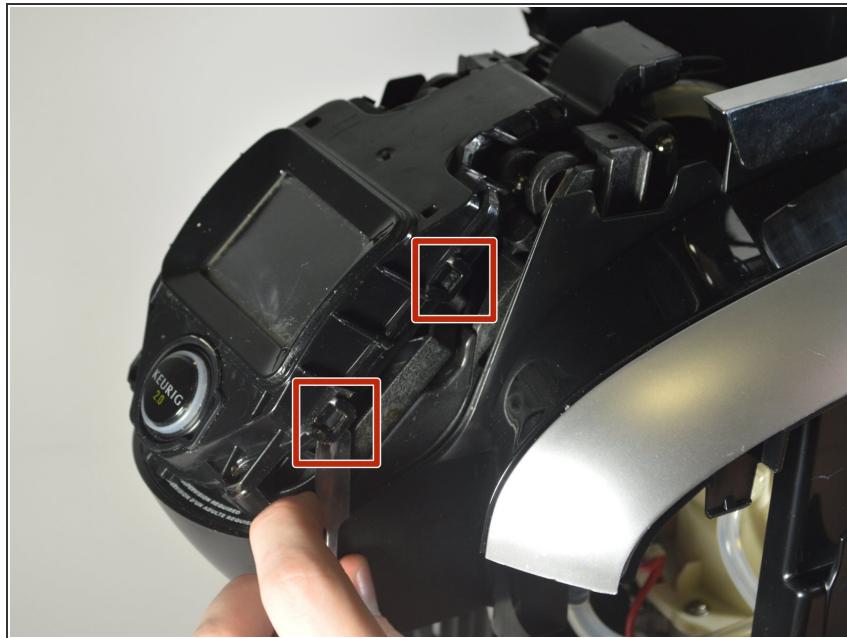

- Using the metal spudger, pry off the snaps holding the LCD screen panel to the brewer.

⚠️ Warning: These snaps are very delicate and can easily be broken. Practice caution as you perform this step.


Step 6

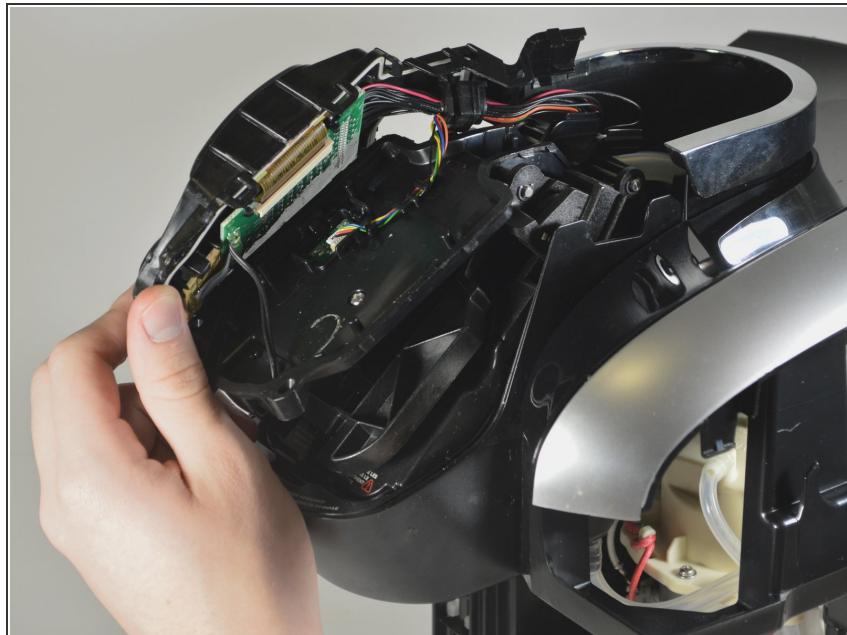

- Remove the top black housing by lifting it up.

ⓘ This will expose the frame of the Keurig connecting to the LCD screen.


Step 7

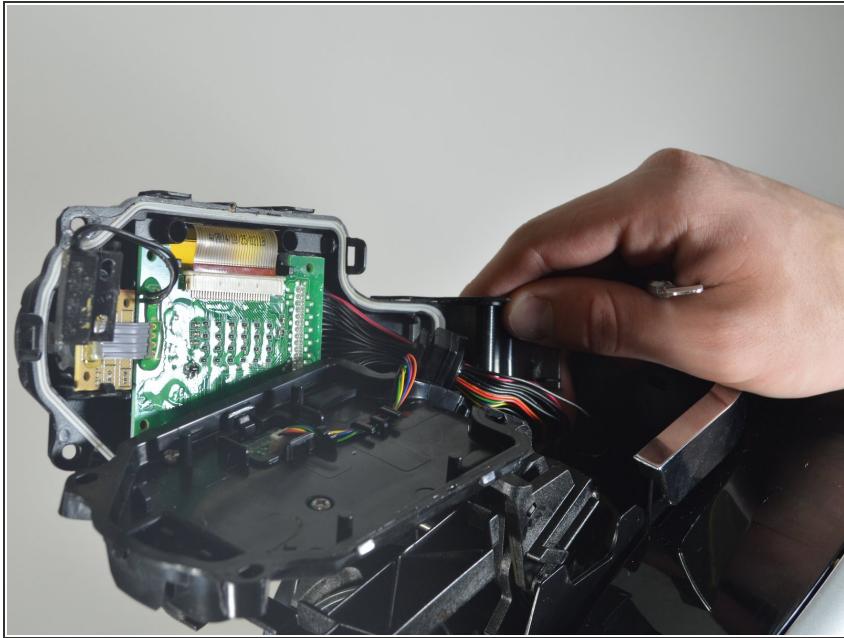

- Remove the black latch with the black wire connecting the front end of the panel to the frame.

(i) The front end of the panel will now be free.

Step 8

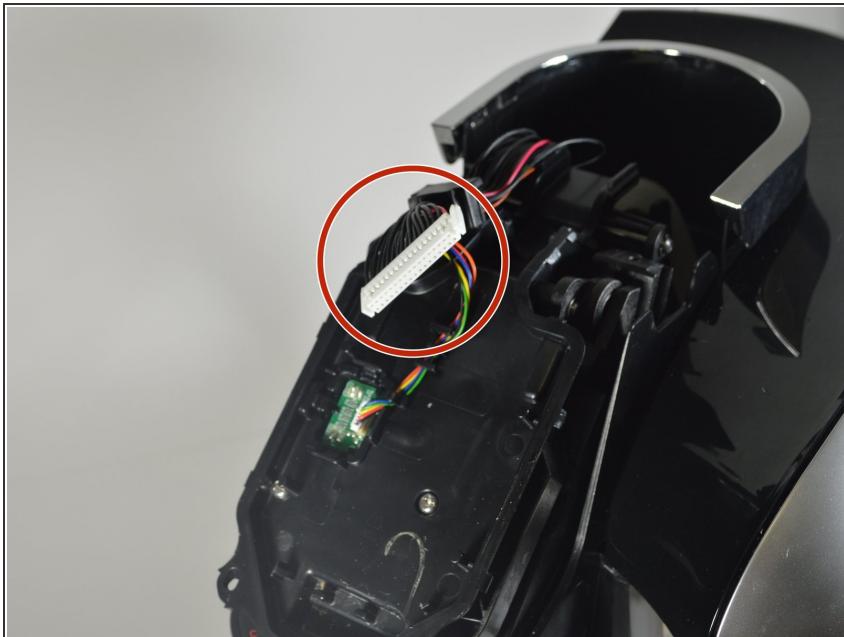

- On the bottom of the panel, remove the white tab that connects the wires of the circuit board to the LCD screen
 - To remove the tab, squeeze in on the sides of it as you pull it out.
- Remove the touch screen panel from your device.

To reassemble your device, follow these instructions in reverse order.