



Kindle 3 Battery Replacement

This guide will walk through the steps to replace a battery in a Kindle 3.

Written By: Allison Monahan



INTRODUCTION

This guide will teach users how to pry open the back cover, and remove screws in order to access the battery.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Kindle 3 Replacement Battery](#) (1)

Step 1 — Battery



- Starting just above one of the page-turning buttons, pry open the back of the device using a pry tool, or similar plastic opening tool.

⚠ Do not attempt to pry directly on the page turning buttons. This will damage the buttons.

ⓘ If you are having trouble getting an initial gap to pry from, run the flat edge of the pry tool along the front-to-back plate seam until it slips into a gap.

⚠ Don't insert your tool too far, or you may damage some of the orange flex cables near the edges of the device.



★ When reinstalling the back cover, slide the bottom edge into place first, and then press up the sides and along the top until all the clips snap into place.

Step 2



- Unscrew the two silver 4 mm Phillips screws securing the battery connector.

Step 3

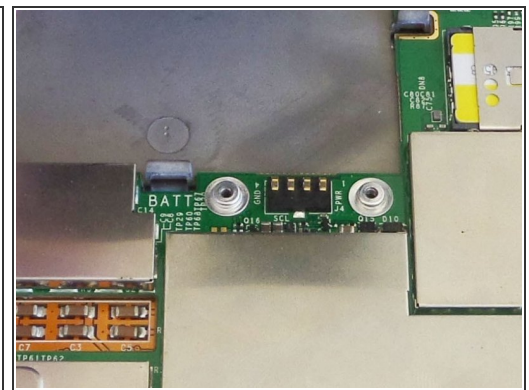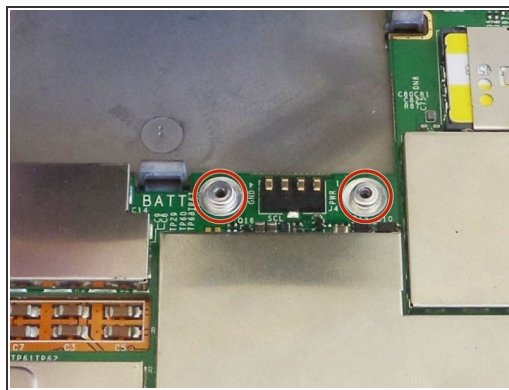

- Lift battery out of housing starting at the end that was secured by the screws.
- ☑ Two silver washers beneath the battery connector may come loose—don't lose them.
- ☑ When reinstalling the battery, first slide the bottom edge into place and make sure the two retaining tabs are secure, before screwing down the connector.

To reassemble your device, follow these instructions in reverse order.