



Kindle Voyage Screen Replacement

Replace the cracked or broken screen on your Kindle Voyage.

Written By: Sean Yap




INTRODUCTION

Everyone has dropped an electronic device and felt the sinking feeling of picking it up only to find a shattered screen. This guide shows you how to replace the screen on your Kindle Voyage should that ever happen.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [64 Bit Driver Kit](#) (1)

Step 1 — Back Panel

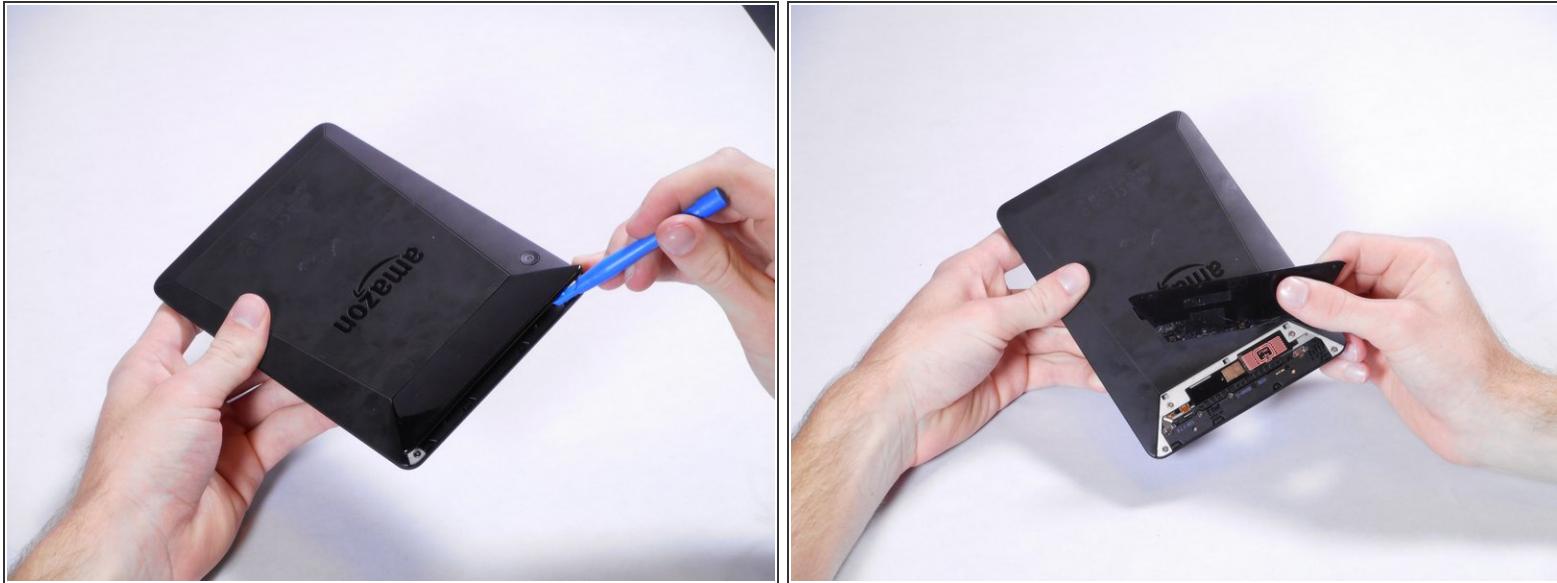

- Insert a plastic opening tool between the plastic panel shown on the device.
- Use the tool to pry the plastic away from the device.

(i) There will be adhesive holding this piece of plastic to the device. You may have to pull pretty hard to get it separated.

Step 2




- Use an aluminum driver attached with a Phillips head size #00 to remove the four 3mm screws shown in the picture. For reassembly, note that the top two and bottom two screws are different sizes.

Step 3



- Once the screws are removed, the back panel can slide off the device.

Step 4

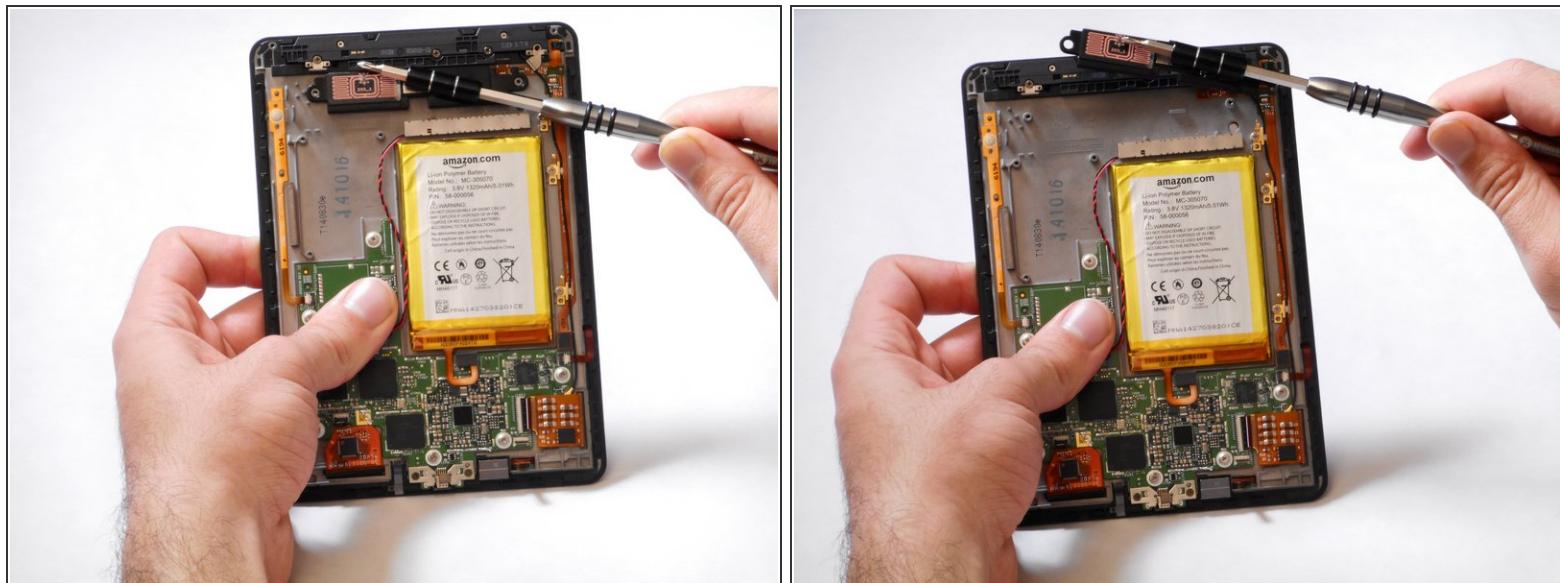

- Remove the magnetic component with the magnetic head of the aluminum driver.

Step 5 — Screen



- Use a spudger to push up the black tabs on all three ribbon cables.
- Once the tabs are open, gently pull the ribbon cables out of their housings.

Step 6



- Insert a plastic opening tool into the small crack between the screen and the front panel.
- Work your way around the screen until you can pry it all the way open.

(i) There is adhesive holding the screen to the front panel, so you will need to apply some pressure to completely separate the two.

Step 7



- Once the screen is free of the front panel, pull the loose ribbon cables through the openings in the bottom of the screen.
- Lift the screen off of the front panel.

To reassemble your device, follow these instructions in reverse order.