




# LG V30 Plus Display Assembly Replacement

Use this guide to remove the display of your LG V30 Plus.

Written By: Geoffrey Smith

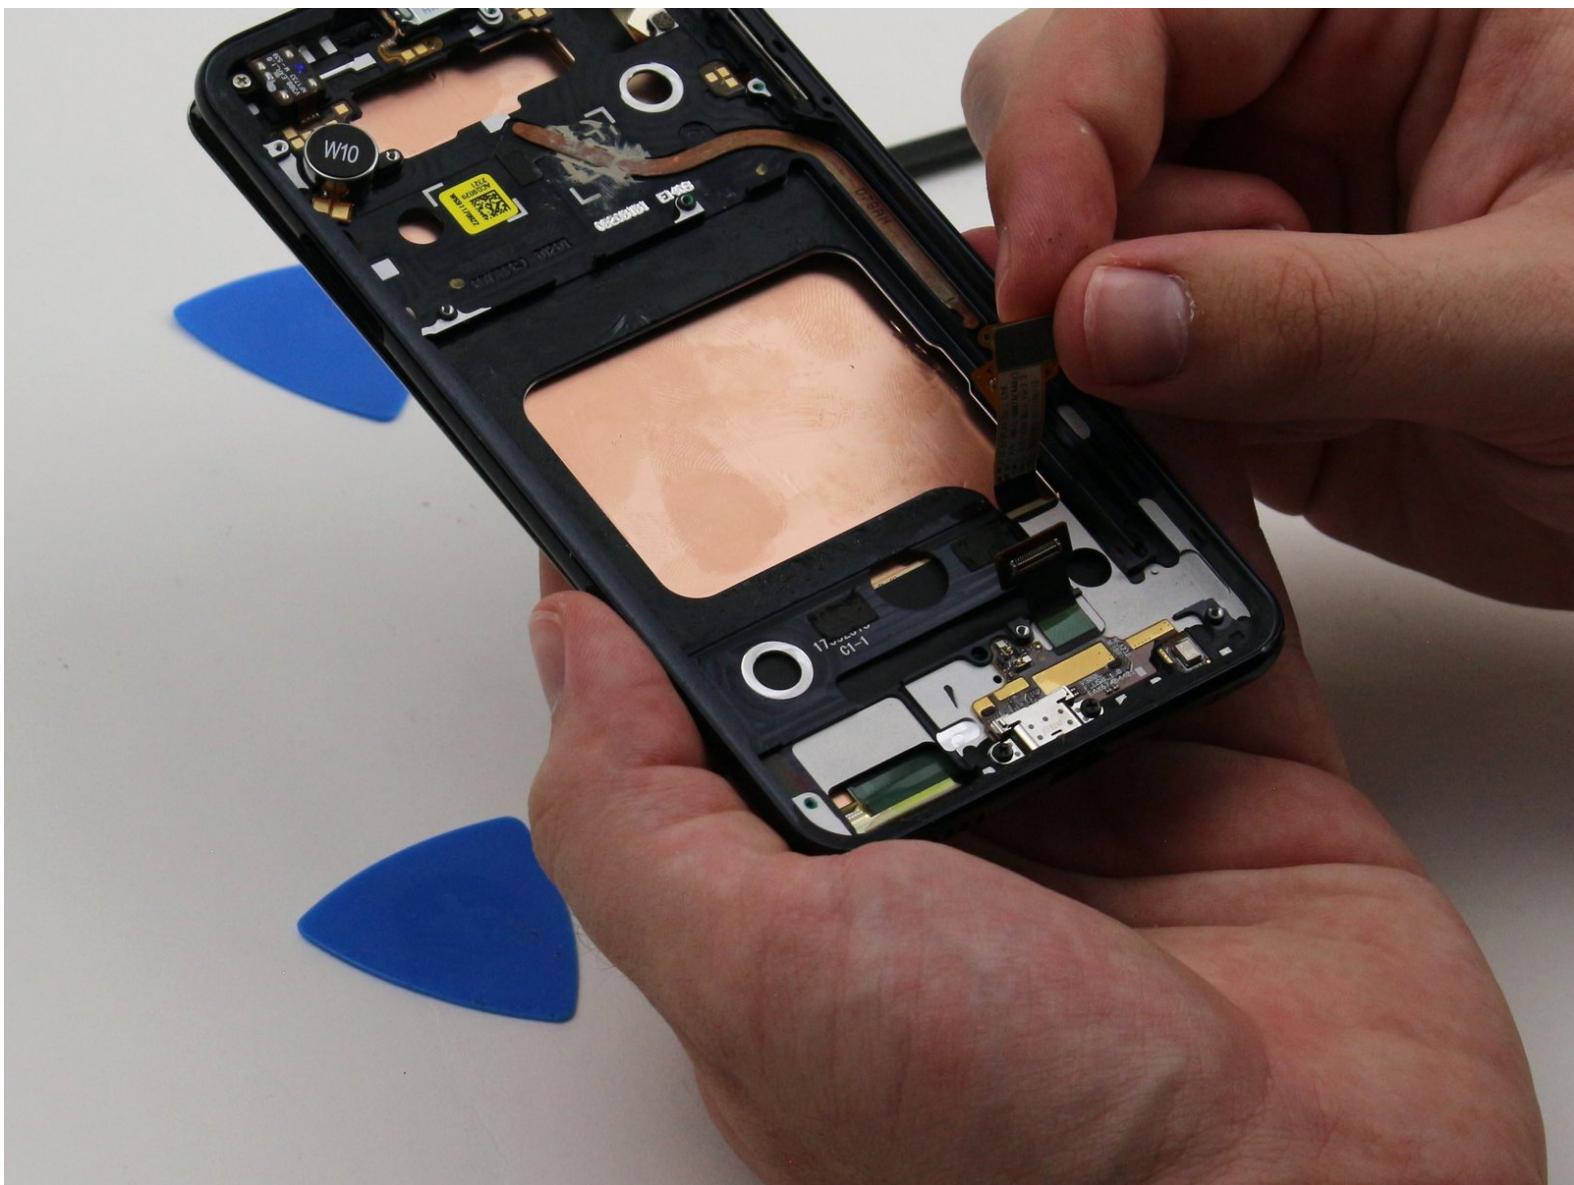

## INTRODUCTION

Phone screens are prone to crack when dropped from an elevated surface. Use this guide to remove the display assembly of your device.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [iOpener \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [Suction Handle \(1\)](#)


## Step 1 — Rear Glass



- Use a pair of iOpeners by heating them in a microwave and placing the hot pads on the edges of the phone.
- Allow to sit for 1-2 minutes to heat up the adhesive.

*(i)* A heat gun may need to be used if you have trouble separating the backing in the next step.

## Step 2

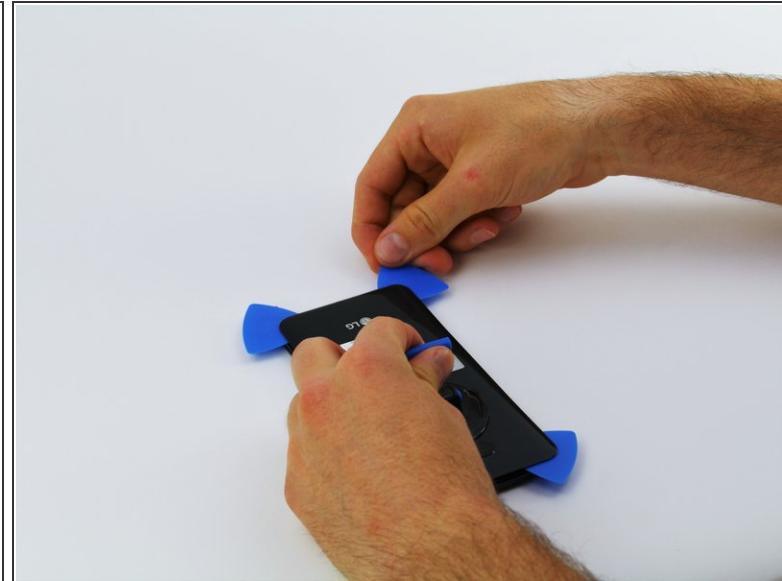

- Insert an Opening Tool into the seam between the rear glass and side of the phone.
- Pry the glass off just enough to insert an Opening Pick.
- Slide the Opening Tool around the edges of the device, placing Opening Picks regularly.

## Step 3




- Once all edges of the device are lifted free, use a Suction Handle to gently pull the rear glass off the device.

## Step 4 — Motherboard




- Remove the ten 4mm screws using the Phillips #00 Screwdriver.

## Step 5

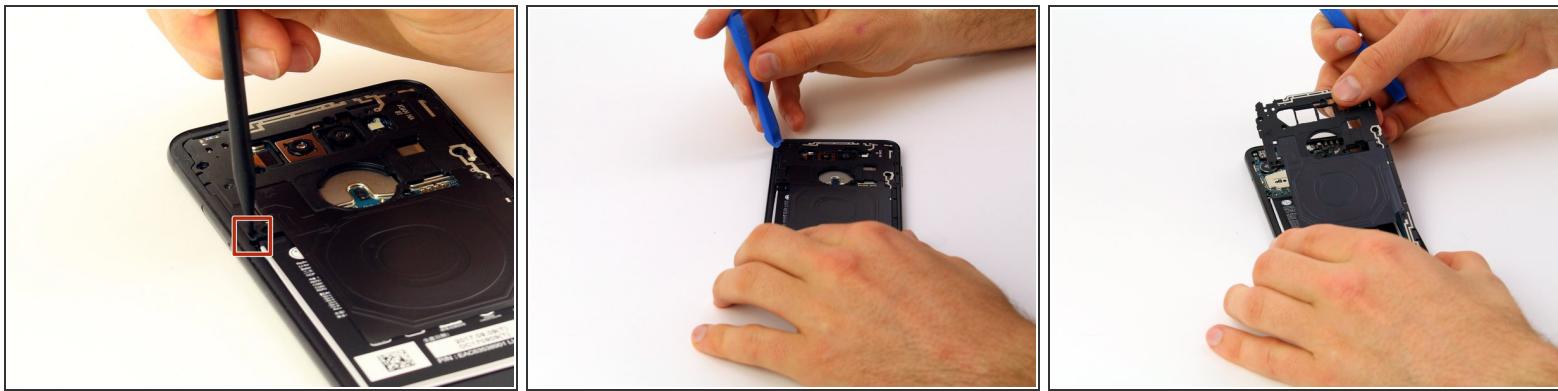

- Gently push down on the small black tab with a Spudger to release the protective board.
- Slide an Opening Tool between the phone and the protective board and slide along the edges of the phone to unclip it.
- Carefully wiggle the board back and forth while gently pulling to unclip the last attachment point.

## Step 6

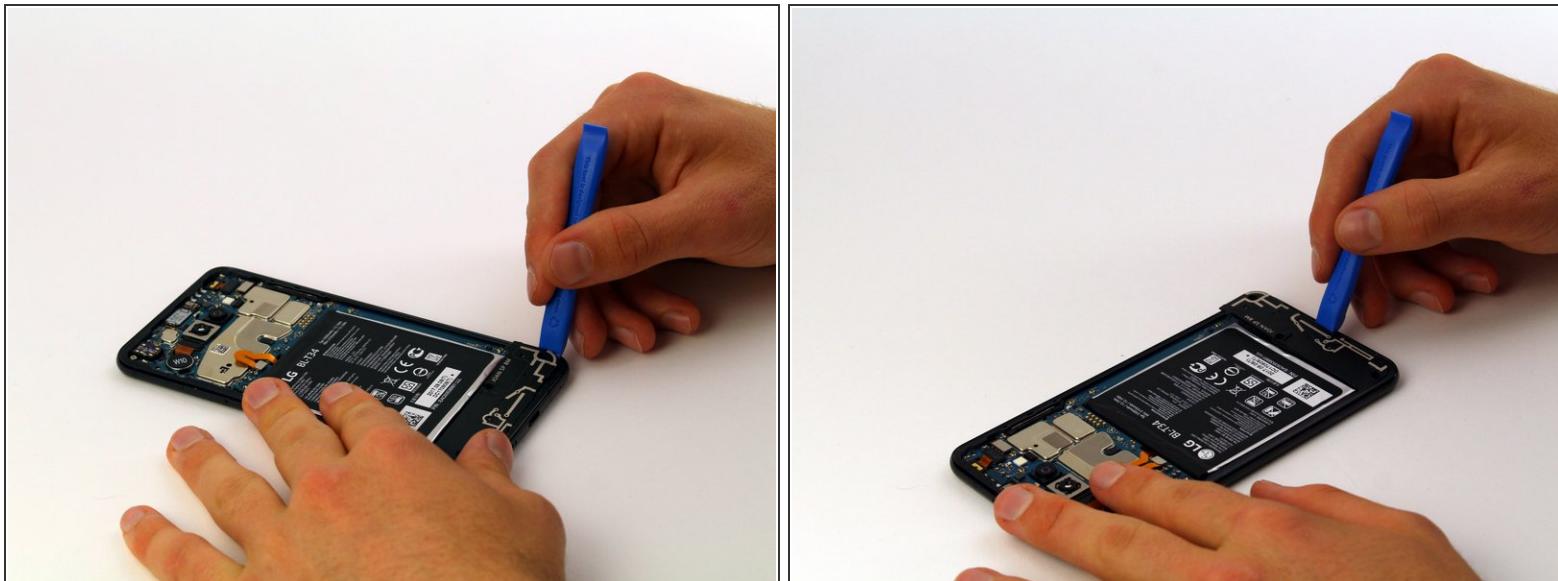

- Slide an Opening Tool between the lower protective board and the phone to unclip.
- Slide the tool along the remaining edges of the protective board until it pops off.

## Step 7



- Gently pry each visible ribbon cable away from the motherboard to disconnect them.

## Step 8




- Gently remove the motherboard from the phone.

## Step 9 — Battery




- Use a Spudger to get between the battery and the phone and pry each edge of the battery away from the board.
- There may be a strong adhesive under the battery, so work your way around the battery carefully and slowly.
- Insert Opening Picks if needed to keep the battery elevated.

## Step 10 — Front-Facing Camera

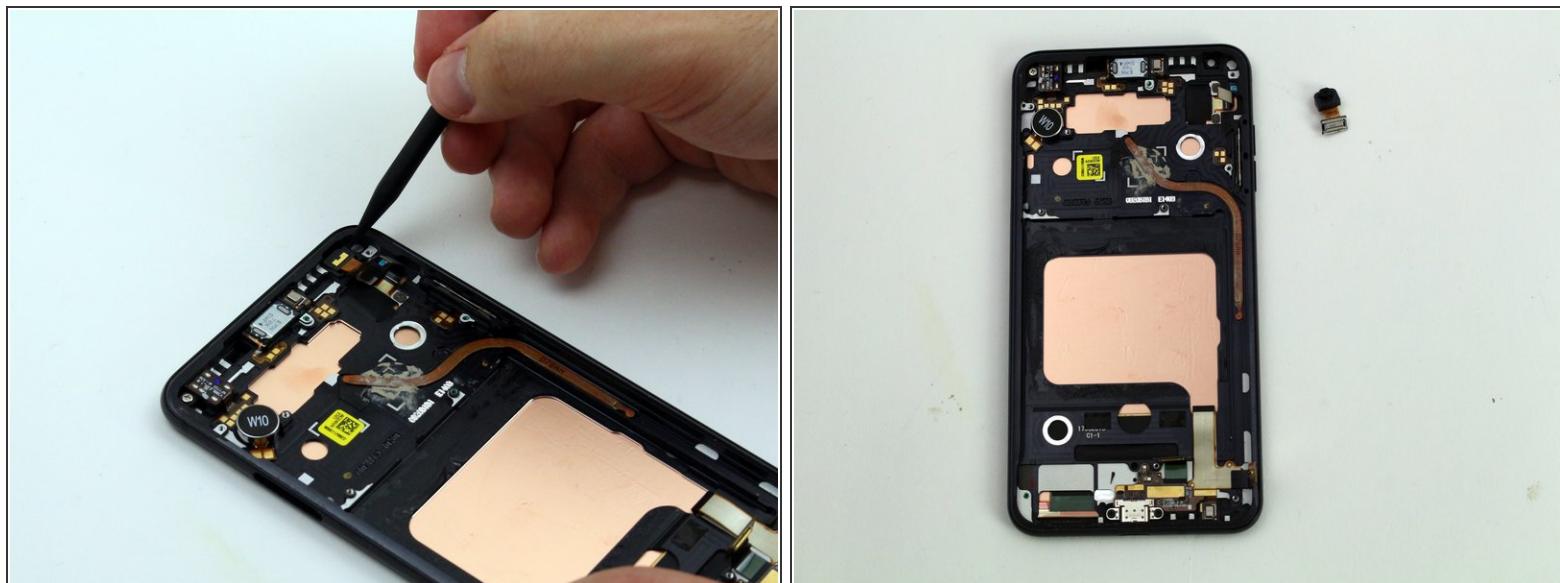

- Use a Spudger to pry away the front-facing camera from the board.

## Step 11 — Display Assembly

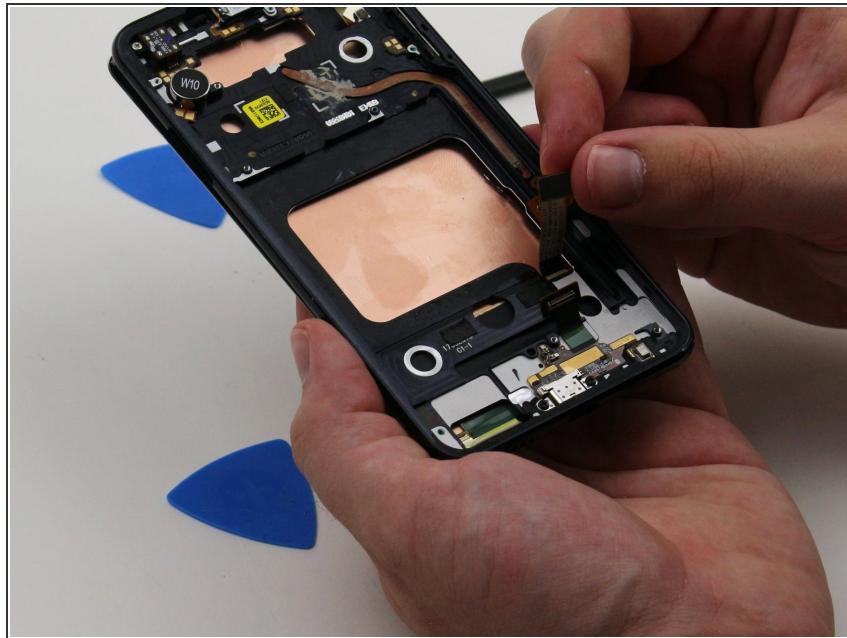

- Pull the ribbon cable attached to the screen away from the board and make sure it is bent upwards and out of the way.

## Step 12



- Warm up a pair of iOpeners in the microwave for 1-2 minutes.
- Place the iOpeners on the edges of the phone and wait a couple of minutes for it to heat up the adhesive.

**i** A heat gun may be necessary to heat the adhesive if the screen refuses to separate in the next step.

## Step 13



- Insert an Opening Tool between the metal sides of the phone and the front glass.
- Slide the Opening Tool around the display, placing Opening Picks as necessary.
- Use a Suction Handle or hand to remove the screen from the body of the phone.

To reassemble your device, follow these instructions in reverse order.