




Lenovo IdeaPad 130-15AST Battery Replacement

This guide will show the step-by-step process of how to replace the battery on the Lenovo IdeaPad 130-15AST.

Written By: Trever Resheske

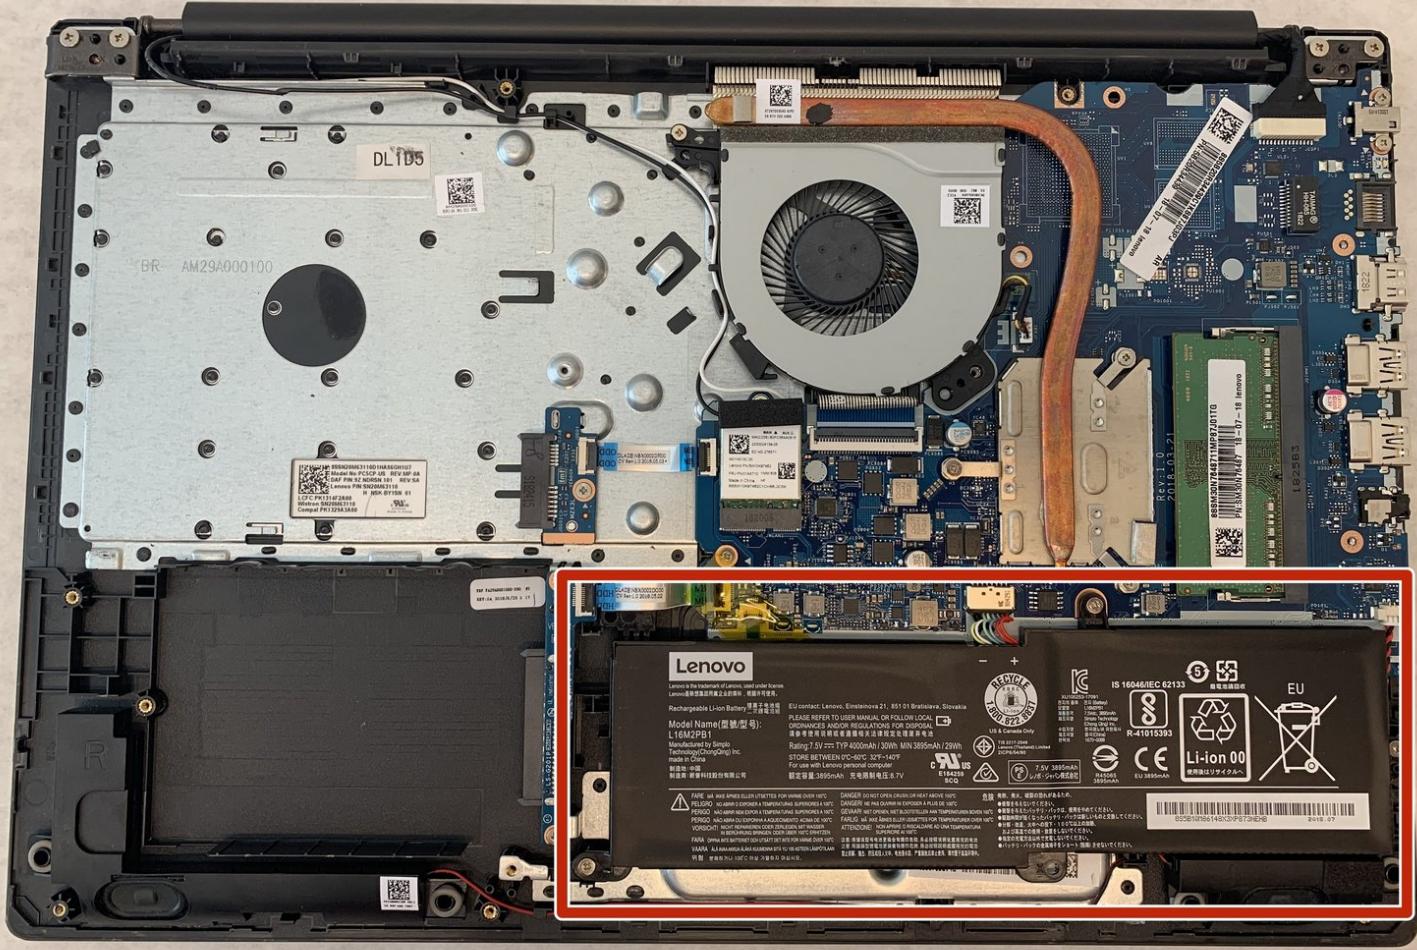

This document was generated on 2020-01-18 04:35:01 PM (MST).

INTRODUCTION

Use this guide to remove the battery from the Lenovo IdeaPad 130-15AST. The battery is a hardware component in the laptop which supplies power to the whole laptop. The battery will need to be replaced if you have confirmed that the battery cannot hold any power or charge. Reference the [Troubleshooting Page](#) to confirm your battery isn't charging. Follow the steps in the Replacement Guide carefully to remove the Battery safely and efficiently.

TOOLS:

- [Jimmy](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Prying and Opening Tool Assortment](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)


Step 1 — DVD/CD Optical Drive



⚠ Verify that the DVD/CD Tray is free of DVD's and CD's.


- Using a Phillips #00 screwdriver, remove one of the 6.0mm screws.

Step 2

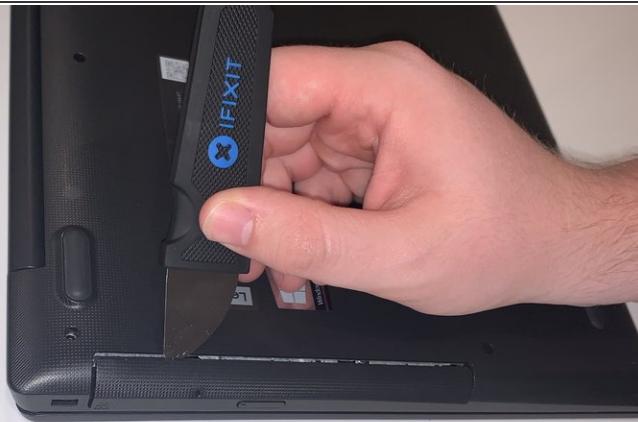

- Using the Jimmy Tool, gently pry the DVD/CD Drive away from the case of the laptop.

Step 3

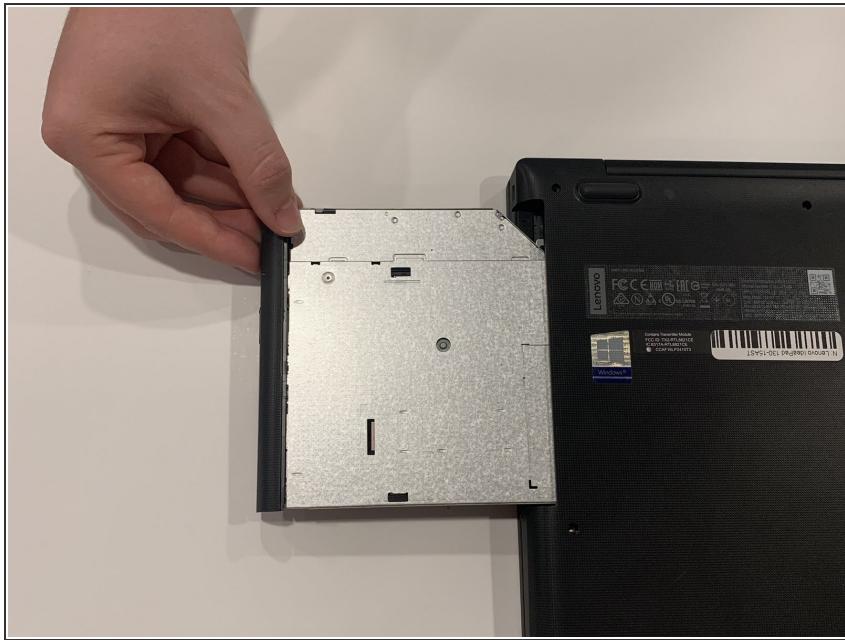


- Gently slide the DVD/CD Drive out of the laptop.

Step 4 — Battery



- ⚠ Before proceeding, make sure the computer is turned off and it is not connected to any power source.
- Using a Phillips #00 screwdriver, remove twelve of the 6.0mm screws.

Step 5

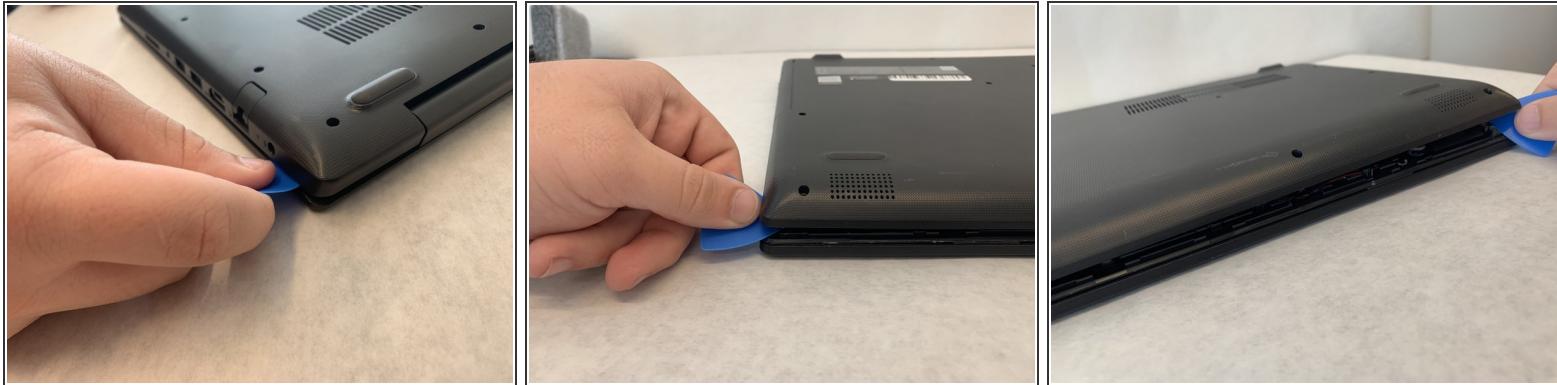


- ⓘ Do not try to completely remove this case without ensuring the entire case is free of connection points as this could crack or damage the case.
- Use a thin, flat edge to gently break the seal of the case.

Step 6



- ⓘ Make sure that the back panel is completely free from the laptop.
- Grab the sides of the back panel of the laptop with two hands. Then separate the panel from the laptop by lifting up.

Step 7

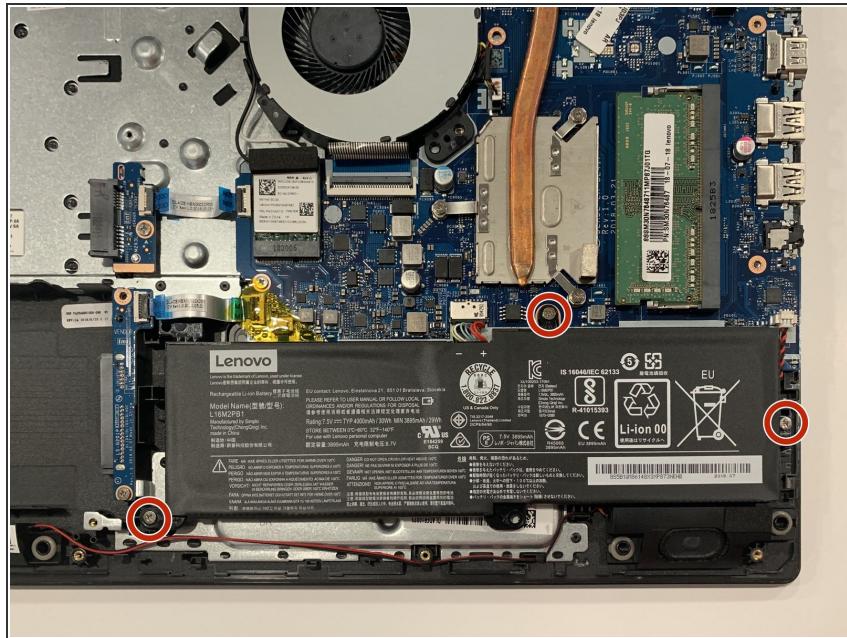

- Using a Phillips #0 screwdriver, remove three 6.0mm screws.

Step 8



- Using a pair of tweezers, remove the black plug which includes 8 wires.

Step 9



- Grabbing the sides of the battery with one hand, remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.