




Lenovo IdeaPad S400 Touch Fan Replacement

How to replace the fan in a Lenovo IdeaPad S400 Touch.

Written By: Max Hoyle

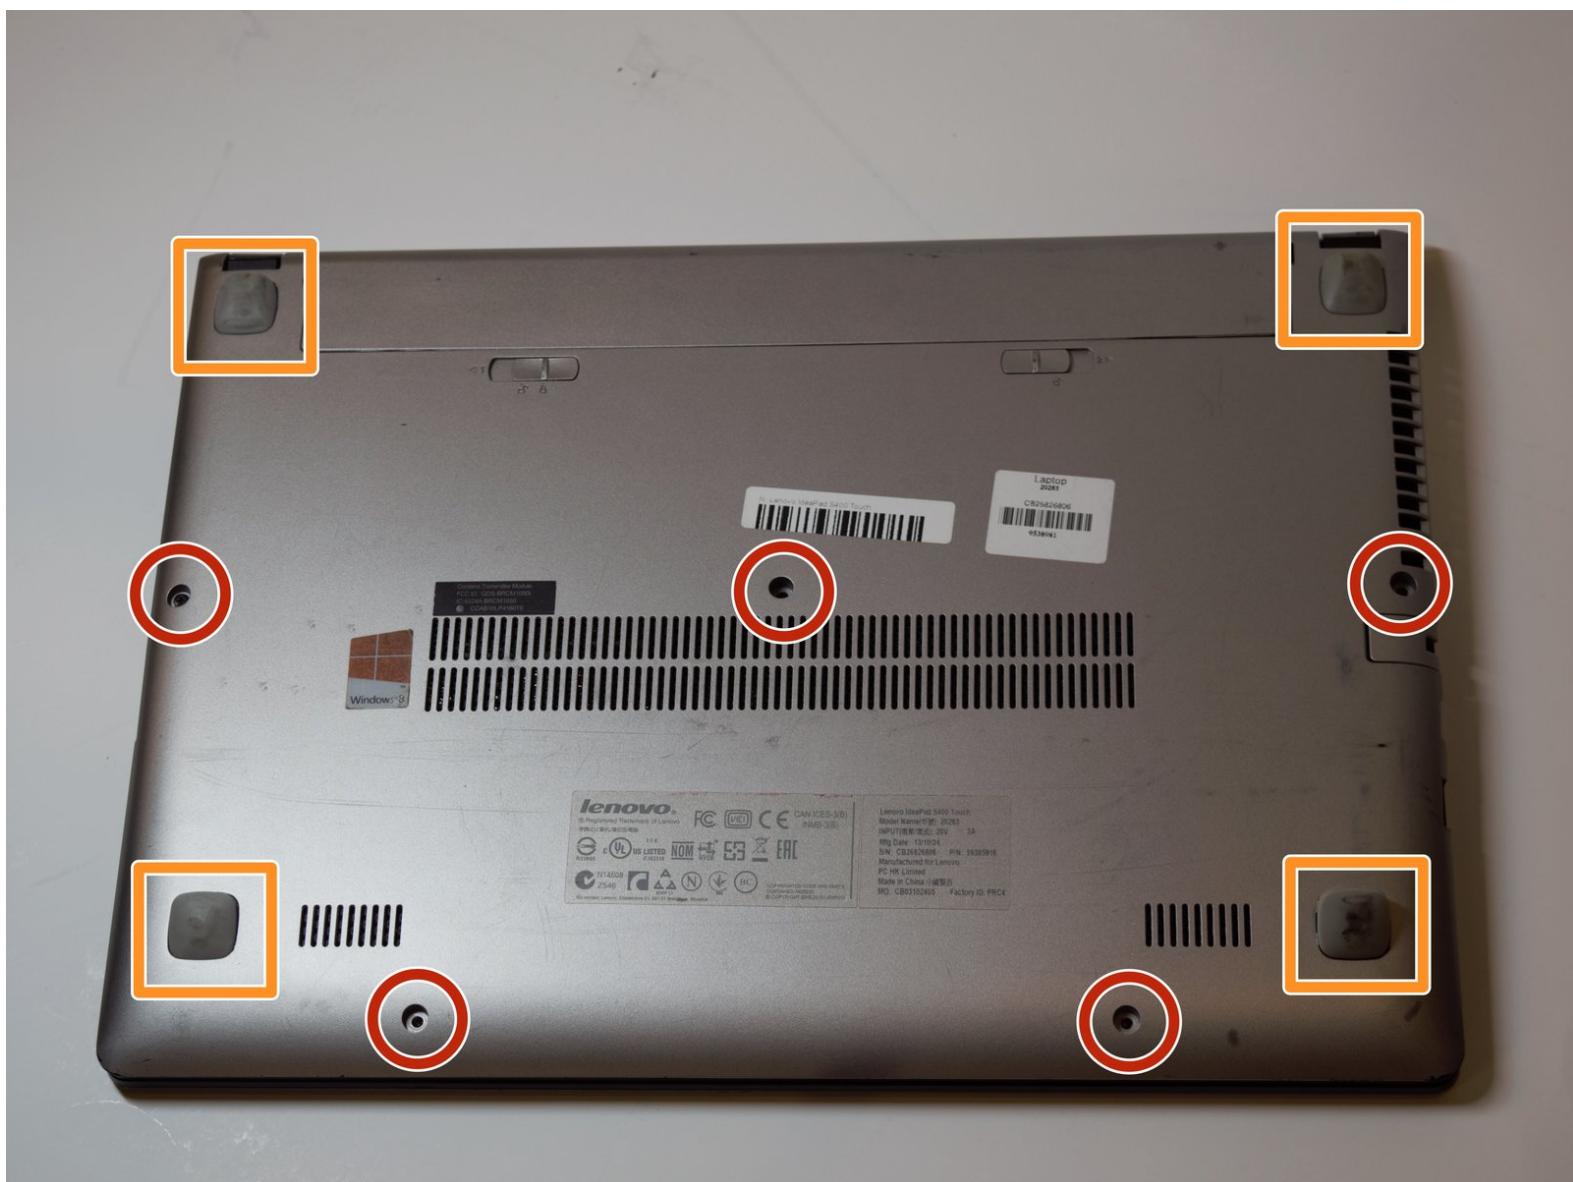


INTRODUCTION

To replace the fan, follow this guide.

TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Battery

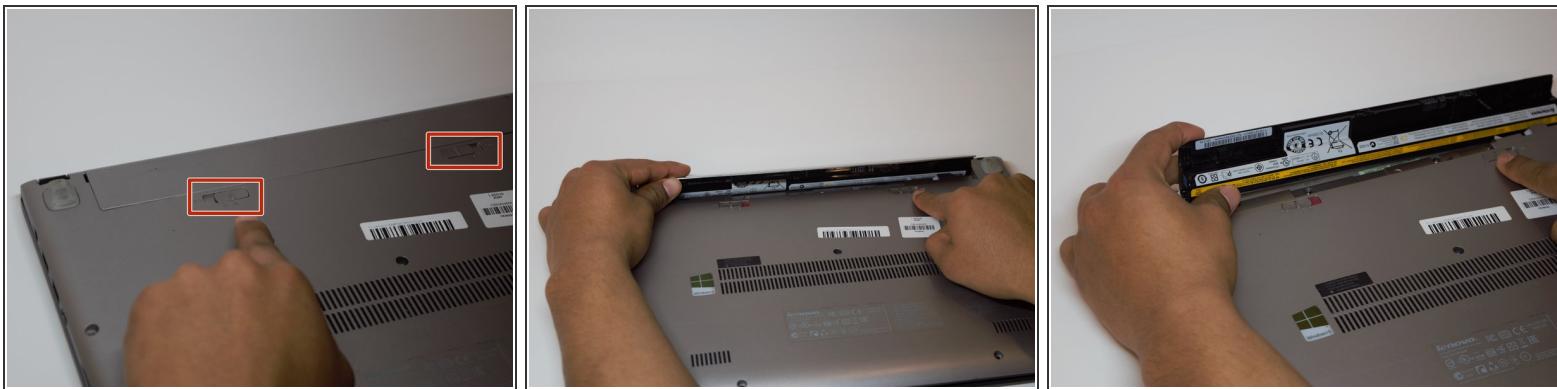


- Turn your computer over so the back is face up.
- Use your forefinger to unlock the two tabs located on the back. Slide the tabs until you see the red showing.
- The battery cover will then pop up allowing you access to the battery.

Step 2 — Fan



- Remove the five 6mm Phillips #0 screws from the back panel.
- Pull back the rubber tabs from the corners of the laptop backing to expose the screws.
- *(i)* The two tabs next to the battery flip toward the battery. The two remaining tabs flip down, away from the battery.
- Remove the four 4mm Phillips #0 screws that are underneath the rubber tabs.
- Remove the three 6mm Phillips #0 screws from under the battery.


Step 3

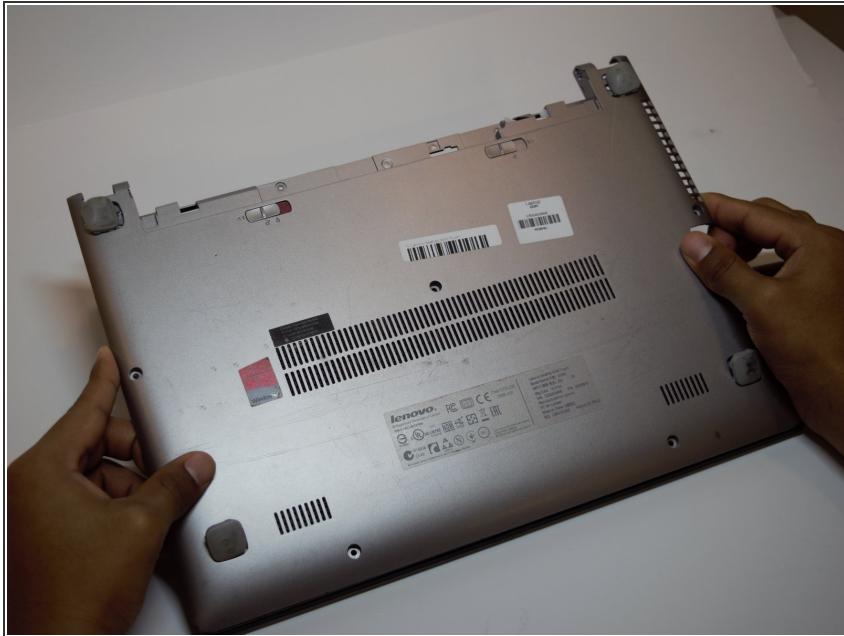

- Slide the back panel away to remove it.


i Don't be afraid to apply force when removing the back panel.

Step 4

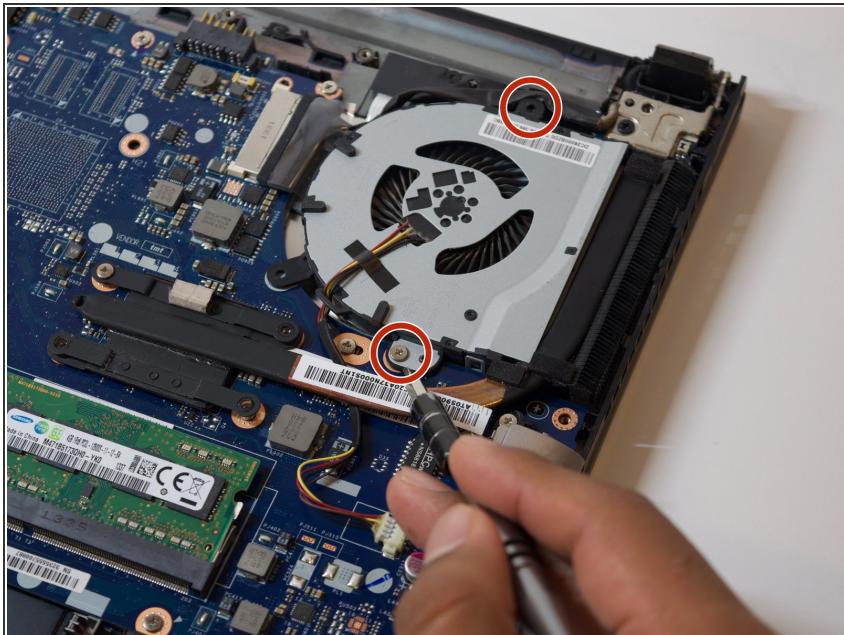


- Remove the two 5mm Phillips #0 screws holding the fan down.

Step 5

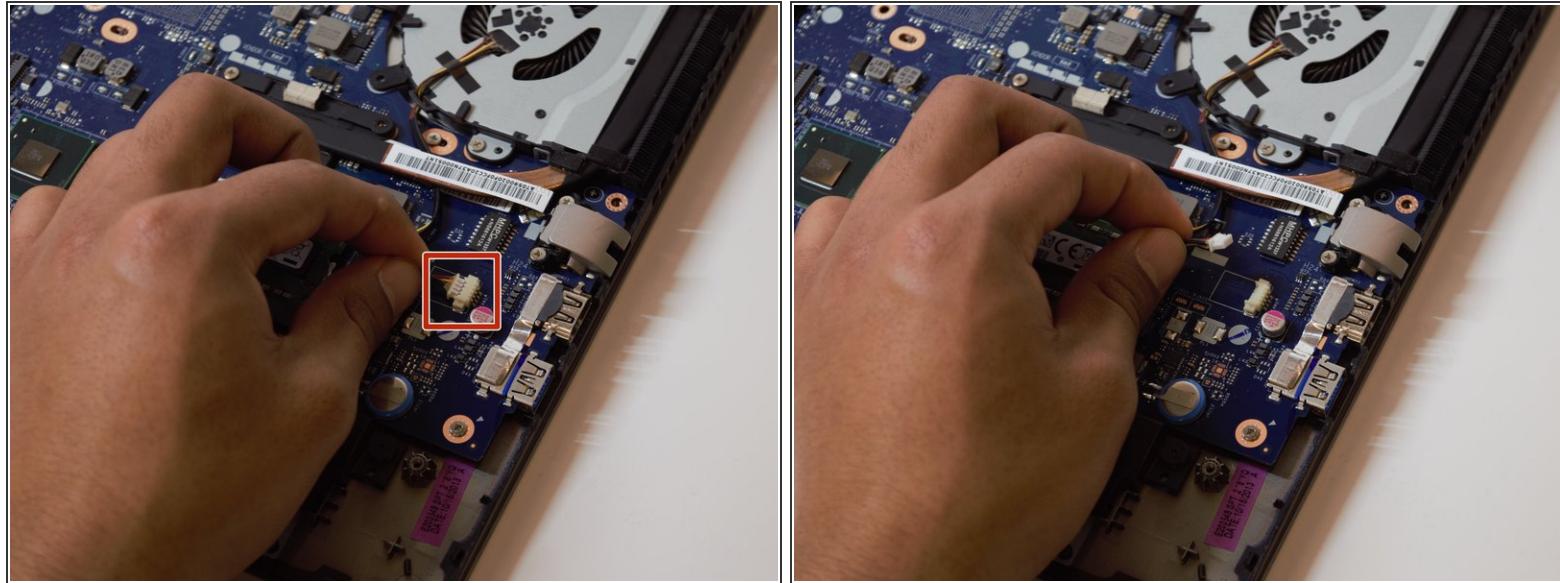

- Unplug the fan's power supply cord.

Step 6

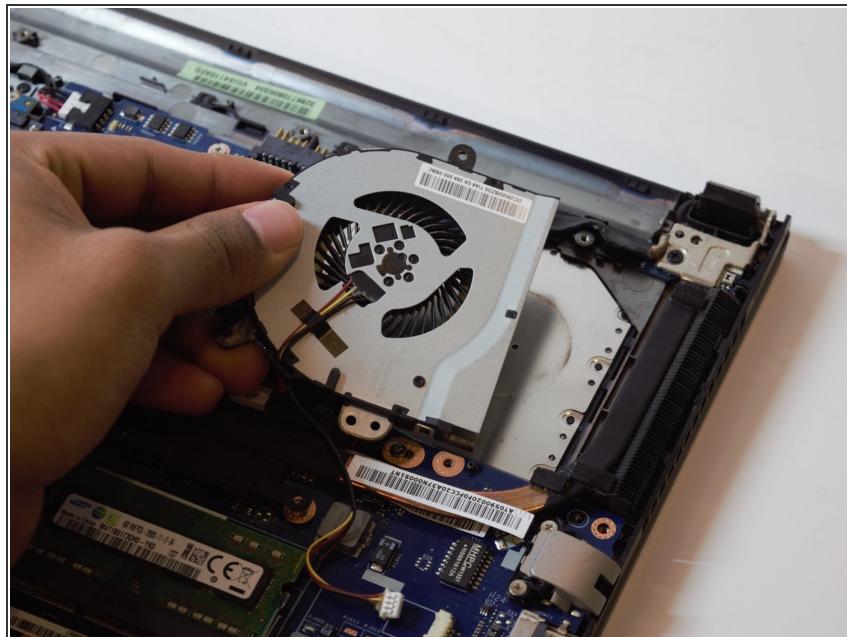

- Pull the fan out.

To reassemble your device, follow these instructions in reverse order.