



Lenovo IdeaPad U430 Touch Screen Replacement

Replace the Touch Screen for a Lenovo IdeaPad U430 Touch

Written By: Patrick Ripkey



 **TOOLS:**

- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Heavy-Duty Spudger \(1\)](#)

Step 1 — Bottom Cover




- Power off your computer before you begin.
- Find and remove the 10 Phillips style body screws on the bottom of the laptop case.

Step 2



- Remove 2 screws, 1 located on the left hinge cover and one located on the right hinge cover.

Step 3

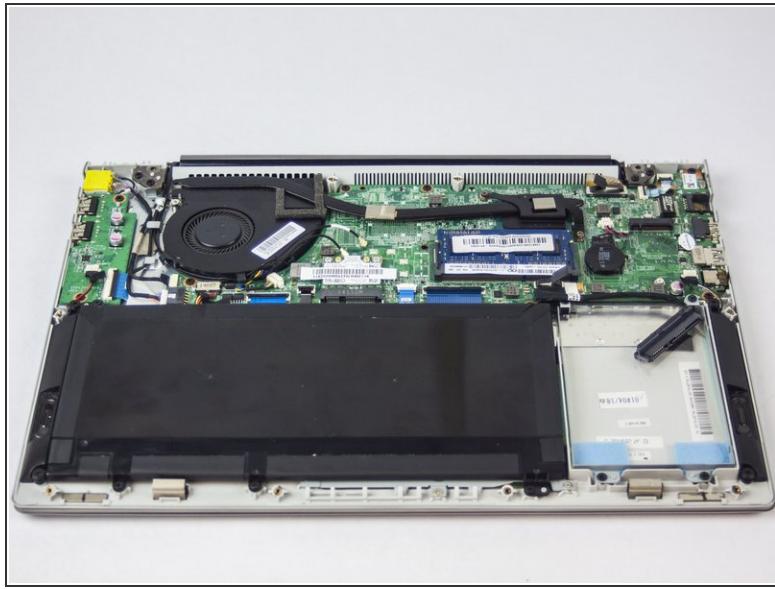

- Starting from the front, use a plastic opening tool to separate the bottom of the case from the body of the laptop.

Step 4 — Touch Screen




- Remove the four 4.5mm screws from the screen hinges.

Step 5



- Use the plastic spudger to lift and disconnect the antennae connectors from the motherboard.

Step 6

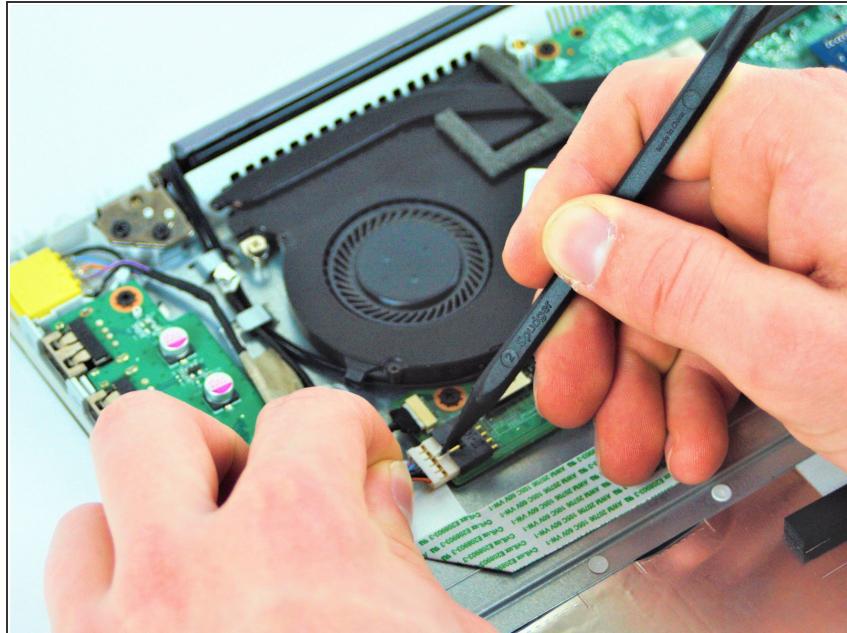

- Use fingers to remove the bundled cable connector for the front facing camera.

Step 7




- Use the plastic opening tool or spudger to lift and remove the flat top connector from the motherboard.

Step 8



- Carefully separate the bottom of the laptop from the screen.

Step 9

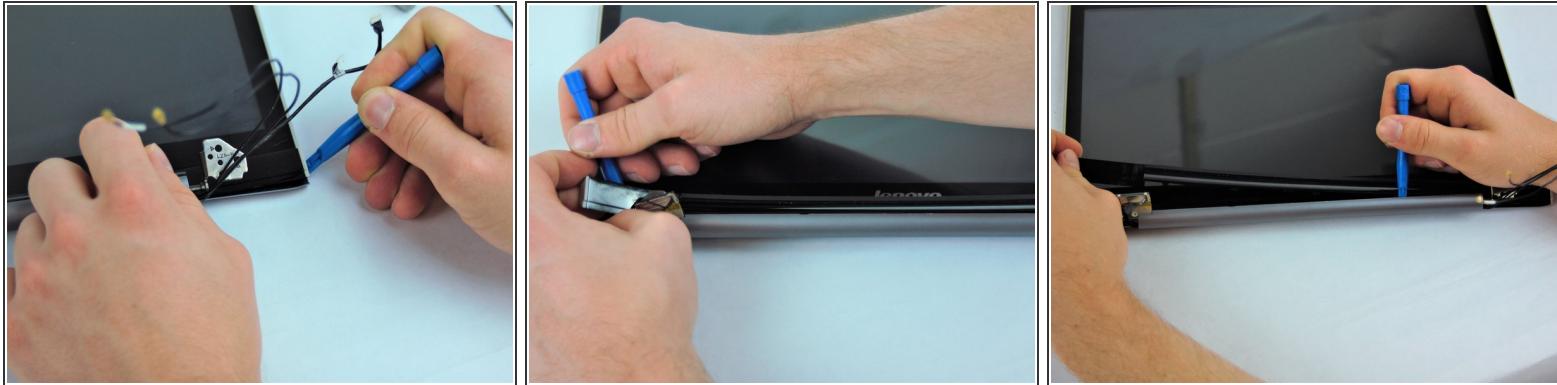

- Using the spudger and the plastic opening tool, carefully remove the plastic cover from the bottom of the screen.

 Plastic clips can be fragile, so take your time to carefully remove.

Step 10



- Using the PH1 Phillips head, remove the 3mm screws from the left side screen hinge on the screen assembly.
- Remove the hinge.

Step 11



- Using the PH000 Phillips head screwdriver, remove the three 2mm screws that are securing the bottom of the screen.

Step 12



- Using the plastic opening tool and the plastic spudger, work your way around the screen to release it from the case.

Step 13



- Remove the screen.

To reassemble your device, follow these instructions in reverse order.