



# Lenovo Yoga 3 11 Screen Replacement

This guide will help you successfully replace the screen on your Lenovo Yoga 3 11.

Written By: Miles Davis



## INTRODUCTION

Is nothing showing on your laptop's screen? Are you looking for a solution? Then you have come to the right place! This guide will help you remove and replace your laptop's screen.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [64 Bit Driver Kit](#) (1)

## Step 1 — Screen



- Use a plastic opening tool or the pointed end of a spudger to pry up the 2 rubber inserts in the bottom left and right corners of the screen.

## Step 2





- Remove the single silver 5 mm screw found beneath each rubber insert.

## Step 3




- Use the plastic opening tool to pry off the three plastic trim pieces.

## Step 4

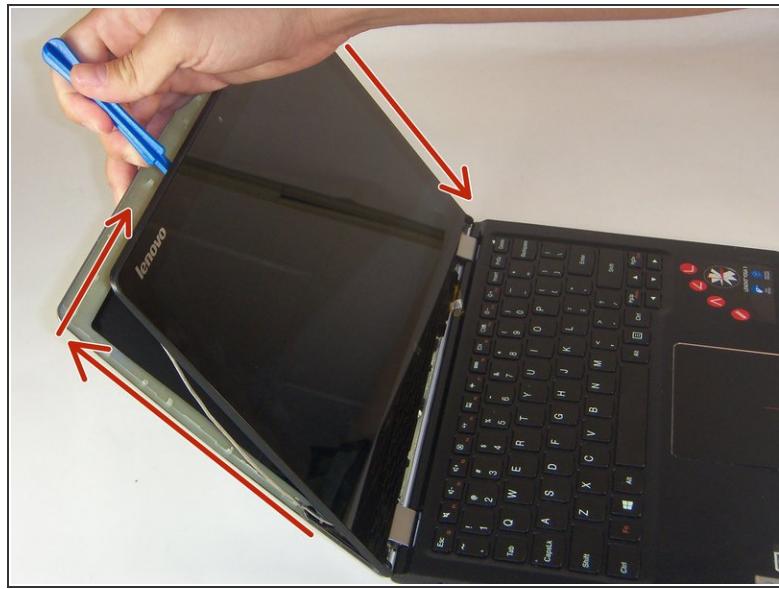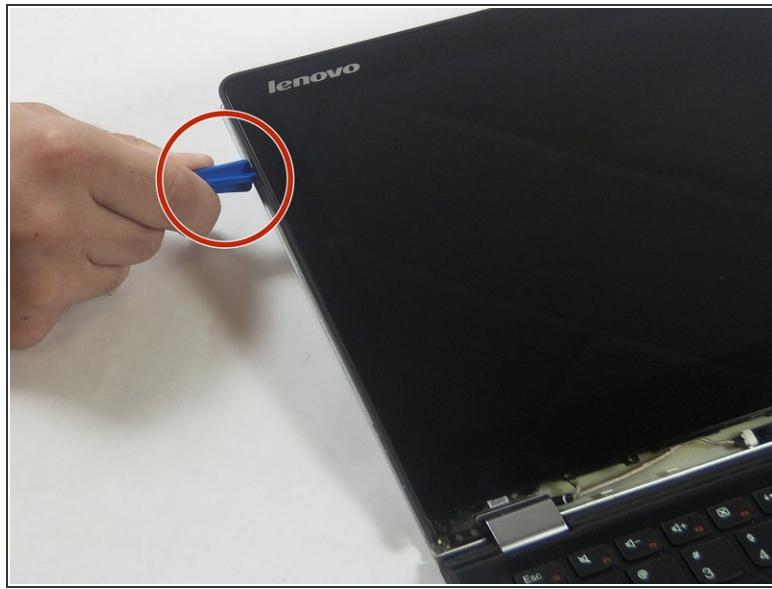



- Work the plastic opening tool in between bezel and the upper case.
- Once the plastic opening tool is wedged in between the two, work the plastic opening tool around the perimeter of the screen, separating the bezel from the display.

## Step 5

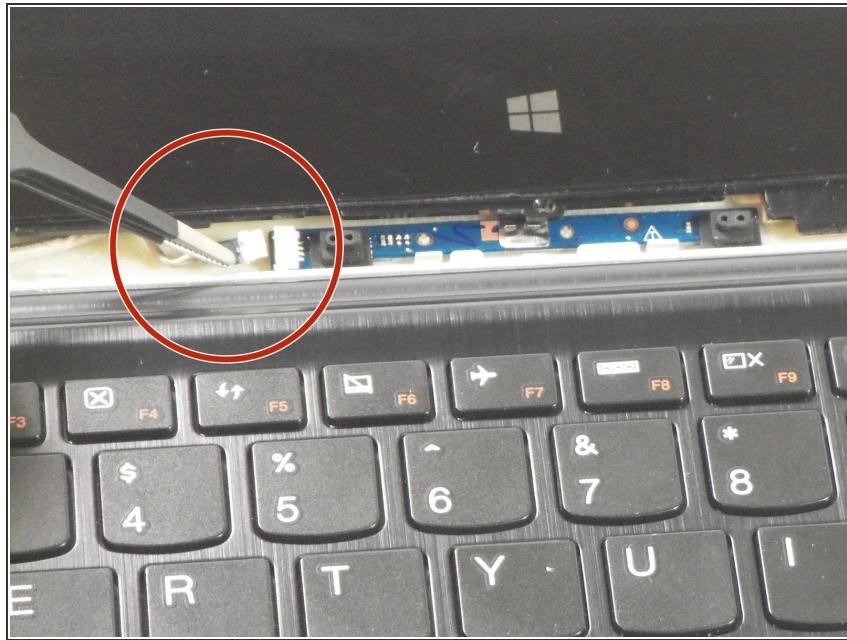

- Use the tweezers to unplug the screen connector in the middle.

## Step 6

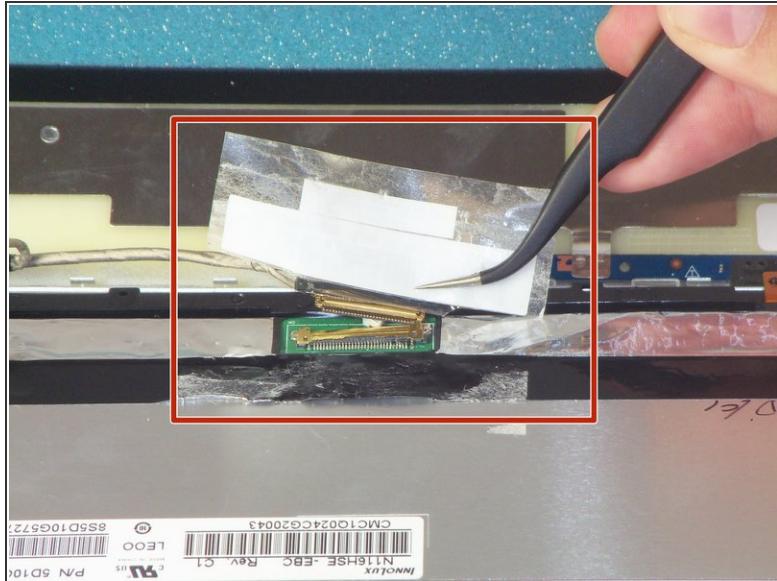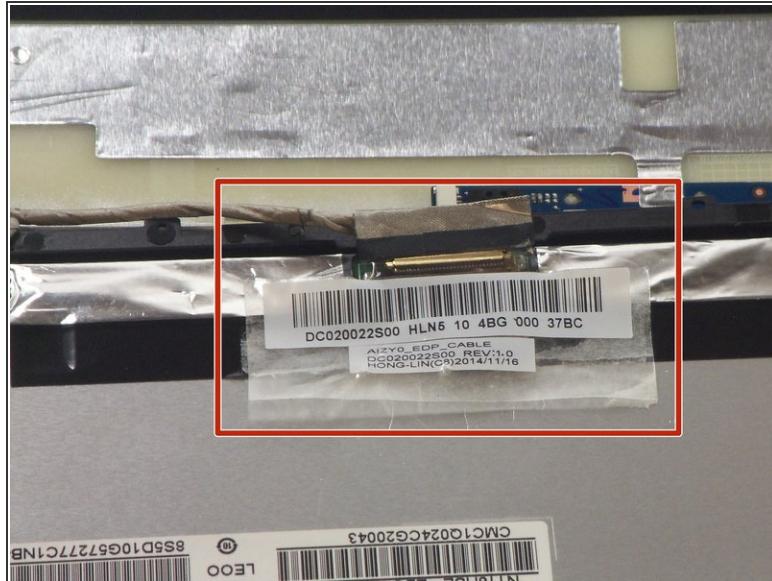


- Use the tweezers to pull the tape upwards. The tape will pull the wires up with it, separating the connection.

## Step 7




- Use the tweezers to follow the wires and move them out from under the plastic hooks.

## Step 8

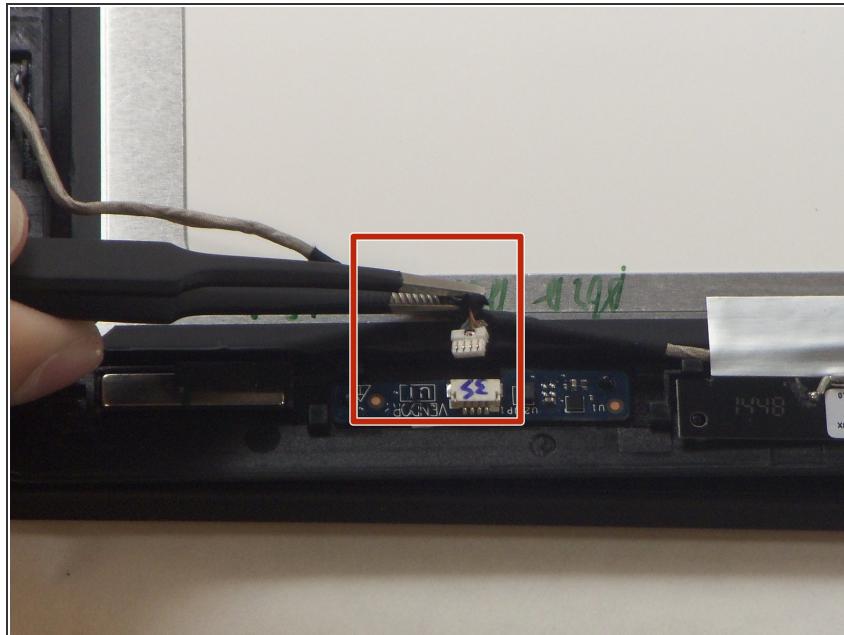


- Use the tweezers to unplug the connector near the top of the screen.

## Step 9

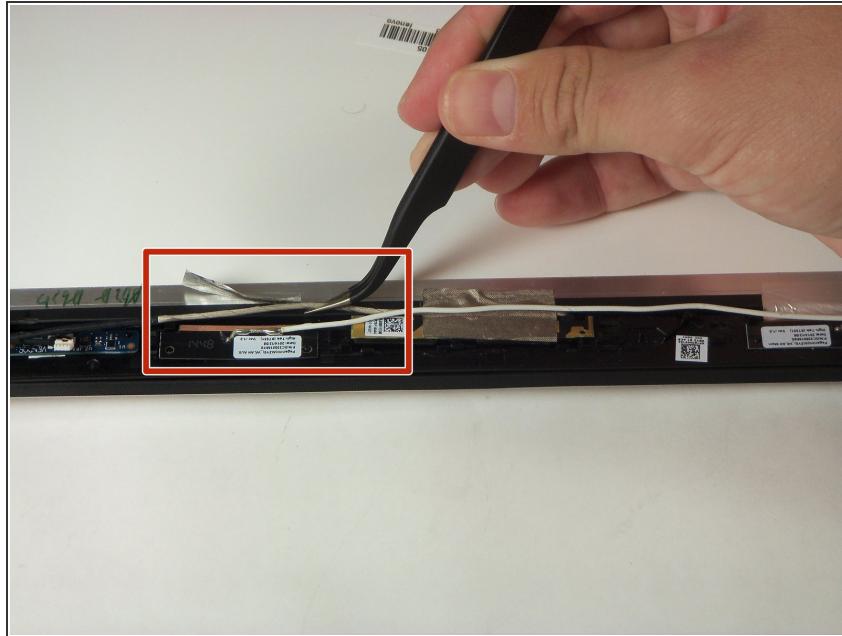


- Use the tweezers to pull the tape upwards in order to free the wires underneath it.

## Step 10

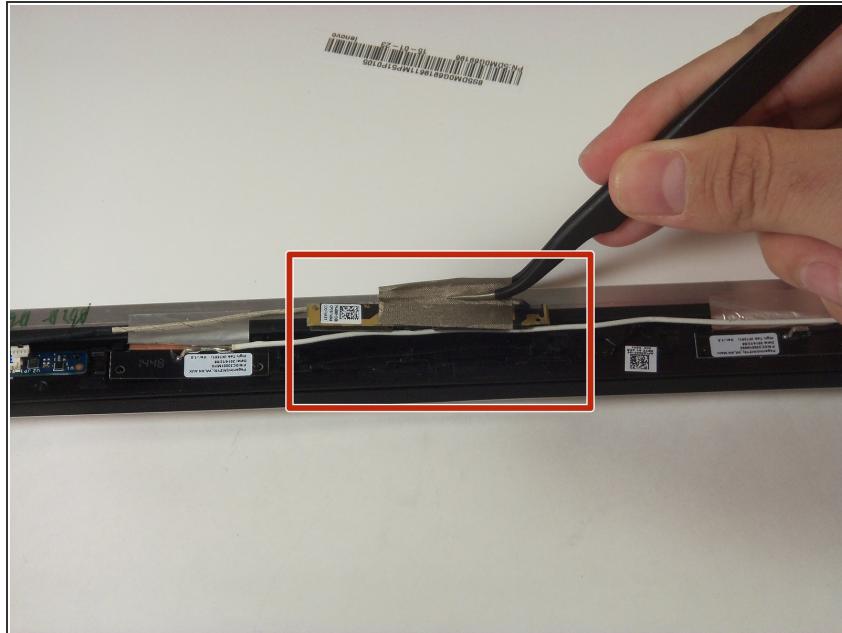


- Use the tweezers to pull up the camera by simply pulling upwards on the tape that is over it.

## Step 11

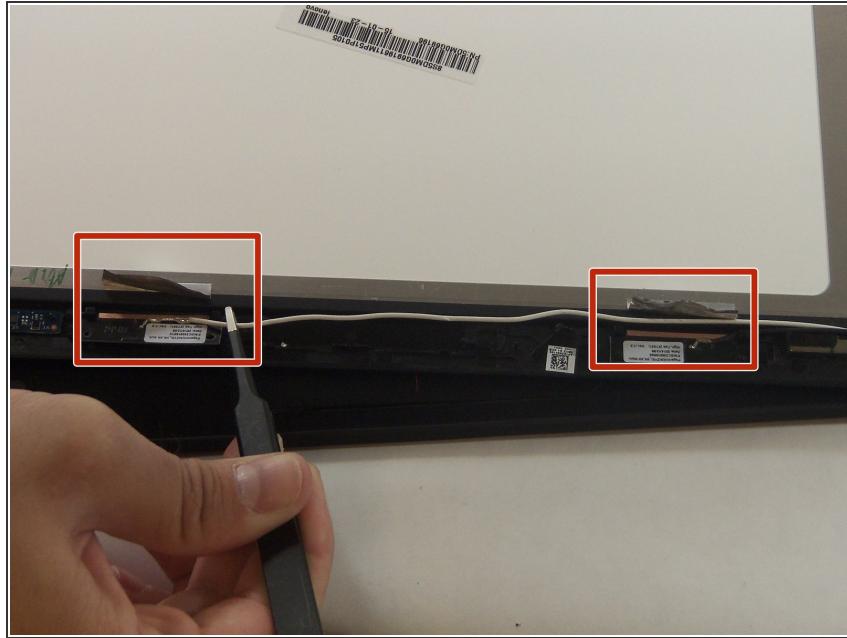


- Use the tweezers to follow the wires and to pull them out from under the plastic black hooks. Also pull up any tape that is over the wires.

## Step 12

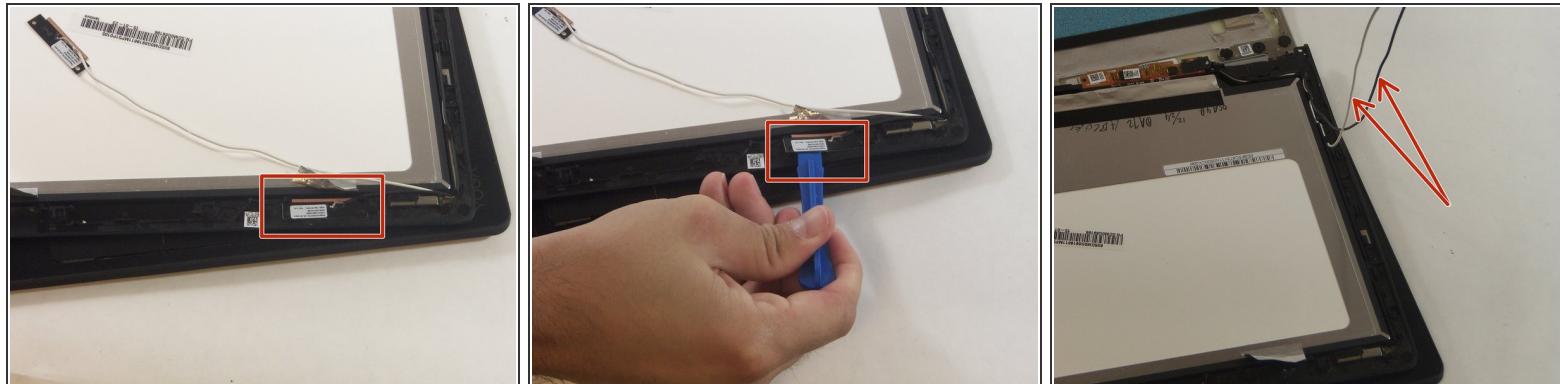

- Use the plastic opening tool to work the black component up and out of its original spot, then pull out the following connected wires.

## Step 13

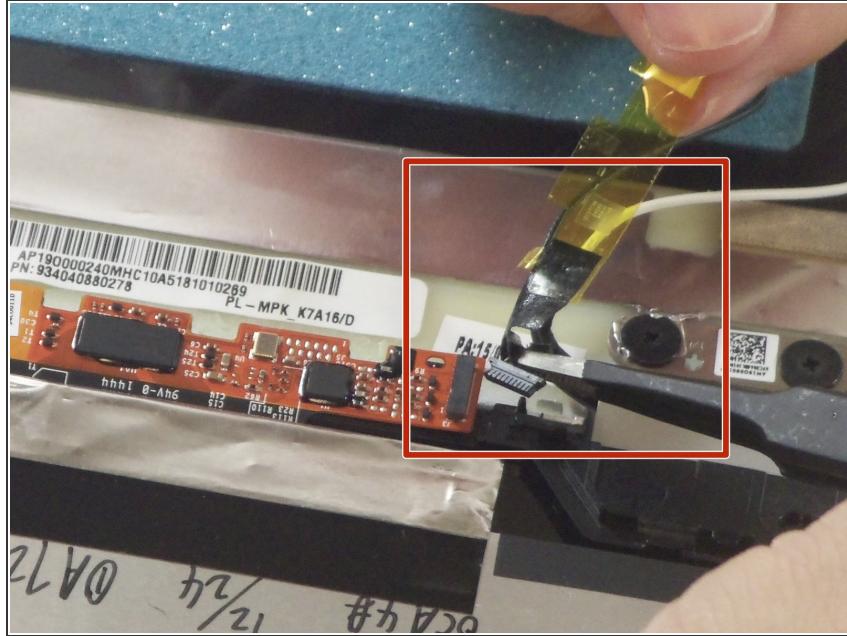

- Use the tweezers to unplug the black connection near the hinge of the laptop, taking the yellow tape off with it.

## Step 14



- Gently lift and remove the screen for replacing.

To reassemble your device, follow these instructions in reverse order.