



Logitech UE MegaBoom Auxiliary Port and micro USB Port Assembly Replacement

This is a guide designed to assist you in removing and replacing the Logitech UE Megaboom Auxiliary and USB Ports.

Written By: Oscar Ambriz



This document was generated on 2019-10-21 10:31:57 PM (MST).

INTRODUCTION

This is a guide designed to assist you in removing and replacing the Logitech UE Megaboom Auxiliary and USB Ports.

TOOLS:

- [Jimmy](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Outer Mesh



- Locate the ends of the speaker.
- Put a plastic opening tool in-between the rubber end and the mesh.
- Apply a upward force in order to pry open the end.
- Apply this procedure to the other side as well.

(i) Will take force.


 Using metal tools may permanently mar your device.

Step 2



- Take the Jimmy and pry up the rubber strip that has the volume buttons on it.
- (i)* You will hear clicks as it pries up, don't worry.
- Remove all the rubber you pried off.

Step 3

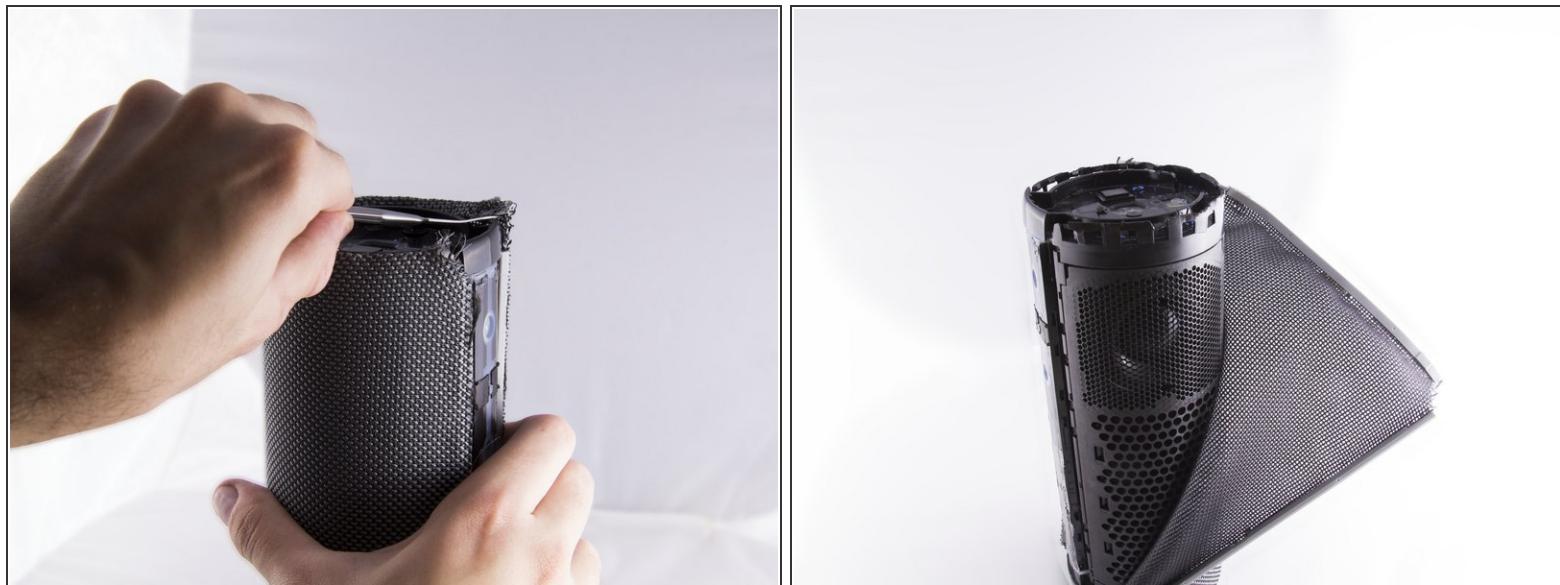

- Use tweezers to lift end of plastic retainer on edge of mesh out of its channel.
- Work the plastic retainer out of the channel all the way around the speaker.

⚠ Be gentle, it is easy to damage the fabric.

- Repeat for other side.

Step 4 — Auxiliary Port and micro USB Port



- Apply an upward force with your thumbs to loosen the end cap.
- Grasp the end cap and lift up to separate it from the base.

Step 5



- Use tweezers or an opening tool to remove the plastic insert on the inside of the rubber seal.
- Push up on the rectangular connector from the bottom to loosen the circuit board.

Step 6



- Now grasp the plastic on the outside of the rubber seal and pull it out by applying an upward force.
- Once the plastic has been removed, pull out the circuit board containing the auxiliary and USB ports.

To reassemble your device, follow these instructions in reverse order.