



M6013 Capacitor Meter Teardown

Teardown of M6013 Capacitor Meter

Written By: Ted Hsueh



INTRODUCTION

How to take apart the M6013 Capacitor Meter

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Removing Battery



- Remove the circled screw
- Remove battery case and batteries

Step 2 — Removing Case



- Remove circled screws
- Pull case apart

 Watch out for buttons, they will fall out easily.

Step 3 — Remove Circuit Board




- Remove circled screws

 Be careful when removing the circuit board, the battery cable is still connected.


- Unsolder the square locations either on the circuit board or the case to fully remove the circuit board

Step 4 — Microprocessor

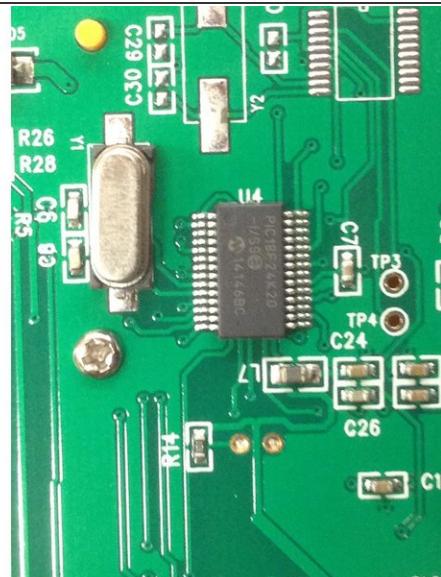

- Location of microprocessor

Step 5 — Remove Display

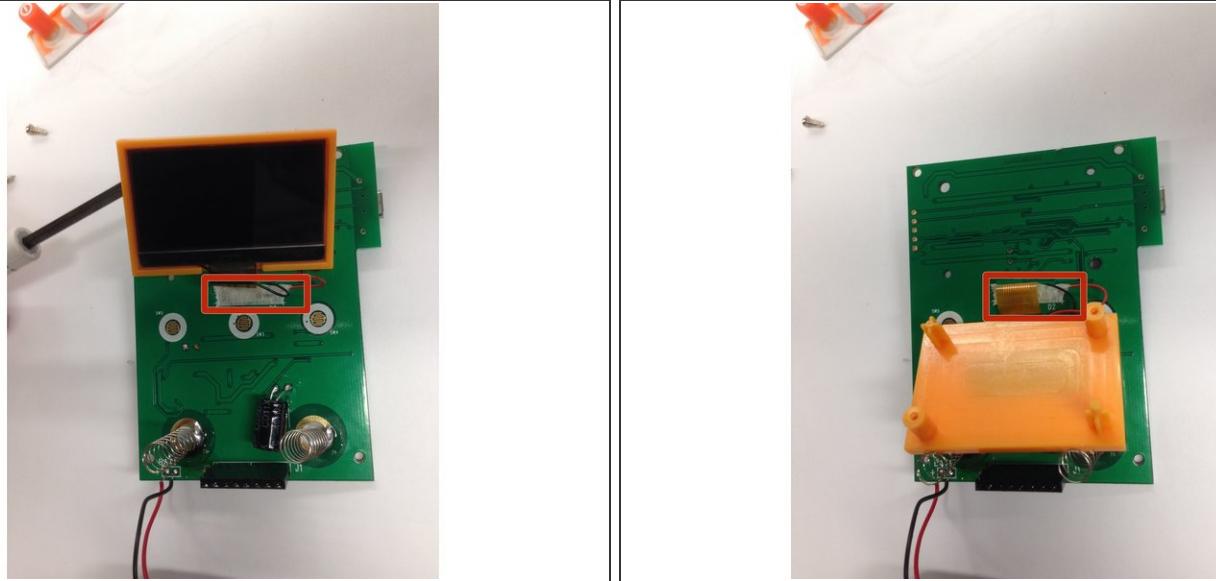

- Remove the cable connector
- Remove Display

To reassemble your device, follow these instructions in reverse order.