




MacBook Unibody Model A1342

AirPort/Bluetooth Cable Replacement

Written By: Walter Galan

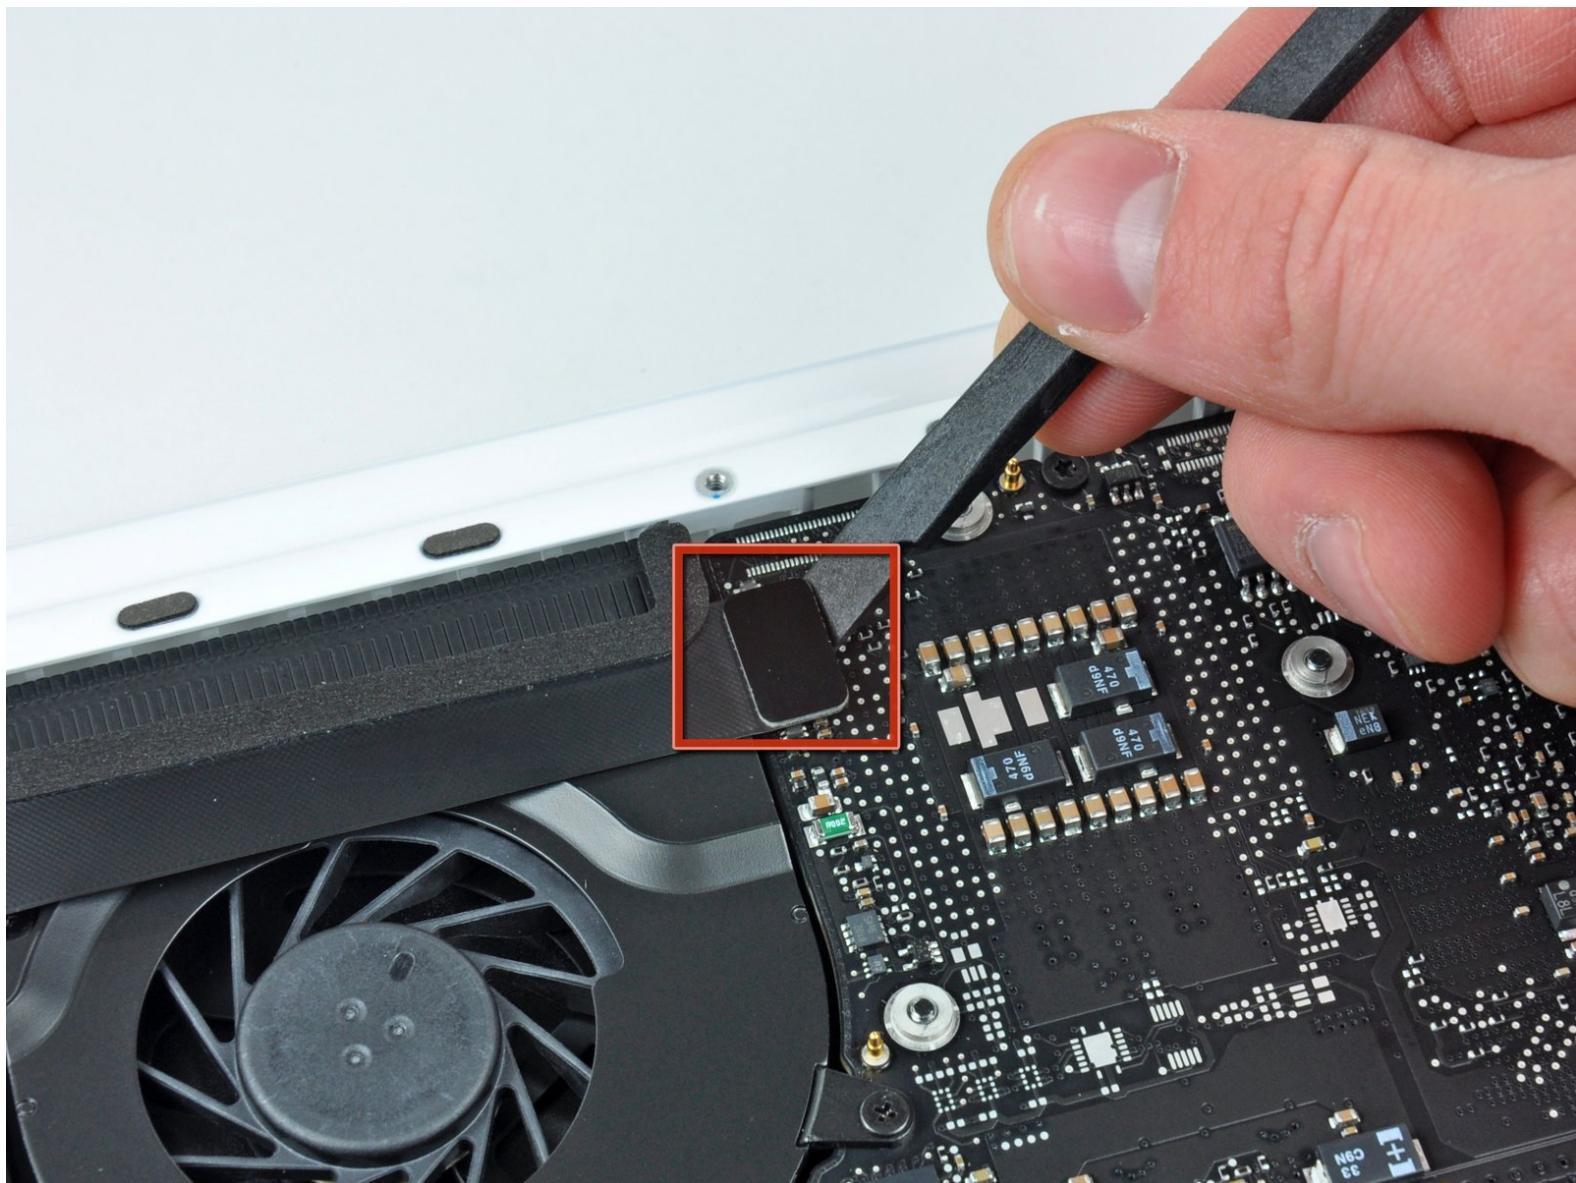

INTRODUCTION

Faulty Wi-Fi or Bluetooth connection? Replace the AirPort/Bluetooth cable.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

PARTS:

- [MacBook Unibody \(Model No. A1342\) AirPort/Bluetooth Cable](#) (1)

Step 1 — Lower Case



- Remove the eight 4 mm Phillips screws securing the lower case to the MacBook.

Step 2



⚠ The lower case is constructed of rubber-coated aluminum. Do not excessively bend the aluminum during removal, as any permanent deformation will cause tolerance issues after reassembly.

- Slightly lift the lower case near the vent opening.
- Continue running your fingers between the lower and upper cases until the upper case pops off its retaining clips.

ⓘ The location of these three clips is shown in the third picture.


Step 3 — Battery



⚠ For precautionary purposes, we advise that you disconnect the battery connector from the logic board to avoid any electrical discharge. This step is **optional** and is not required.

- Use the flat end of a spudger to lift the battery connector up out of its socket on the logic board.
- **i** It may be easier to use your fingernails to lift up on both sides of the connector.

Step 4 — AirPort/Bluetooth Cable

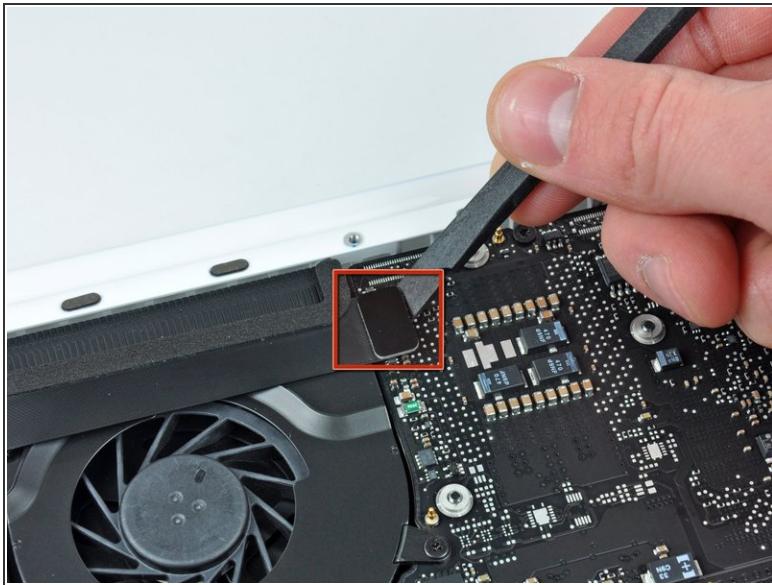

- Use the flat end of a spudger to pry the AirPort/Bluetooth cable connector up off the logic board.
- Carefully peel the AirPort/Bluetooth ribbon cable from its channel within the rear speaker assembly.

Step 5



- Use the flat end of a spudger to pry the AirPort/Bluetooth cable connector up off the right speaker.

To reassemble your device, follow these instructions in reverse order.