



Motorola MOTO W755 Cell Phone Top Panel Replacement

This guide shows how to replace the top panel.

Written By: Roberta Glenn



INTRODUCTION

Replace the top panel for your Motorola MOTO phone.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [2.5 mm Flathead Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [T10 Torx Security Bit Screwdriver](#) (1)

Step 1 — Battery



- Using your finger, press down on the clip holding the back cover on
- Pull the back cover off.

Step 2



- Place thumb and index finger in the spaces on either side of the battery.
- Pull battery out.

Step 3 — Top Panel



- Use the plastic opening tool to pull/peel back screen cover.
- Gently peel back the screen cover from the speaker slit.
- Using the T6 Torx-screwdriver, remove the four 4.3 mm screws from the top panel.

Step 4




- Using the flat end of the plastic opening tool, insert it underneath the plastic cover on the top right corner.
- Move the opening tool around the phone counter clockwise.
- Pop the plastic cover off by twisting the plastic covering tool.

Step 5



- Using a flat head screwdriver, insert it between the metal logic board casing and the top portion of the phone
- Move the plastic opening tool around the phone until part of the casting is popped off.
- You will need to pop in the four plastic fasteners individually from the metal casing to remove it
- Be careful not to rip the cable ribbons that are attached to the logic board and casing

Step 6

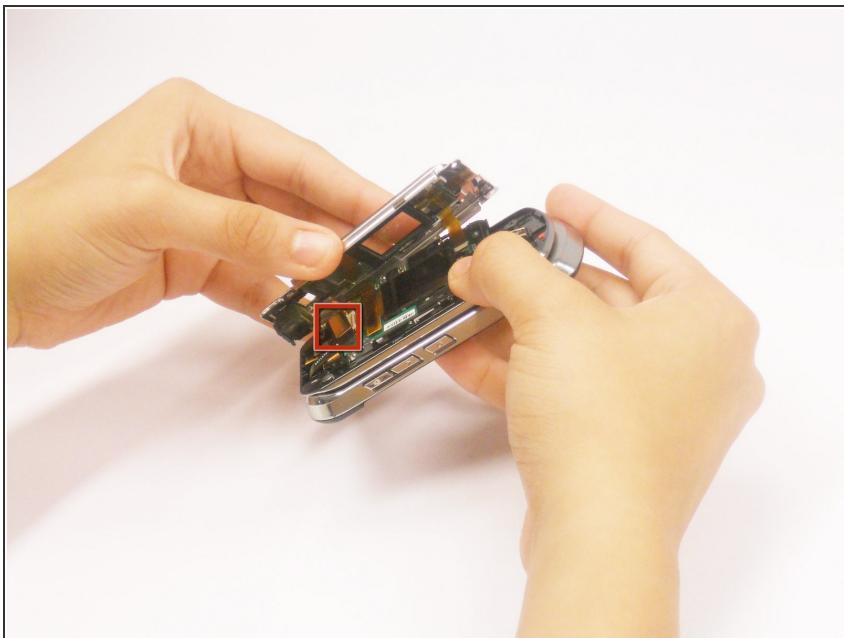

- Use the flat end of the plastic opening tool to unclip the cable ribbon from the logic board

Step 7



- You now have the top panel completely detached.

To reassemble your device, follow these instructions in reverse order.