




Motorola Q Global Display screen Replacement

Instructions to open Q Global and access the LCD display for repair or replacement.

Written By: Will Dickman

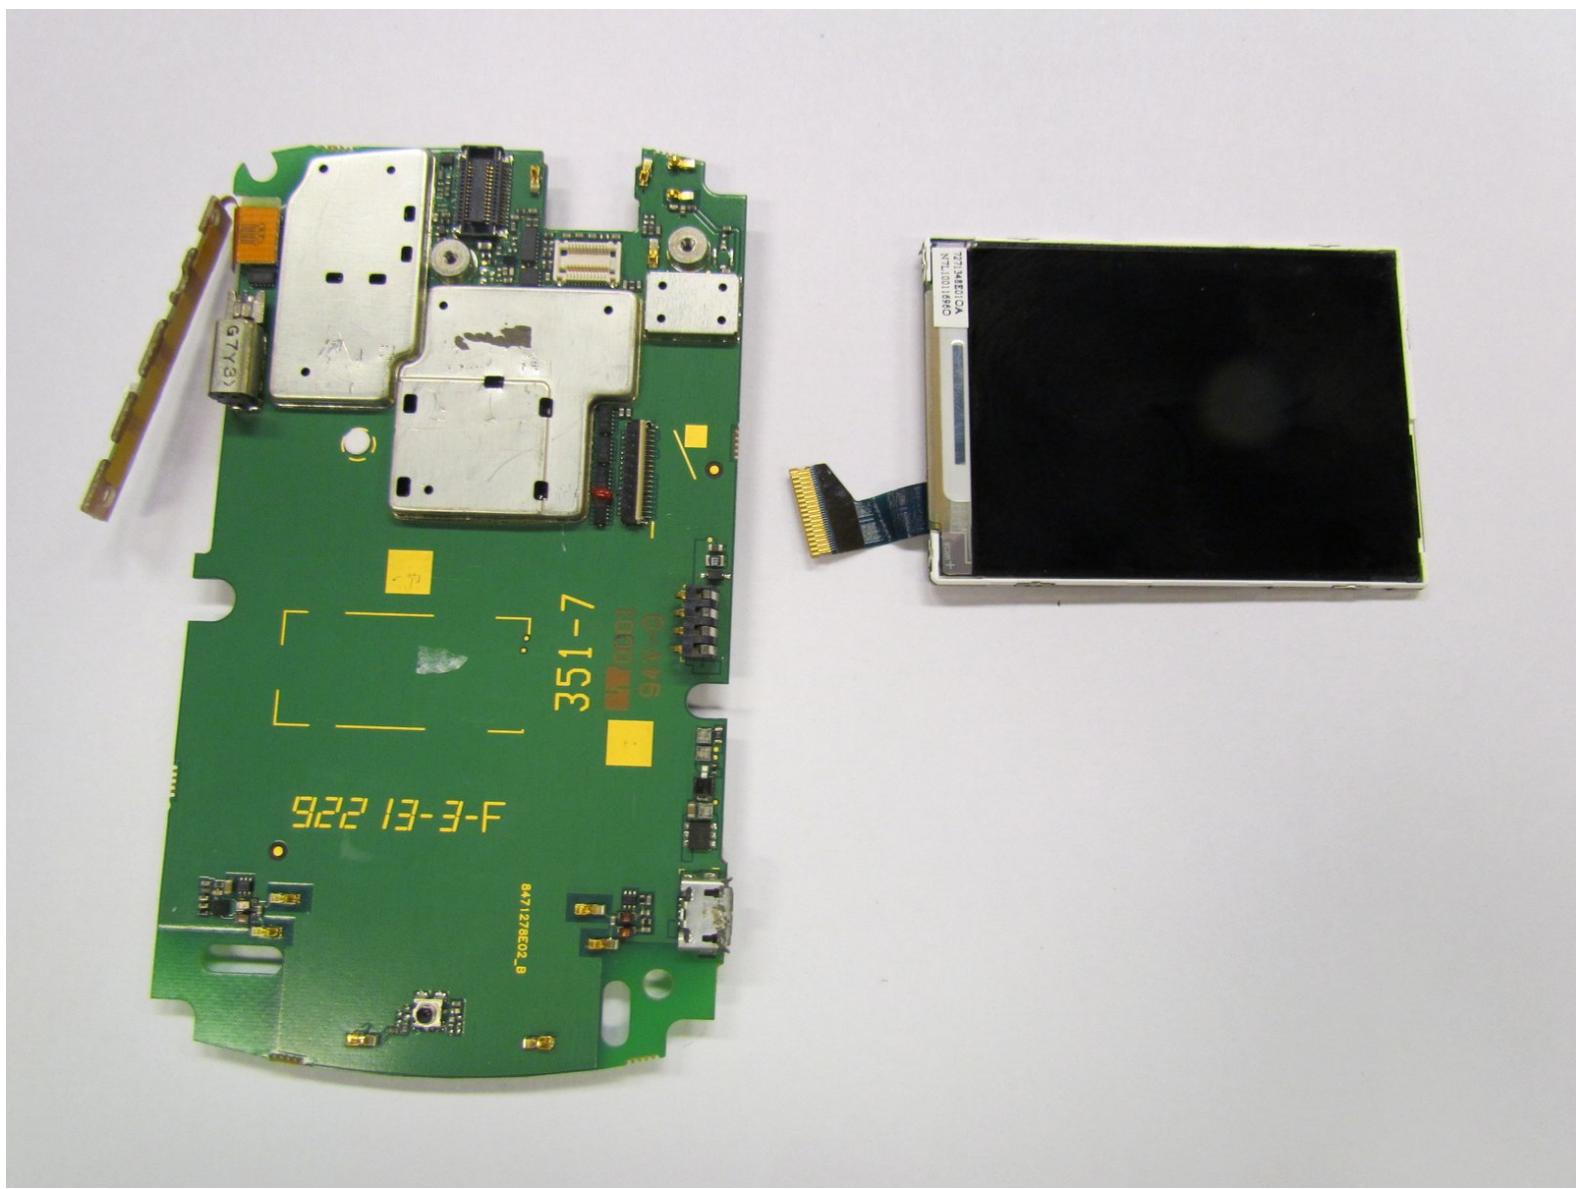

INTRODUCTION

Being able to access the LCD display of your Motorola Q Global is important if you wish to do self-maintenance. Here, we show you how to do so.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Battery



- Turn the phone face down.
- Press and hold the release button in the middle of the back panel.
- Slide the bottom panel down to remove.

Step 2

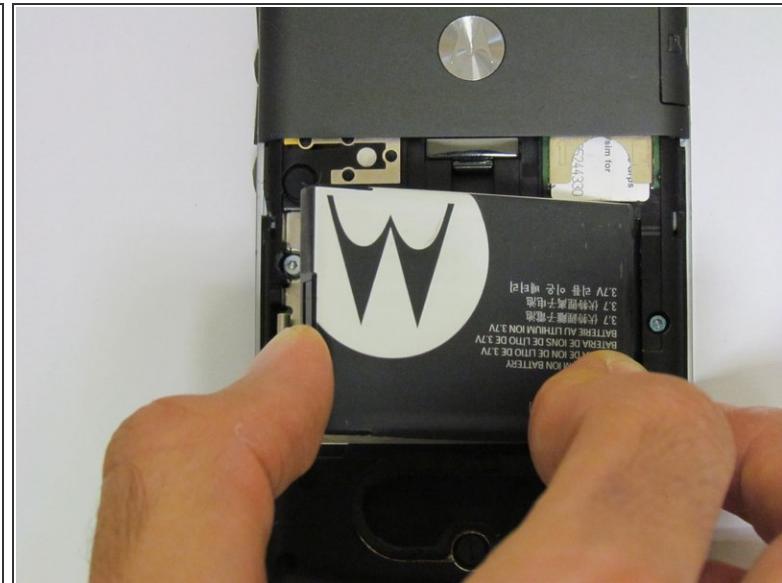

- Remove the battery pack by prying it out with a fingernail, screw driver or other opening tool at the tab shown.

⚠ When reinserting the battery, make sure the contacts in the battery are lined up with the contacts in the phone.

Step 3 — Display screen



- Press inwardly on the upper casing to release.

Step 4



- Slide the upper case rightward and lift up.
- Lift the camera sticker so that it does not get damaged.

Step 5




- Remove the 6 screws using the T5 torx screwdriver.

Step 6




- Once the screws are removed, use the plastic opening tool to remove the black casing.

Step 7

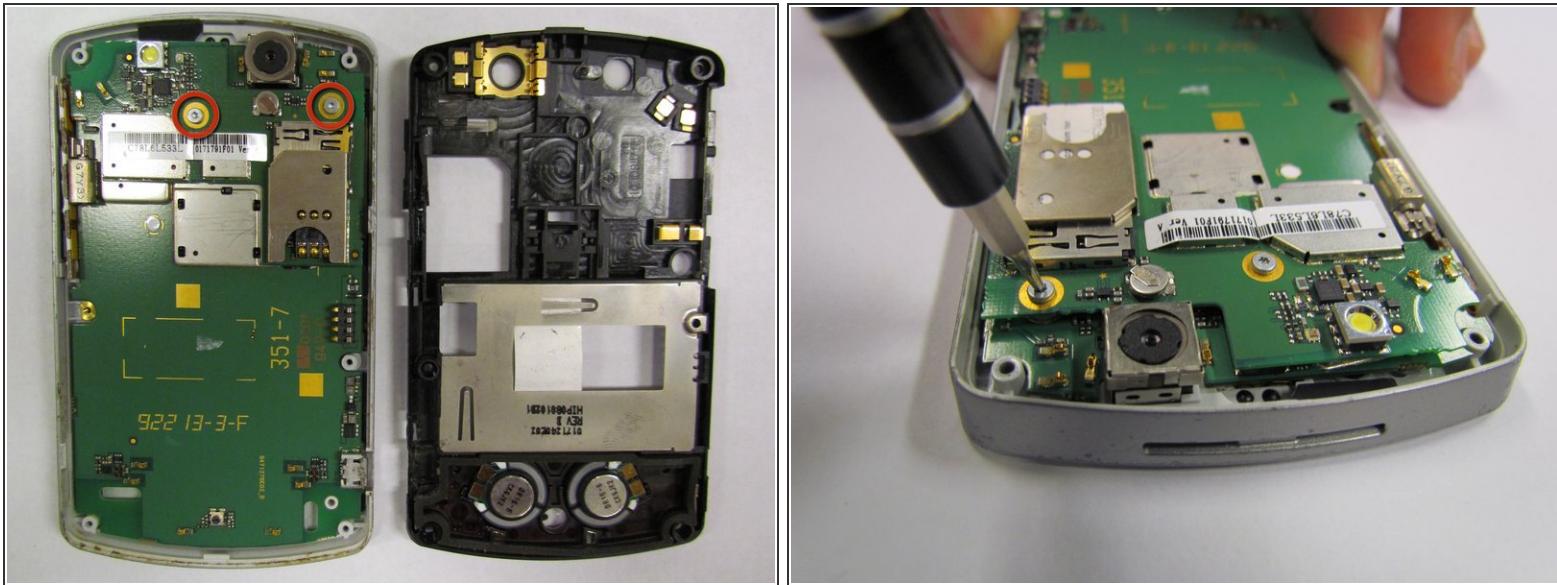


- Remove both screws on the mounted surface with a T5 screwdriver.

Step 8

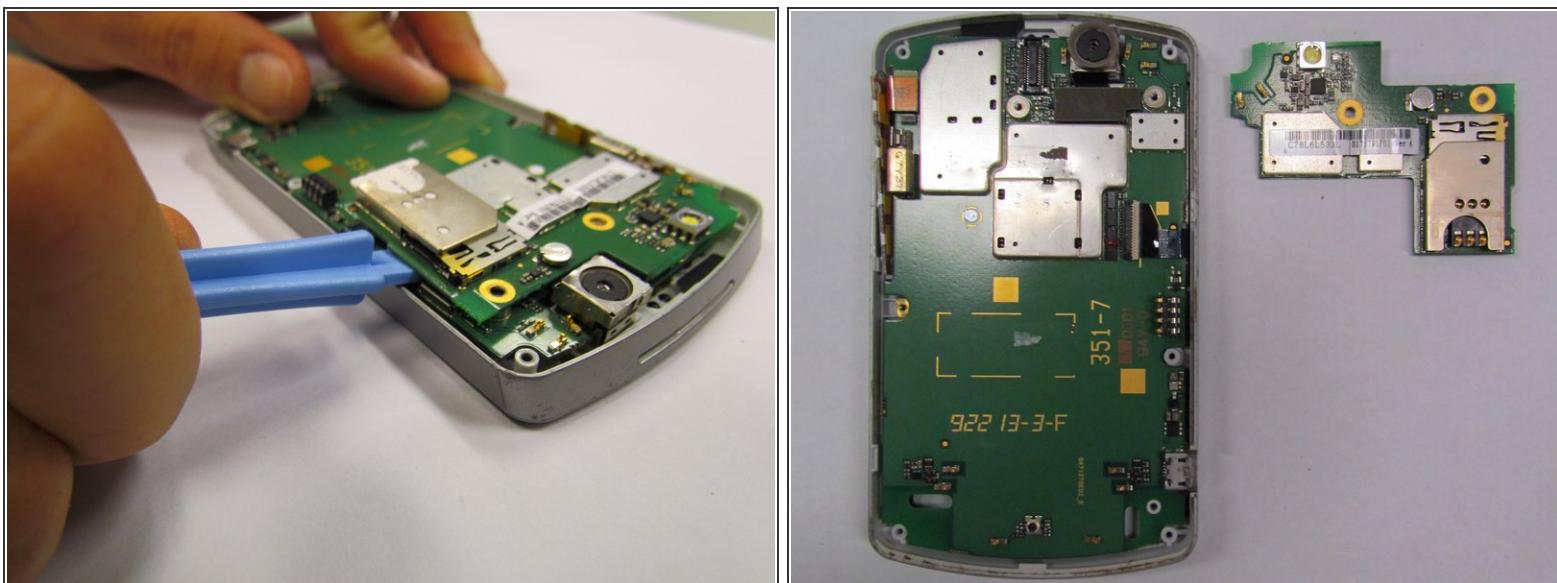



- Remove the glued, mounted surface by lifting it from underneath the SIM card slot by using the plastic opening tool.

Step 9

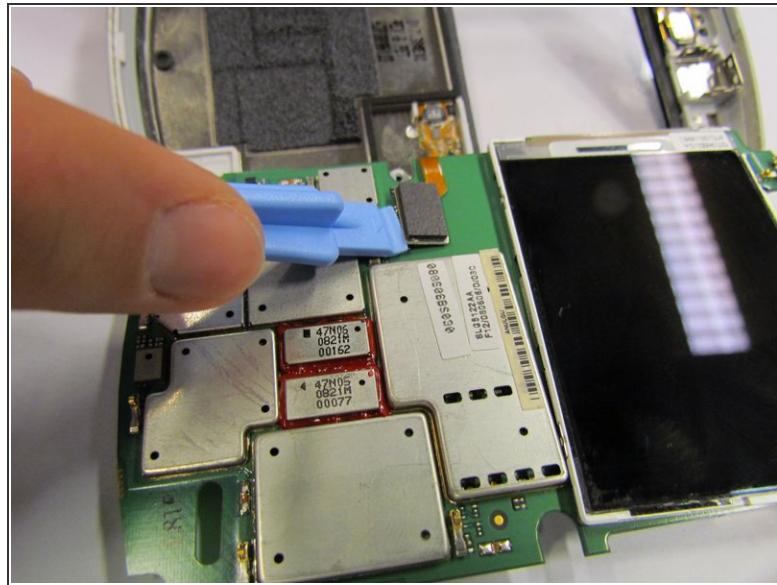


- Lift the motherboard about 90 degrees and remove the circuit with the orange ribbon (from the keyboard) by gently lifting the circuit.

Step 10

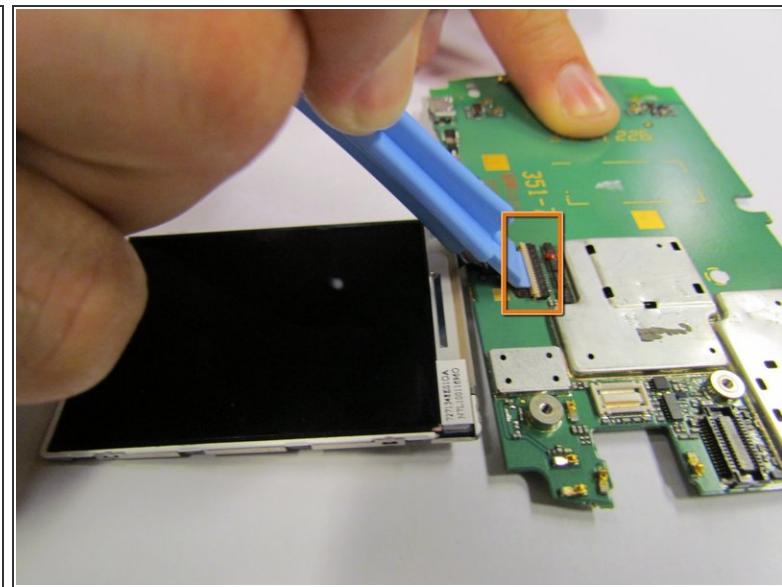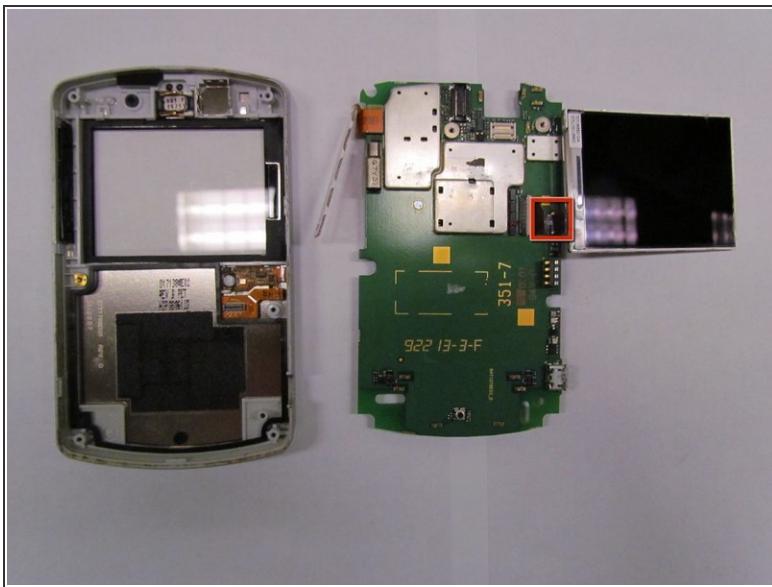

- Separate the front plate from the circuit board.
- The LCD screen is attached to the circuit board by a thin ribbon.
- Switch the lock on top of the circuit entry from horizontal to vertical.

Step 11

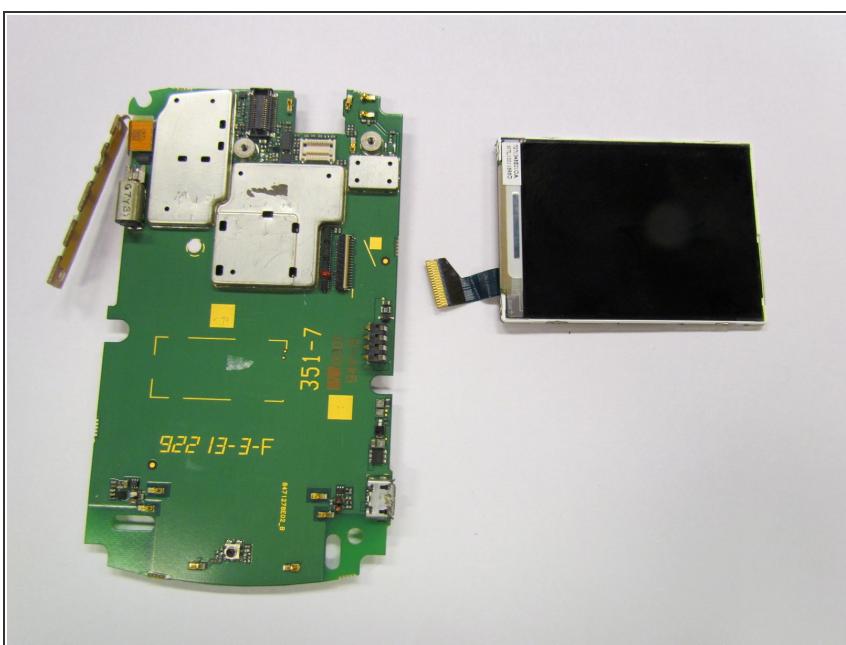

- Insert the new LCD screen into the circuit.

To reassemble your device, follow these instructions in reverse order.