




Motorola T720c Keypad replacement or cleaning

Removing and cleaning the keypad on your Motorola T720c cellphone.

Written By: Amy

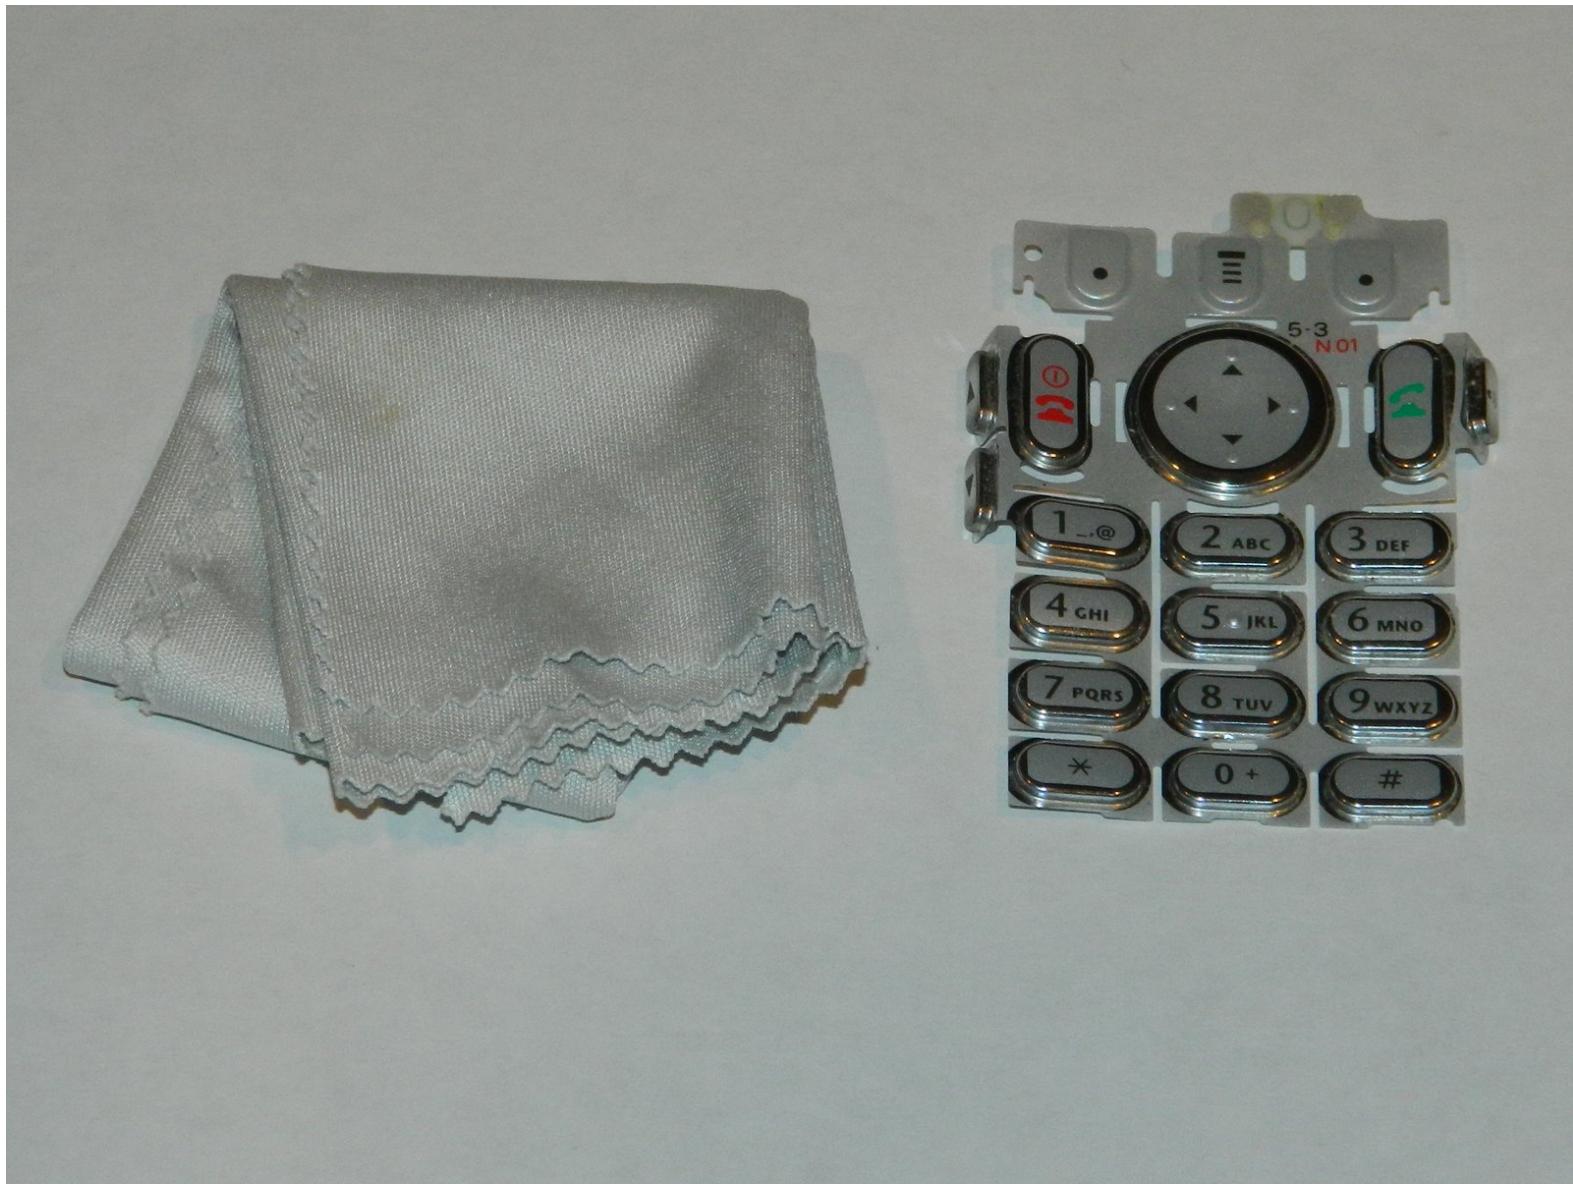

INTRODUCTION

Has your keypad stopped responding due to debris build-up? This guide will show you how to remove the keypad.

TOOLS:

- [T6 Torx Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Antenna



- At the base of the antenna, use your fingers to unscrew the stem counterclockwise.
- The antenna will pull out with little effort.

Step 2 — Battery



- On the back of the phone, locate the tab with the down arrow.
- Using your finger, press the tab and slide the back cover down to release it from the phone.

Step 3



- Inserting your finger in the recess at the top edge of the battery, pull the battery away from the housing to remove it.

Step 4 — keypad




- Locate the three screws that secure the back battery housing to the phone.
- Use a Torx T6 screwdriver to unscrew the screws and then remove them with your fingers.

Step 5



- Using a spudger (not shown), separate by gently prying the front from the back of the phone housing.
- Remove the back.

Step 6

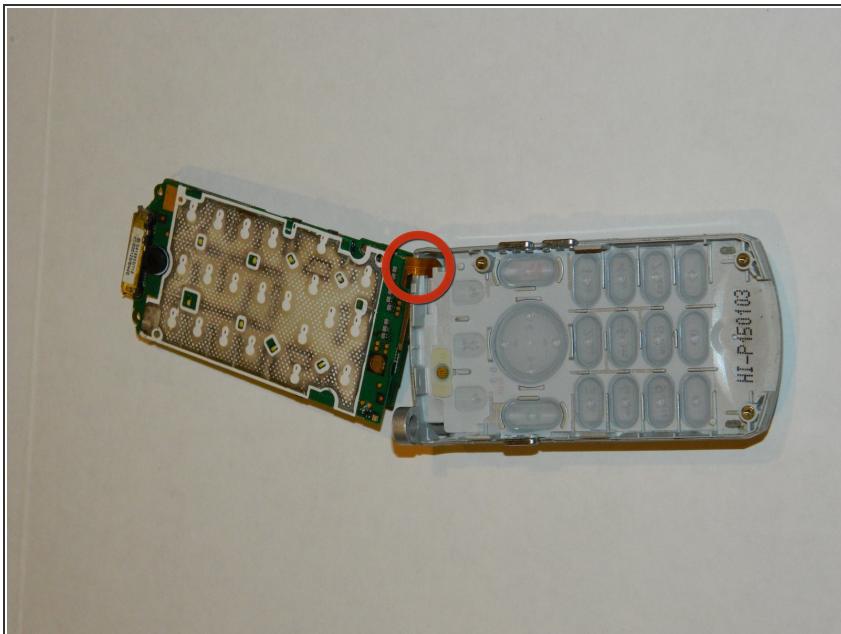

 The fragile wire strip connecting the display housing to the circuit board is located on the right corner of the inner hinge.



- In the same direction you would flip open the phone, use your finger to gently lift the circuit board from the plastic keypad.

Step 7



- While avoiding contact with the inner electronics, use the spudger to lift the plastic keypad from the phone.

Step 8

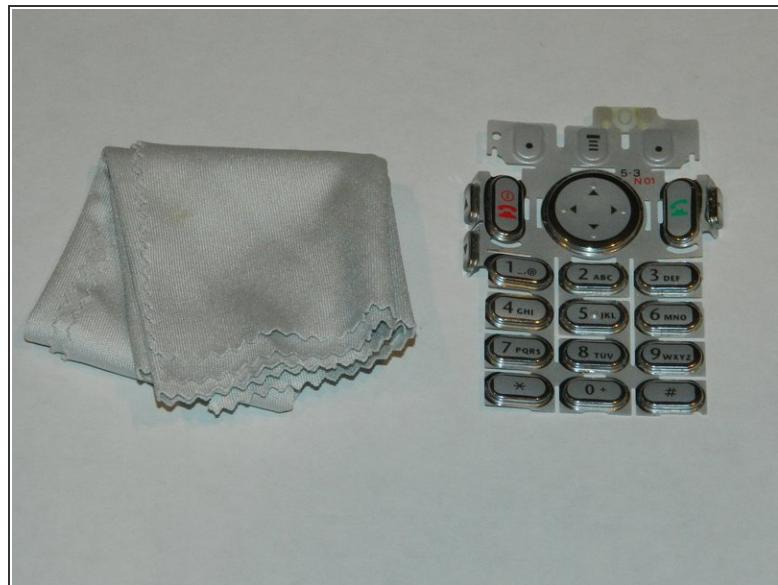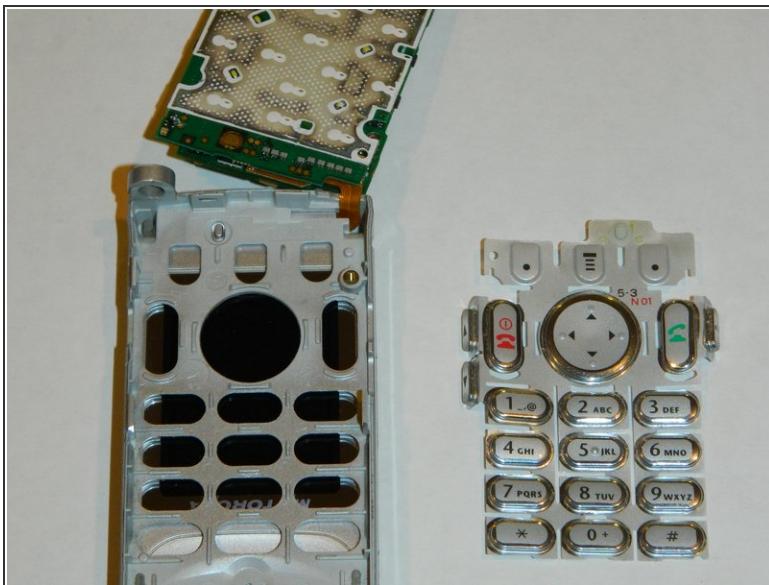

- Using a lens cloth, wipe away any build-up on or between the keys.
- Wait for the keypad to dry before reassembling.

To reassemble your device, follow these instructions in reverse order.