




Motorola V557 External Speaker Replacement

This guide shows how to remove the speaker from the back casing of a Motorola V557 cell phone.

Written By: Alex Georges

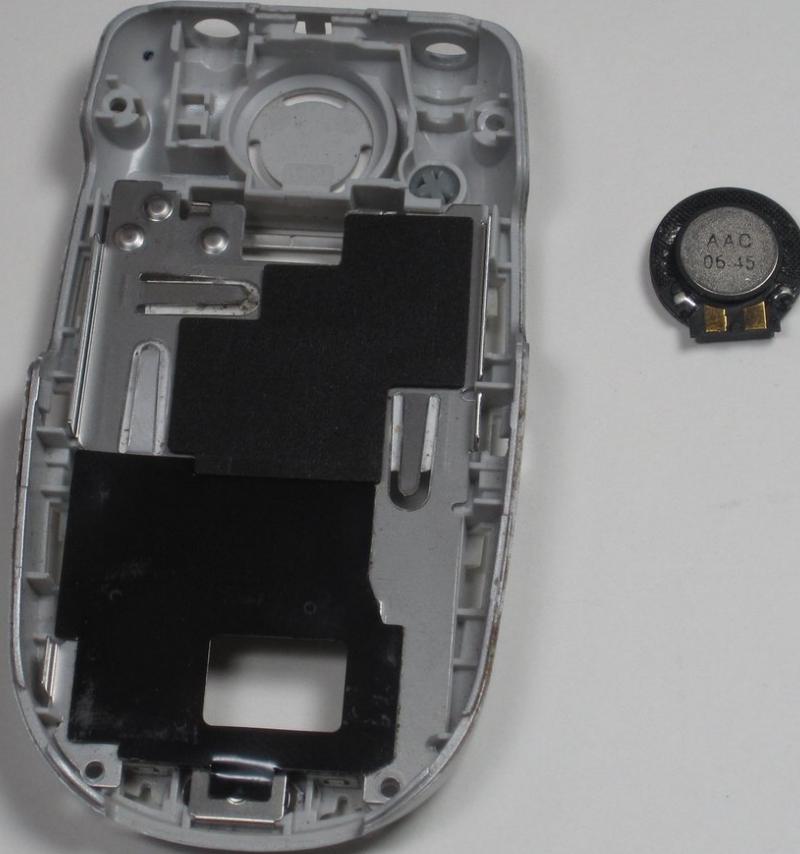

INTRODUCTION

This section will show how to remove the external speaker from the intermediate back-casing of a Motorola V557 phone.

TOOLS:


- [Push Pin](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery




- Push down on the silver button while sliding the back plate down to reveal the battery.

Step 2

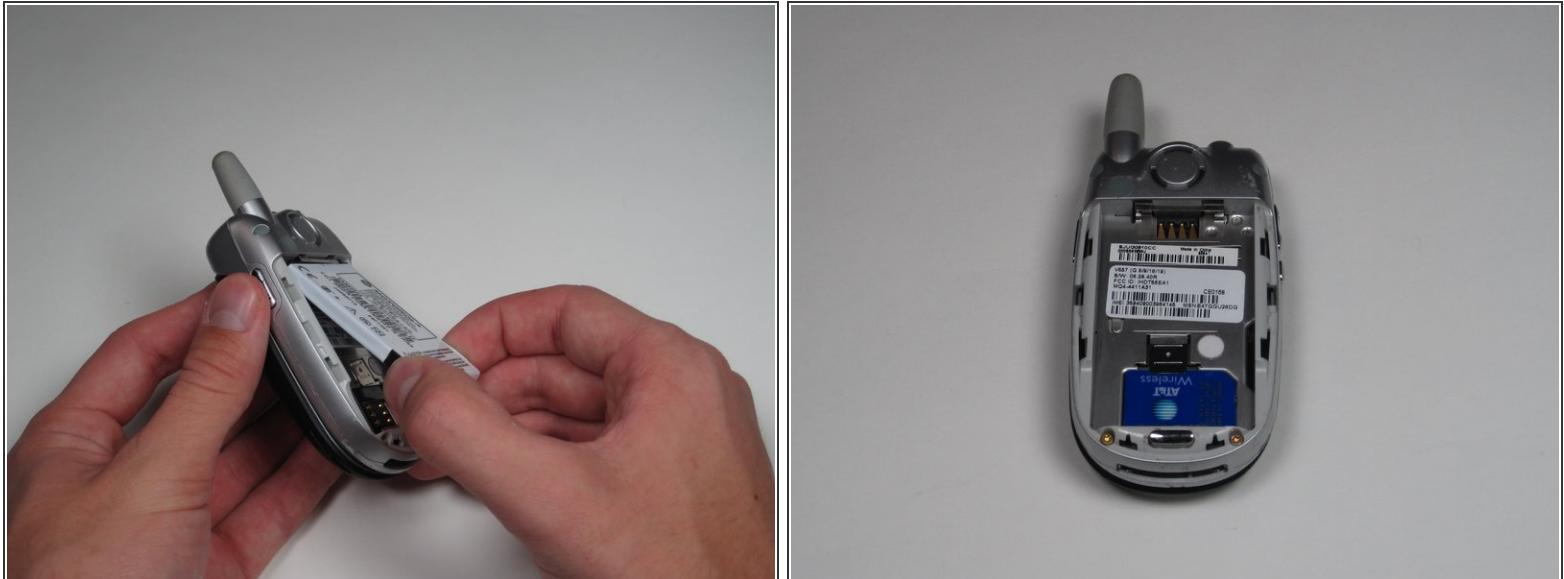

- Grab the lower edge of battery at the black areas and pull upward on the edges to remove it.

Step 3 — SIM Card

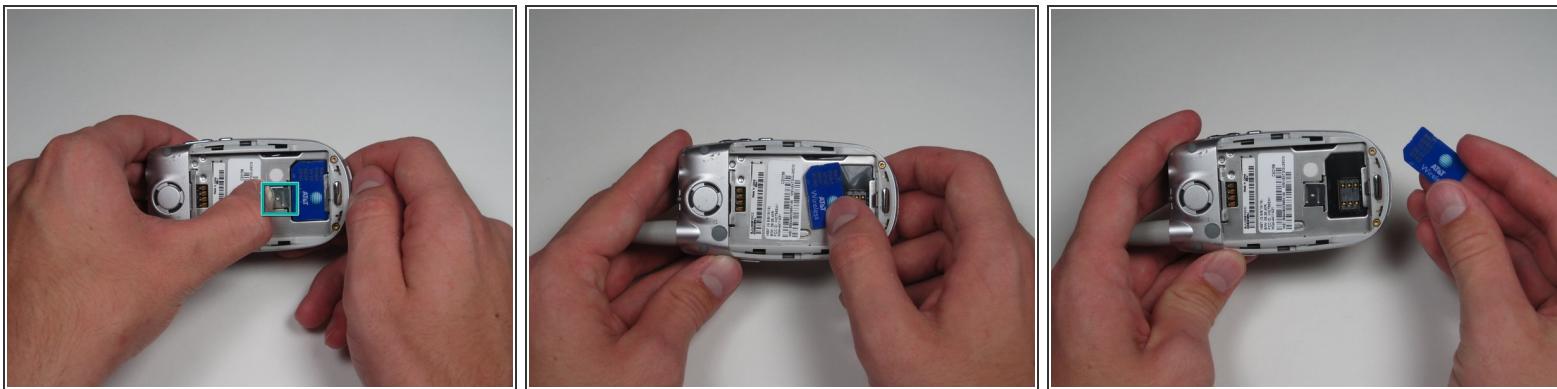

- Move the the metal slider towards the top of the phone until it clicks out of its original position.
- Slide out and remove the SIM card.

Step 4 — Antenna



- Grip the antenna and twist it counterclockwise to loosen it.
- When it has been loosened all the way, pull gently to remove the antenna piece.

Step 5 — Rear Casing



- Remove the screw covers over the two top screws by prying gently with a pin.
- The large cover in the upper left of the back plate has no screw behind it, so should *not* be removed.

Step 6




- Remove all four 6.0 mm Torx screws.

Step 7



- Insert a spudger into marked holes, one at a time, and pry away from the phone to release internal tabs.
- Separate and detach the rear casing.

Step 8 — Headphone Jack

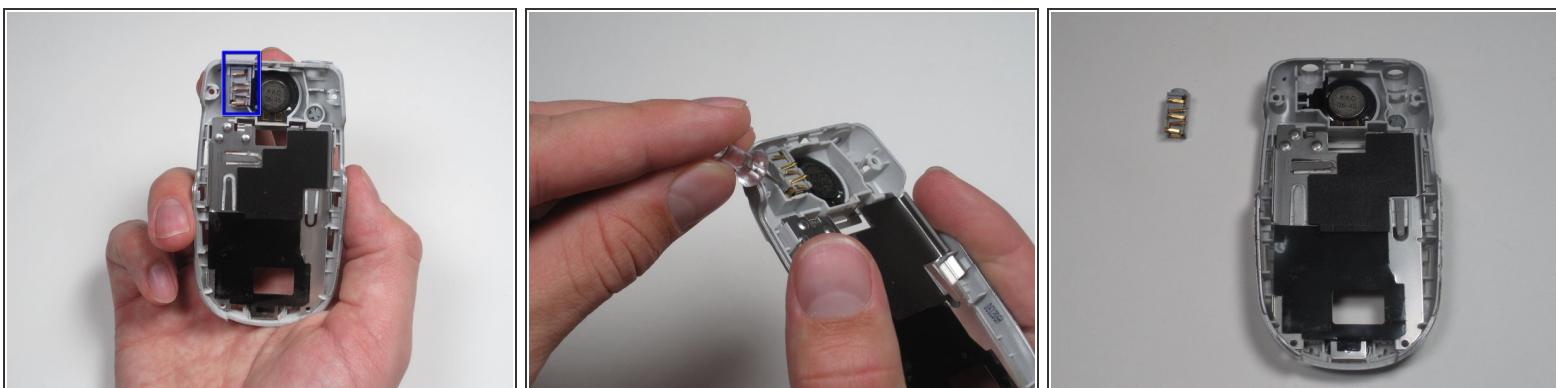


- Lift out the headphone jack section from the sides using a push pin.

Step 9 — External Speaker



- Using metal tweezers, lift out the black plastic support piece from beneath the headphone jack.

Step 10

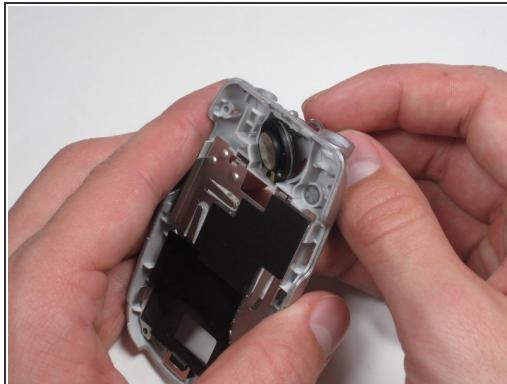

- Separate the speaker from the casing by pushing with a pin from the back (external) side, through the openings in the casing.

 Be gentle! The wire mesh is durable, but it might suffer damage if you push too hard with the pin.

To reassemble your device, follow these instructions in reverse order.