



Mr. Coffee BVMC-SJX33GT Rubber Hose Replacement

This guide demonstrates how to remove or replace the two rubber hoses the transport water in your Mr. Coffee BVMC-SJX33G.

Written By: Mackenzie Aiken



INTRODUCTION

This guide is particularly useful if the tubing in your Mr. Coffee BVMC-SJX33G is cracked or ripped. This guide also demonstrates how to remove the rubber hoses for simple cleaning.

Make sure your coffee maker is unplugged and empty of all water before attempting to make any repairs.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Small Needle Nose Pliers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Base



- Turn your coffee maker over so that the base is facing up.

Step 2






- Locate the seven 13.5mm screws securing the base to the coffee maker.
- Unscrew the screws using a #2 Phillips head screwdriver.
- ① Use a screwdriver with a magnetic tip to more easily remove the three screws in the back and two in the middle.

Step 3





- Lift base to remove.
- ⓘ If the base sticks along one edge, do not pull at an angle. Gently tug straight up while sliding a finger along the edge in order to pop the clips.

Step 4 — Rubber Hose

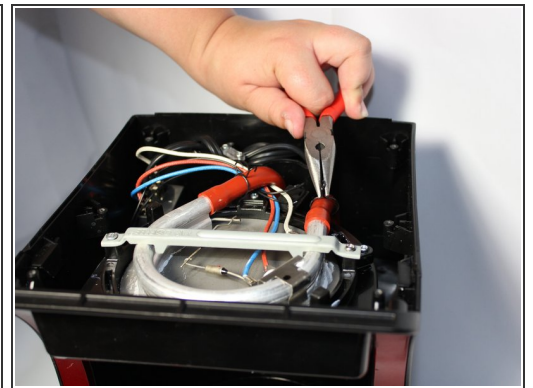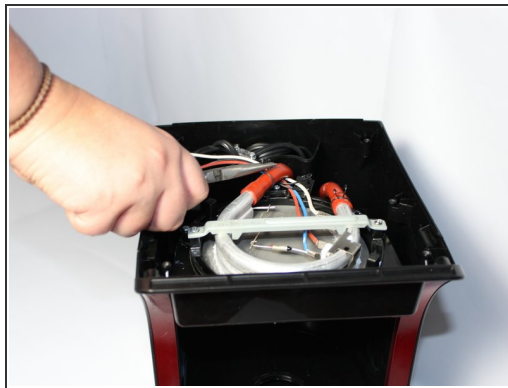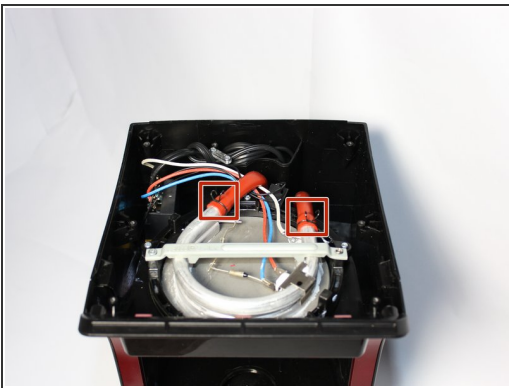

- Locate the metal clamps.
 - Using a pair of pliers or your fingers, slide clamps away from tube opening.
- ☑ All following steps regarding the rubber hoses should be completed for both hoses.

Step 5

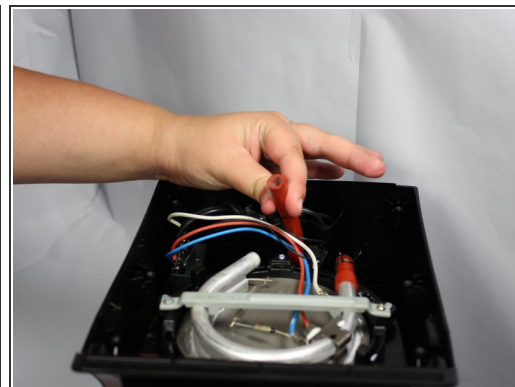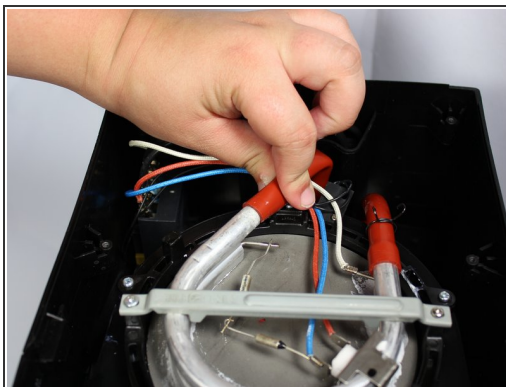



- Using a plastic opening tool, loosen rubber hose from metal tubing.
- Once loosened, grip the hose and pull it from the metal tubing.

Step 6




- Slide metal clamps off hoses.

Step 7

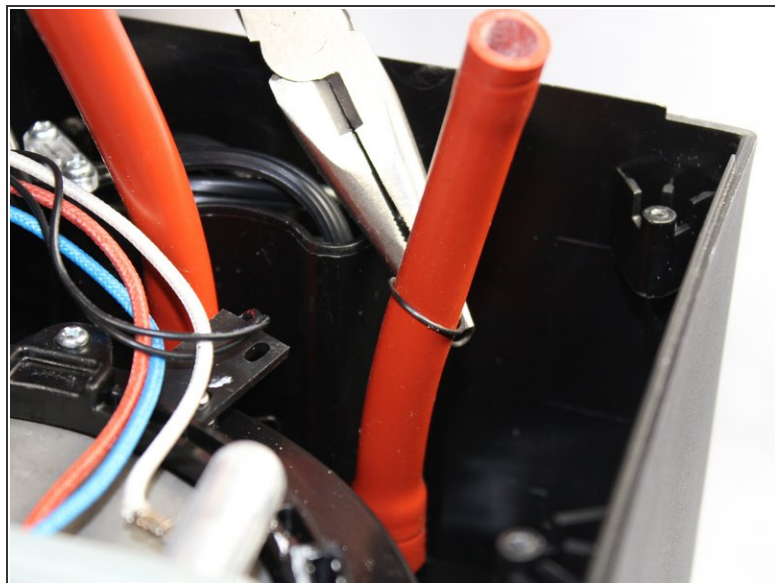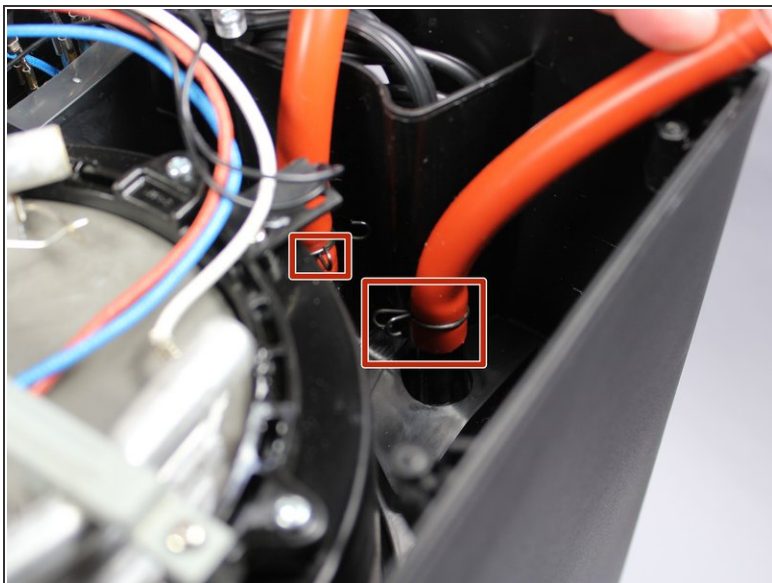

- Locate the other set of metal clamps.
- Using needle nose pliers or your fingers remove these clamps by pinching the clamps and sliding them up the tubes.

Step 8

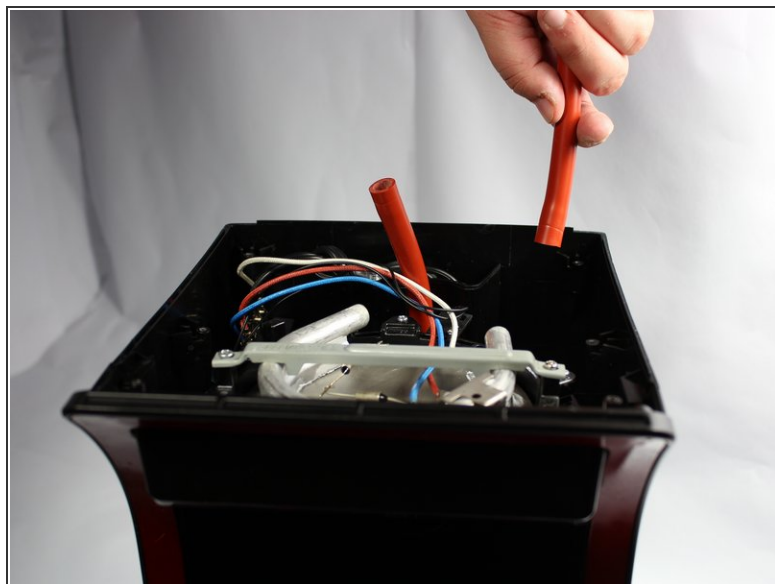

- Grip the hoses and pull them straight up and out.

To reassemble your device, follow these instructions in reverse order.