




# Nexus 10 Battery Replacement

Replace your Nexus 10 battery.

Written By: Benjamin Troller

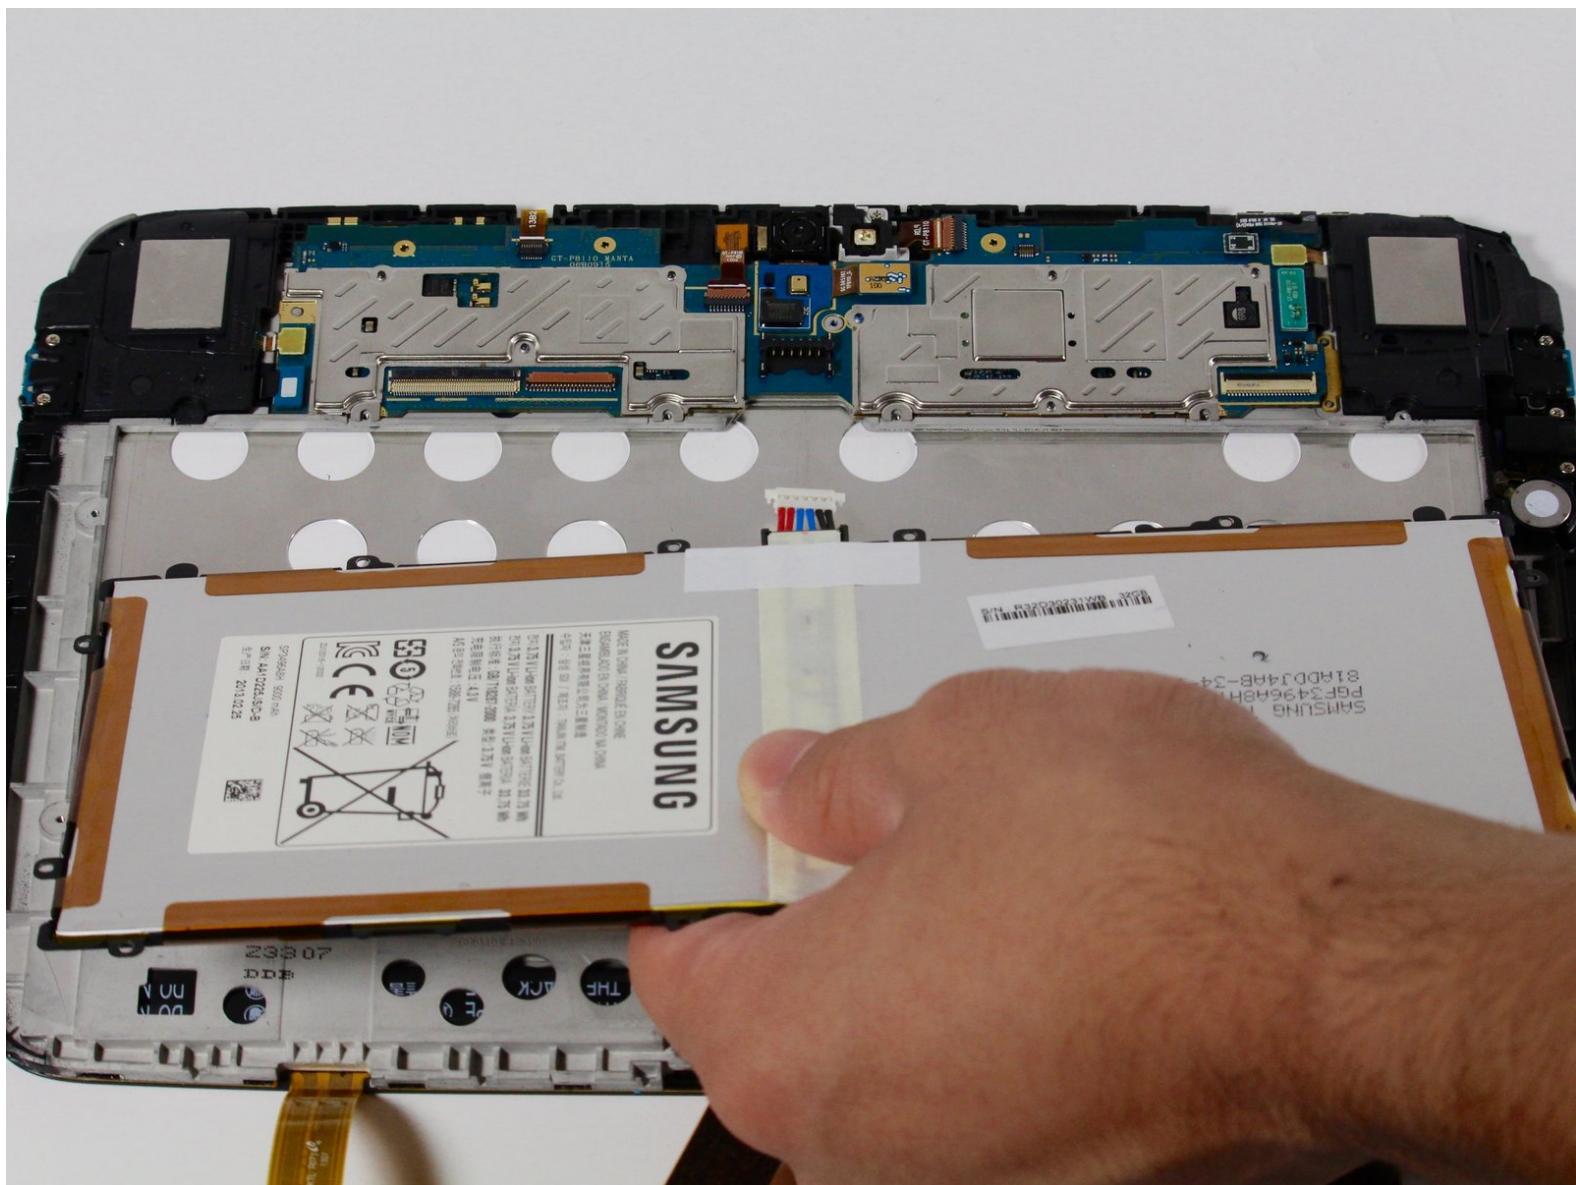

## INTRODUCTION

Replace a dead or failing battery in your Nexus 10 by completing the following guide. The battery should also be removed as a safety precaution before performing any other repairs on this device.

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

### **PARTS:**

- [Nexus 10 Replacement Battery](#) (1)
- [Nexus 10 Rear Panel](#) (1)

## Step 1 — Battery




- Using a plastic opening tool, remove the thin plastic cover from back of the tablet by prying up from its small tab.

## Step 2



- Remove the five 2mm screws on the back of the device using a PH00 screwdriver.


## Step 3

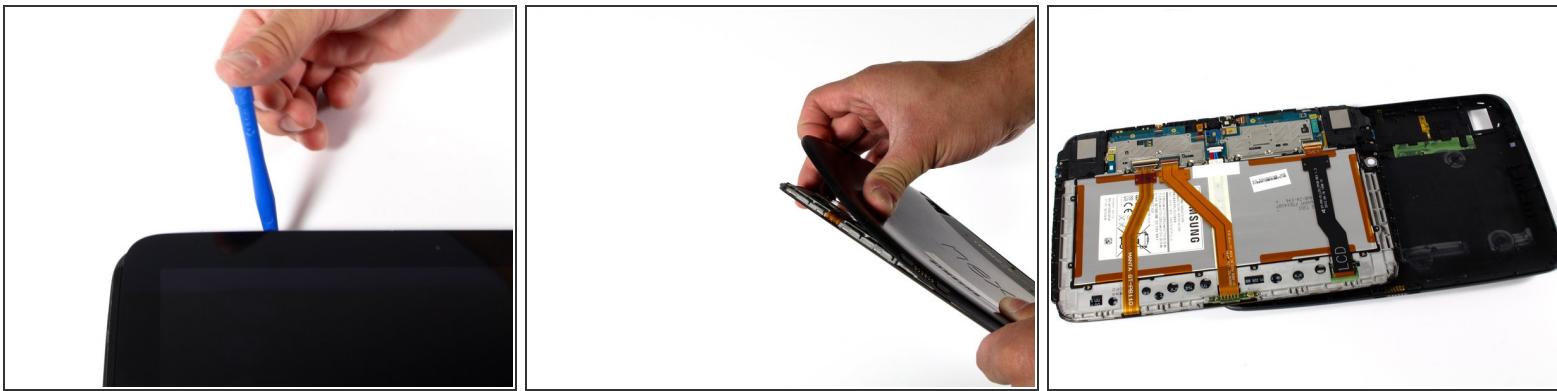

- Pry the device apart by inserting a plastic opening tool in the seam between the plastic backing and display assembly. Use the tool to unclip the plastic tabs in between the backing and the display.
- Pull the the plastic backing off the display assembly using your hands.


**⚠** Do not do this step with only your hands. You will require a significant amount of force to separate the device.

## Step 4

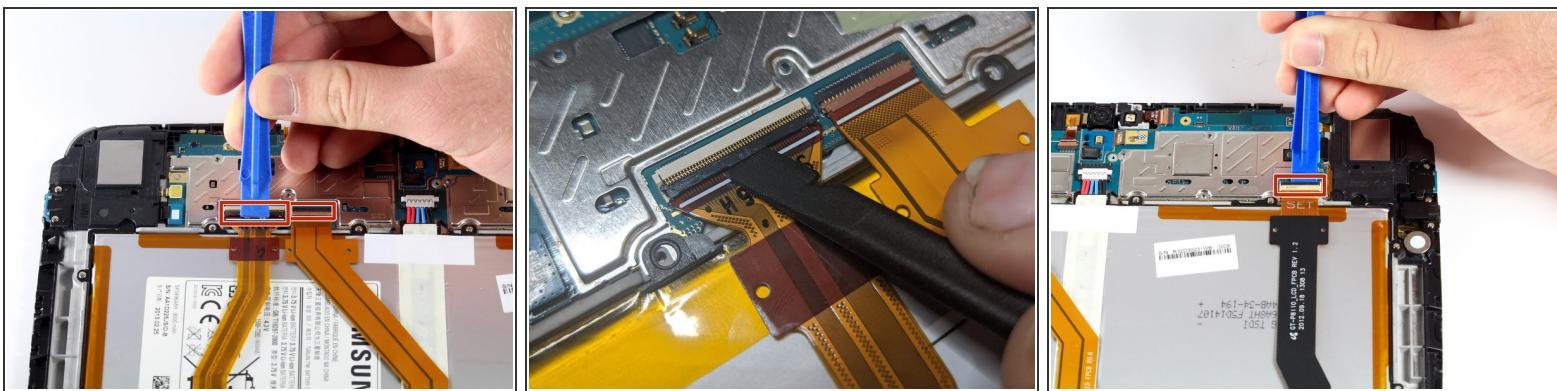



- Detach the three connector ribbons passing over the battery using the plastic opening tool.

## Step 5

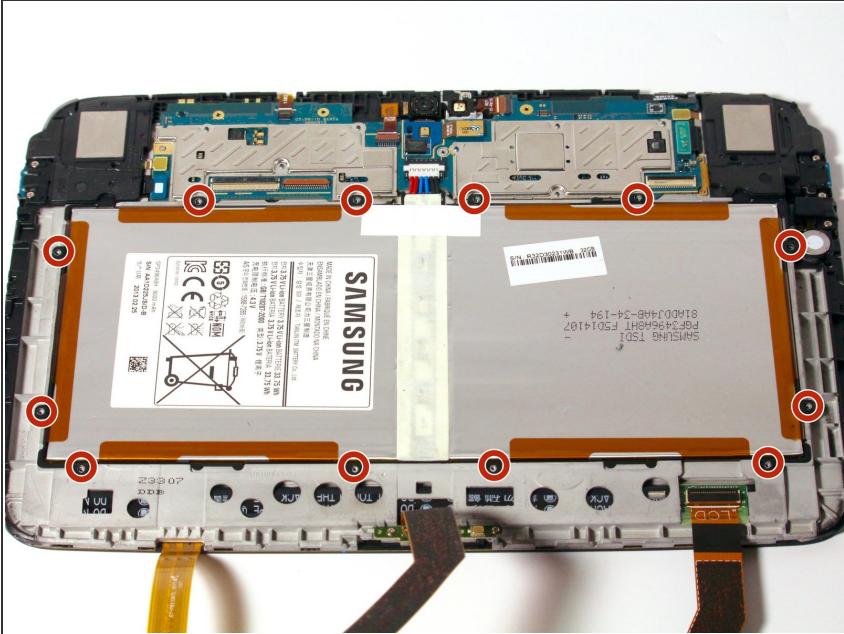

- Remove the twelve 2mm screws around the perimeter of the battery with a PH00 screwdriver.

## Step 6

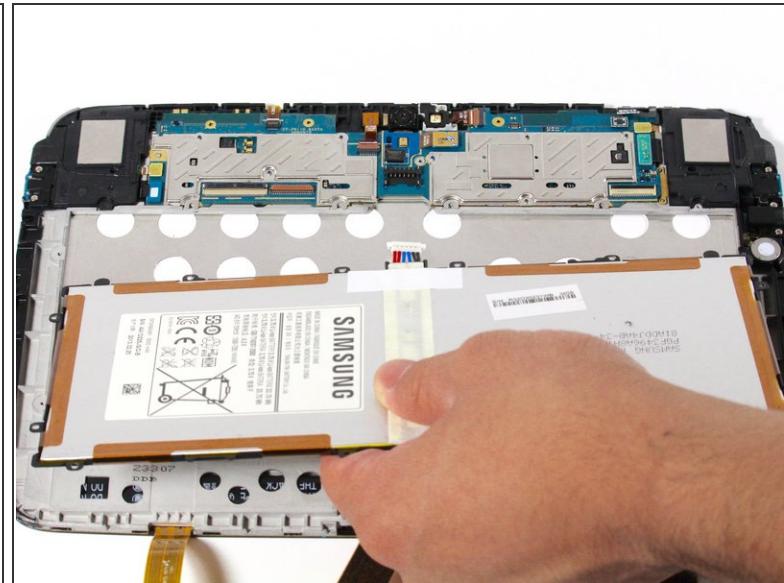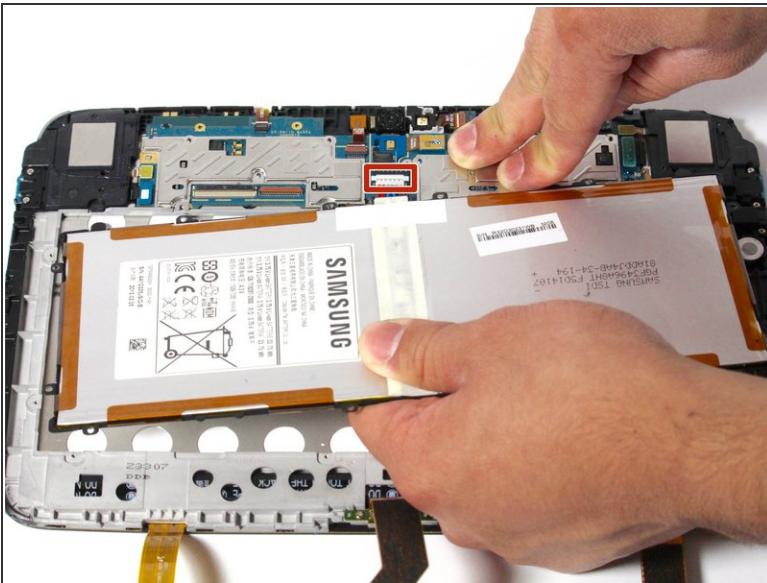

- Disconnect the battery by lifting it upward and pulling it away from the connector.

To reassemble your device, follow these instructions in reverse order.