



Ninja Ultima BL810 Power Plug Replacement

This guide will demonstrate how to disconnect the power plug.

Written By: Ryan James Gilroy




INTRODUCTION

This guide will demonstrate how to disconnect the power plug.

TOOLS:

- [Slip Joint Pliers \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

Step 1 — Power Plug

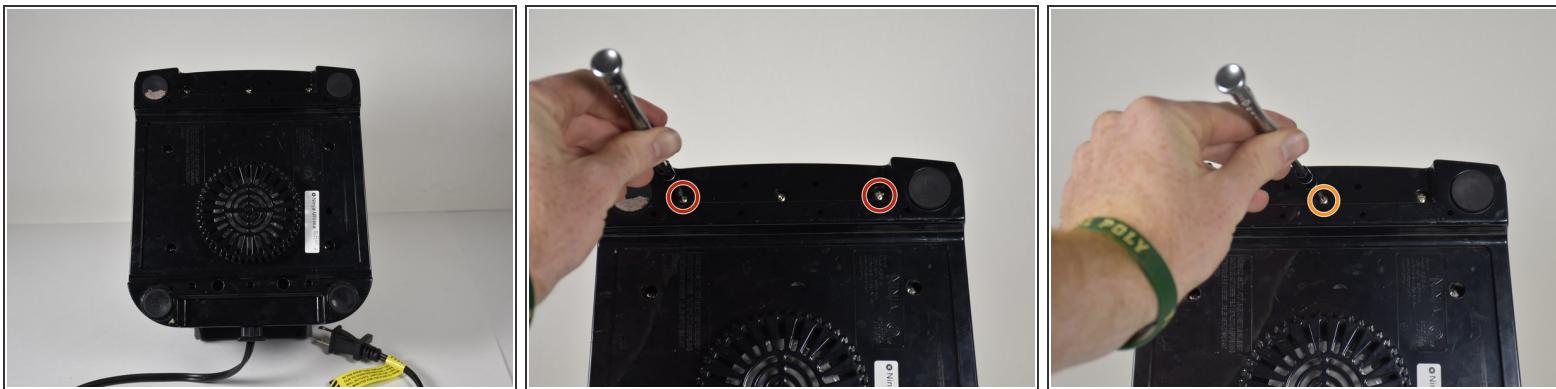

- Unscrew the Phillips #0 11mm screws.
- Unscrew the Torx Security #10 11mm screw.

Step 2



- Unscrew the six Phillips #2 11mm screws from the remainder of the bottom plate.
- Pull the bottom covering off of the blender.

Step 3



- Unscrew the two Phillips #2 9mm screws.
- Remove the plastic block.


Step 4



- Unscrew the four Phillips #2 11mm screws.
- Remove the plastic covers.

(i) Removing the top cover and then rotating the bottom cover into the same orientation works best.

Step 5

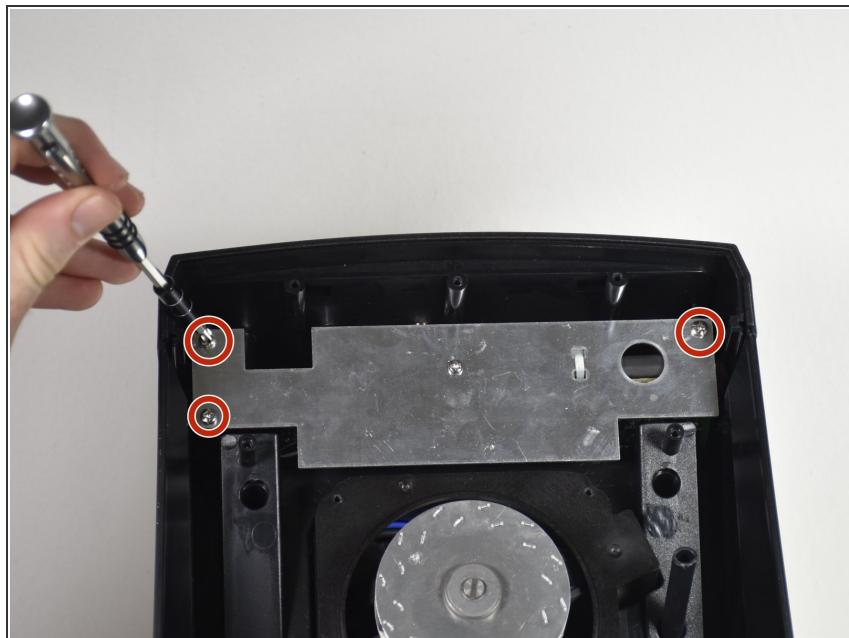

- Unscrew the three Phillips #2 9mm screws.
- (i)* This metal plate doesn't need to be completely removed, just adjusted to the side to continue working.

Step 6



- Unscrew the four Phillips #2 11mm screws.
- Pull the power cord through as shown to create slack.
- Remove plastic casing by lifting upwards.

Step 7



- Follow the power plug cords to find the right plastic caps.
- Squeeze the caps with pliers to loosen the grip.
- Pull the plastic caps off the twisted wires.

Step 8



- Untwist the two wires from each other and pull the zip tie off.

To reassemble your device, follow these instructions in reverse order.