




Nintendo WaveBird Wireless Controller Shoulder Buttons Replacement

Remove the shoulder buttons from the Nintendo WaveBird Wireless Controller.

Written By: Travis Taylor

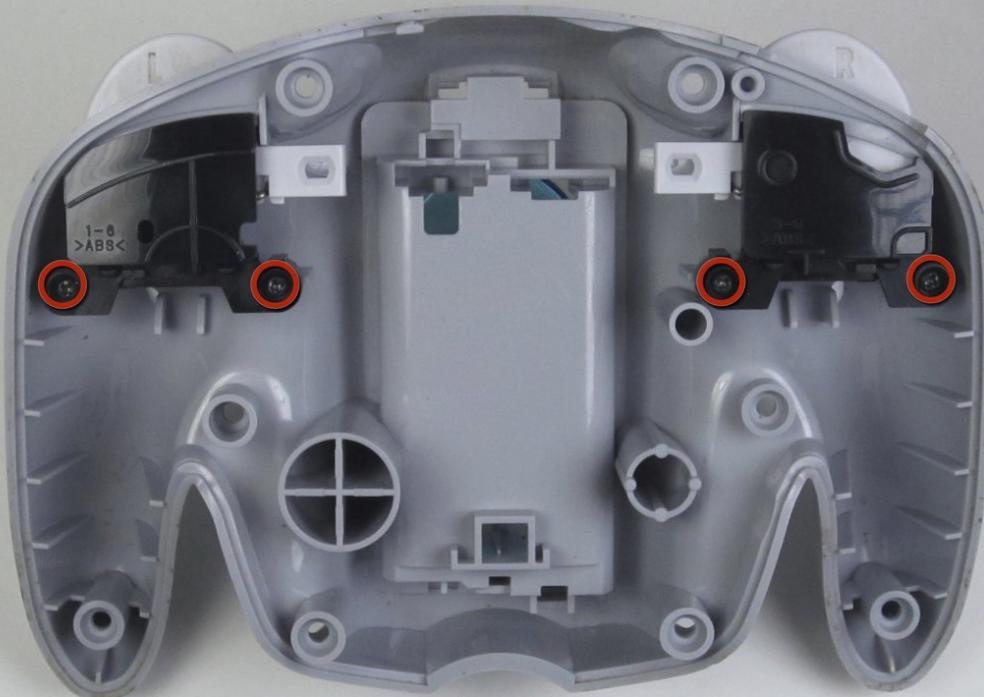

INTRODUCTION

This guide will show you the steps on installing the shoulder buttons. This will be helpful if the [shoulder buttons are not working](#) properly.

Only replace the faulty shoulder button(s).

TOOLS:

- [Y1 Tri-point Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

Step 2



- Take out each battery then put the covering back on.

Step 3 — Front Panel



- Remove the eight 9-mm Tri-Wing screws on the back panel with the Tri-wing Y1 screwdriver.
- During reassembly, firmly hold the panels of the controller together while replacing screws so the panels don't separate.

Step 4



- After each screws has been removed carefully turn over the controller, and place on a flat surface.
- Slowly separate the top panel from the bottom panel.

 The buttons are loose and may fall off of the motherboard.

- Once seperated set aside the top panel.

 During reassembly, make sure the front panel lines up with the buttons so they slide back into place.

Step 5 — Buttons



- Use tweezers to remove the buttons.
- ⓘ It may be easier to remove the A button off of the pad by lifting it with your fingers.
- ⚡ During reassembly, make sure all buttons are in their respective sockets so they match up with the front panel.

Step 6 — Motherboard




- Using tweezers remove the three grey button pads from the motherboard.

Step 7




- With your fingers gently grip the motherboard on both sides and lift it away from the back panel.
- i* To put the motherboard back into place, align the two metal clips under the motherboard with the slots in the back panel. The motherboard should fall into place.

Step 8 — Shoulder Buttons

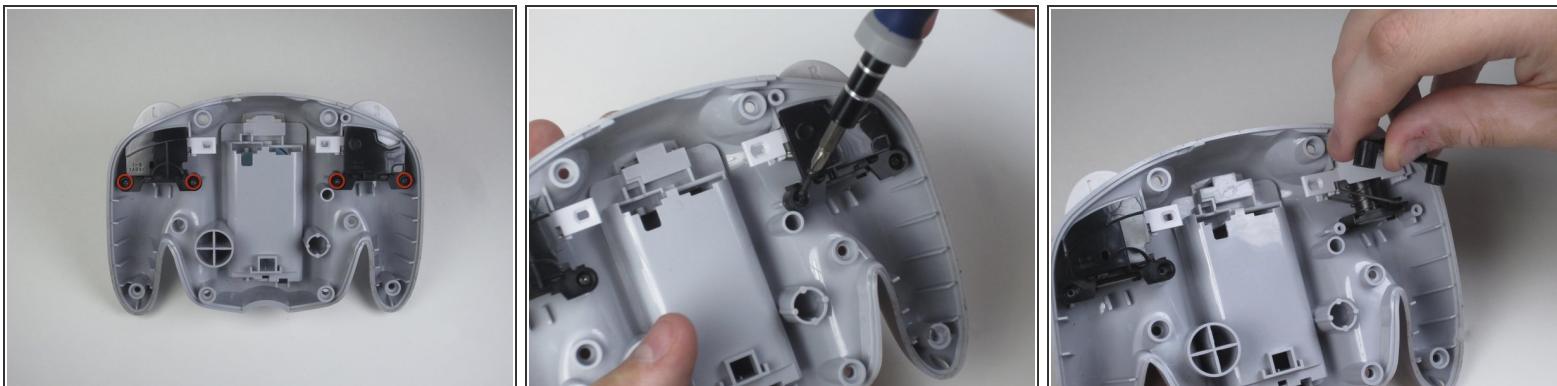

- Remove the four 9-mm Phillips head screws with the Phillips #1 screwdriver.
- Lift off the black plastic covers that secure the shoulder buttons.

Step 9

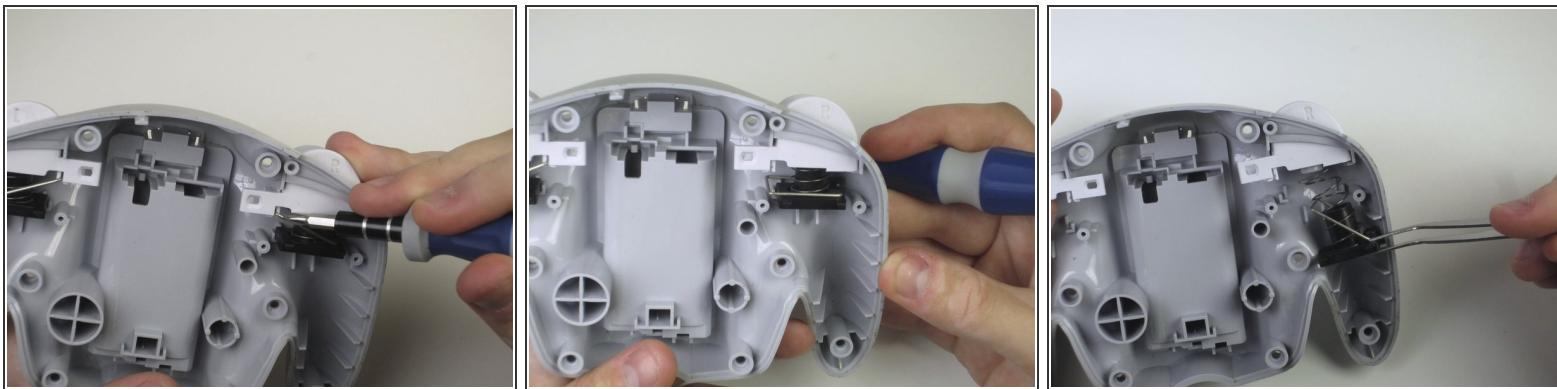


- Using the screwdriver, carefully unlock the spring clip from its holder.
- Once unlocked, use tweezers to pull springs out of its holster.

⚠ The springs will try to jump out. Be careful not to lose them when setting them aside.

ⓘ When reattaching the clips, use tweezers to align the clip with its holder and press in until it clicks.

Step 10

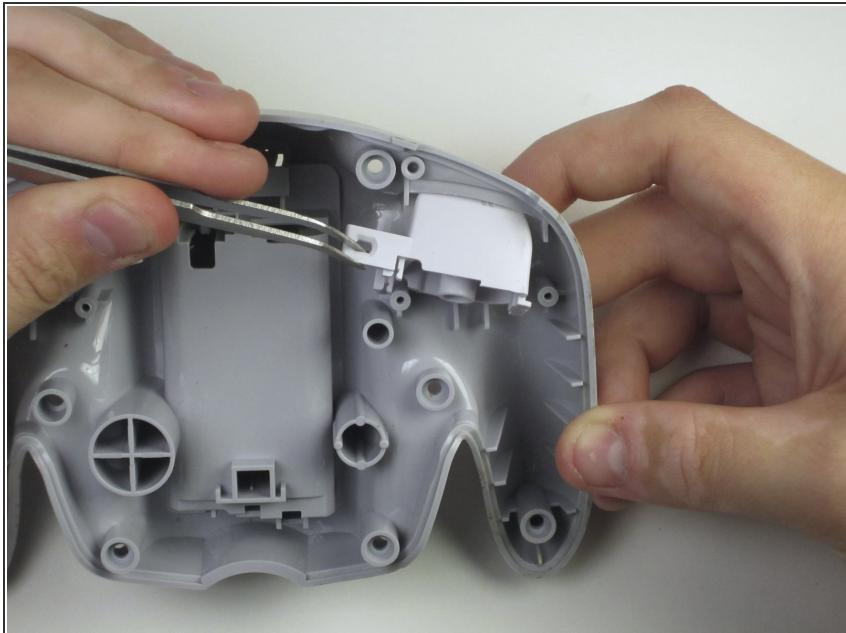

- Once the spring is removed, take out the shoulder buttons by pulling down and out.

To reassemble your device, follow these instructions in reverse order.

