



Nokia 3310 3G Camera Replacement

This guide will detail the replacement of the rear facing camera on the Nokia 3310 3G.

Written By: Taylor Lyford



INTRODUCTION

In the event of a drop, the rear camera on the Nokia 3310 3G can be damaged. This guide will show the steps necessary to replace it.

TOOLS:


- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Battery



- Using the thumbtab molded on the bottom of the phone, pry the back cover off using either a fingernail or a plastic opening tool.

Step 2

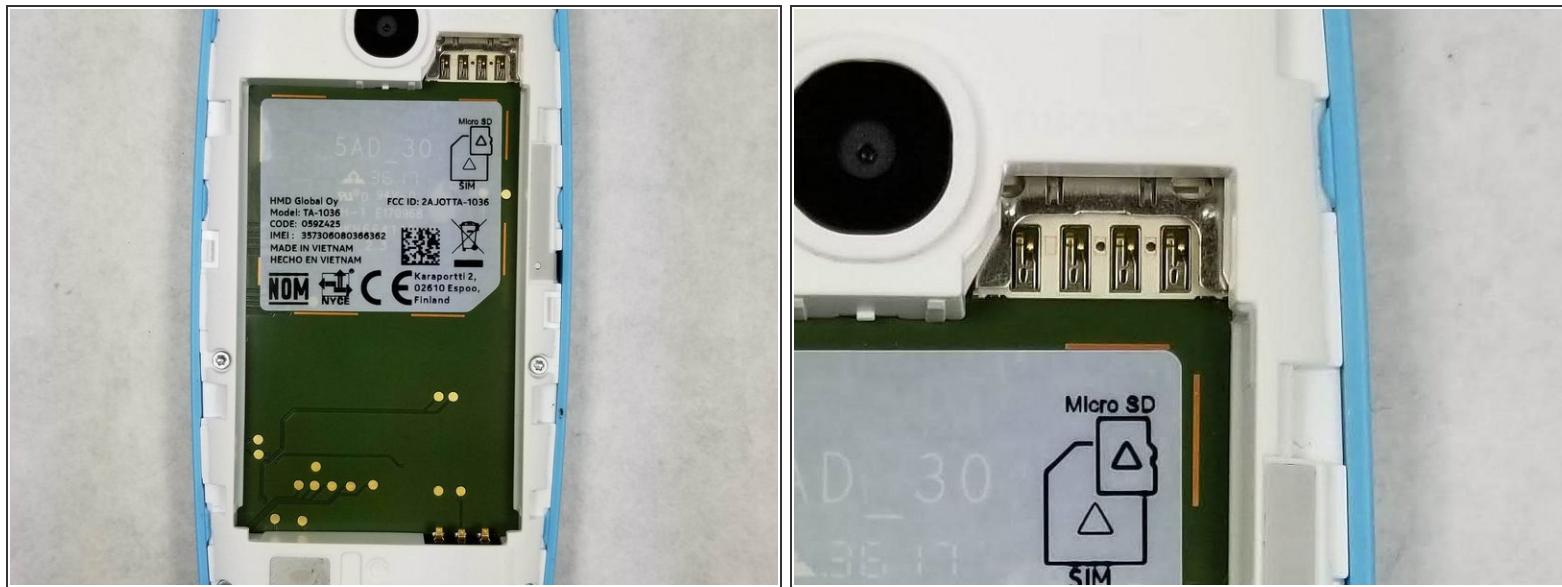


- There is a molded notch in the white frame of the phone near the top right of the battery. Using either a finger or a plastic opening tool, utilize the notch to lift up on the battery, and remove it from the device.
- *(i)* This specific device did not come with a battery.

Step 3 — Frame





- Using a T5 screwdriver bit, remove the (6) 5.0 mm screws along the outside edge of the frame.
- Using a metal spudger, wedge the 6 plastic tabs molded into the outer shell away from the frame to lift up and remove it.

Step 4 — Camera

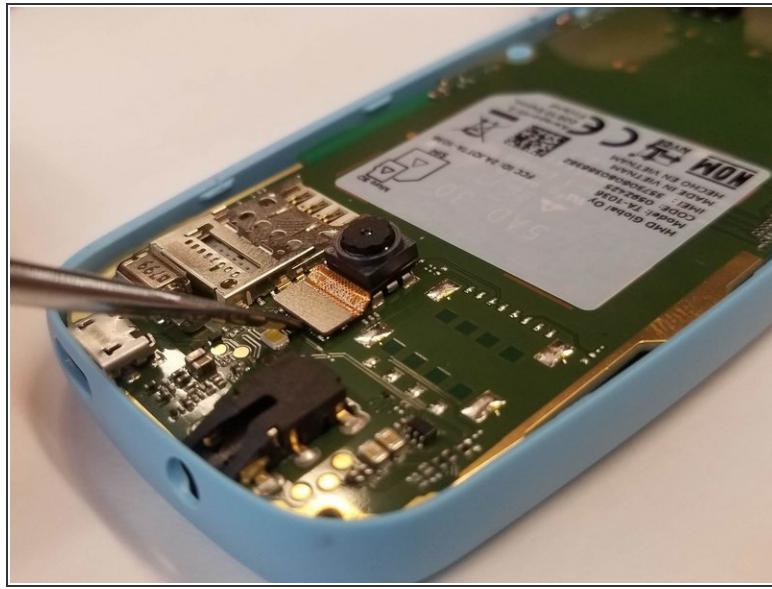

- Using the pointed metal spudger from the metal spudger set, insert the tool underneath the small snap clip, and disconnect it by lifting it up.

Step 5

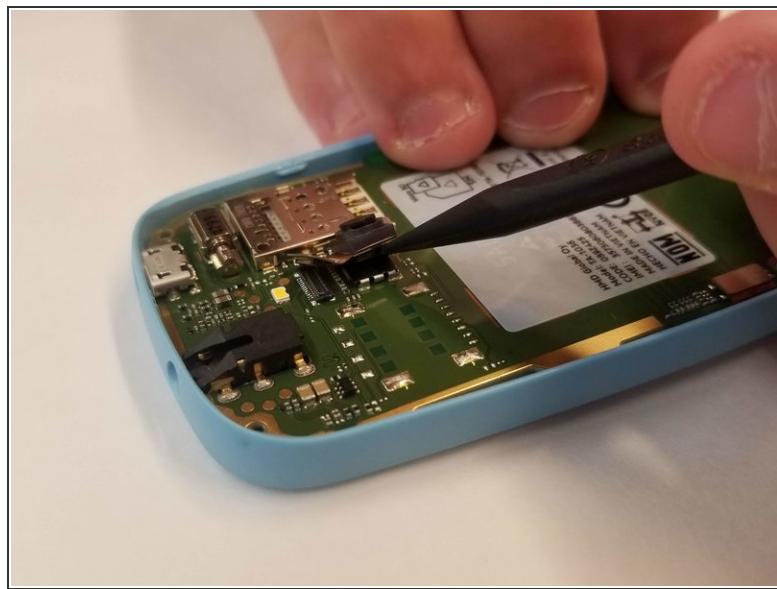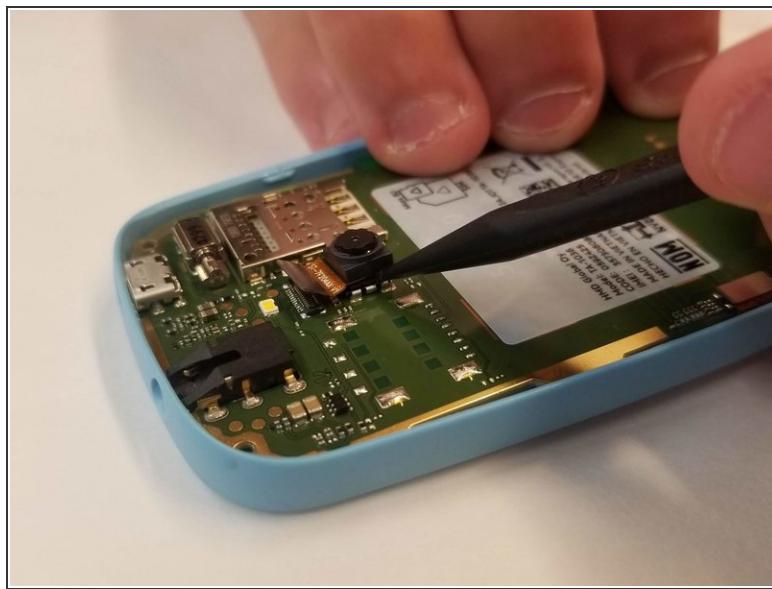

- The camera is held in with double sided and foam. Using the spudger, lift up on the camera to remove it from the motherboard of the phone.

To reassemble your device, follow these instructions in reverse order.