



Nokia 3310 3G Keyboard Replacement

This guide will help you replace your Nokia 3310 3G keyboard.

Written By: Aaron LeBlanc



INTRODUCTION

This guide shows a step by step guide to fully access the keyboard, to clean it if it is sticking or completely replace the keypad if it is broken.

TOOLS:


- [Metal Spudger \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

Step 1 — Battery



- Using the thumbtab molded on the bottom of the phone, pry the back cover off using either a fingernail or a plastic opening tool.

Step 2

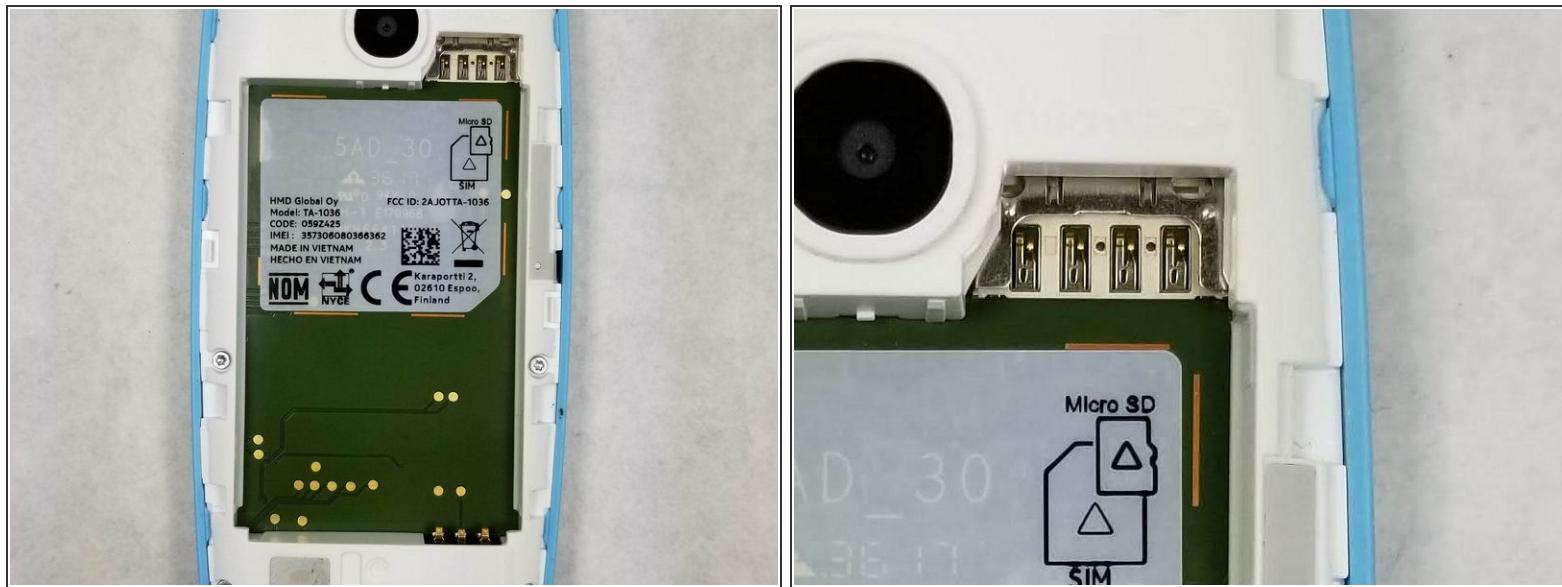

- There is a molded notch in the white frame of the phone near the top right of the battery. Using either a finger or a plastic opening tool, utilize the notch to lift up on the battery, and remove it from the device.
- *(i)* This specific device did not come with a battery.

Step 3 — Frame



- Using a T5 screwdriver bit, remove the (6) 5.0 mm screws along the outside edge of the frame.
- Using a metal spudger, wedge the 6 plastic tabs molded into the outer shell away from the frame to lift up and remove it.

Step 4 — Motherboard




- Use a spudger to simultaneously leverage the shell away and the motherboard up from the body of the shell.

Step 5 — Keyboard



- Using a spudger, unclip the bottom left snap to unplug the keyboard. The image shows the motherboard rotated 90 degrees counterclockwise

Step 6

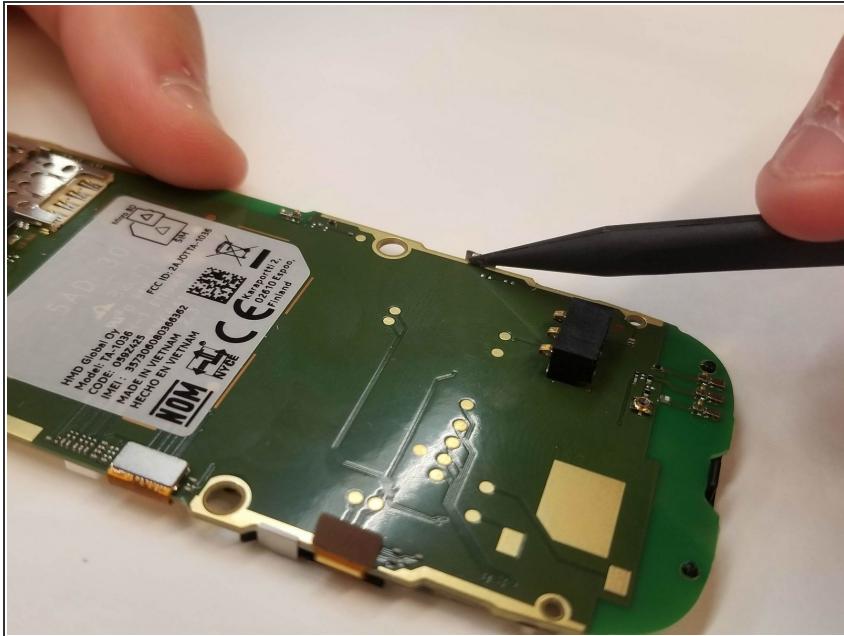

- Using your thumb, push the tab on the right side of the motherboard over to the right and then push downward to unclip the keyboard. It should fall away.

To reassemble your device, follow these instructions in reverse order.