




Nokia Lumia 925 Battery Replacement

This is a guide for Nokia Lumia 925 battery.

Written By: Guillermo Lara

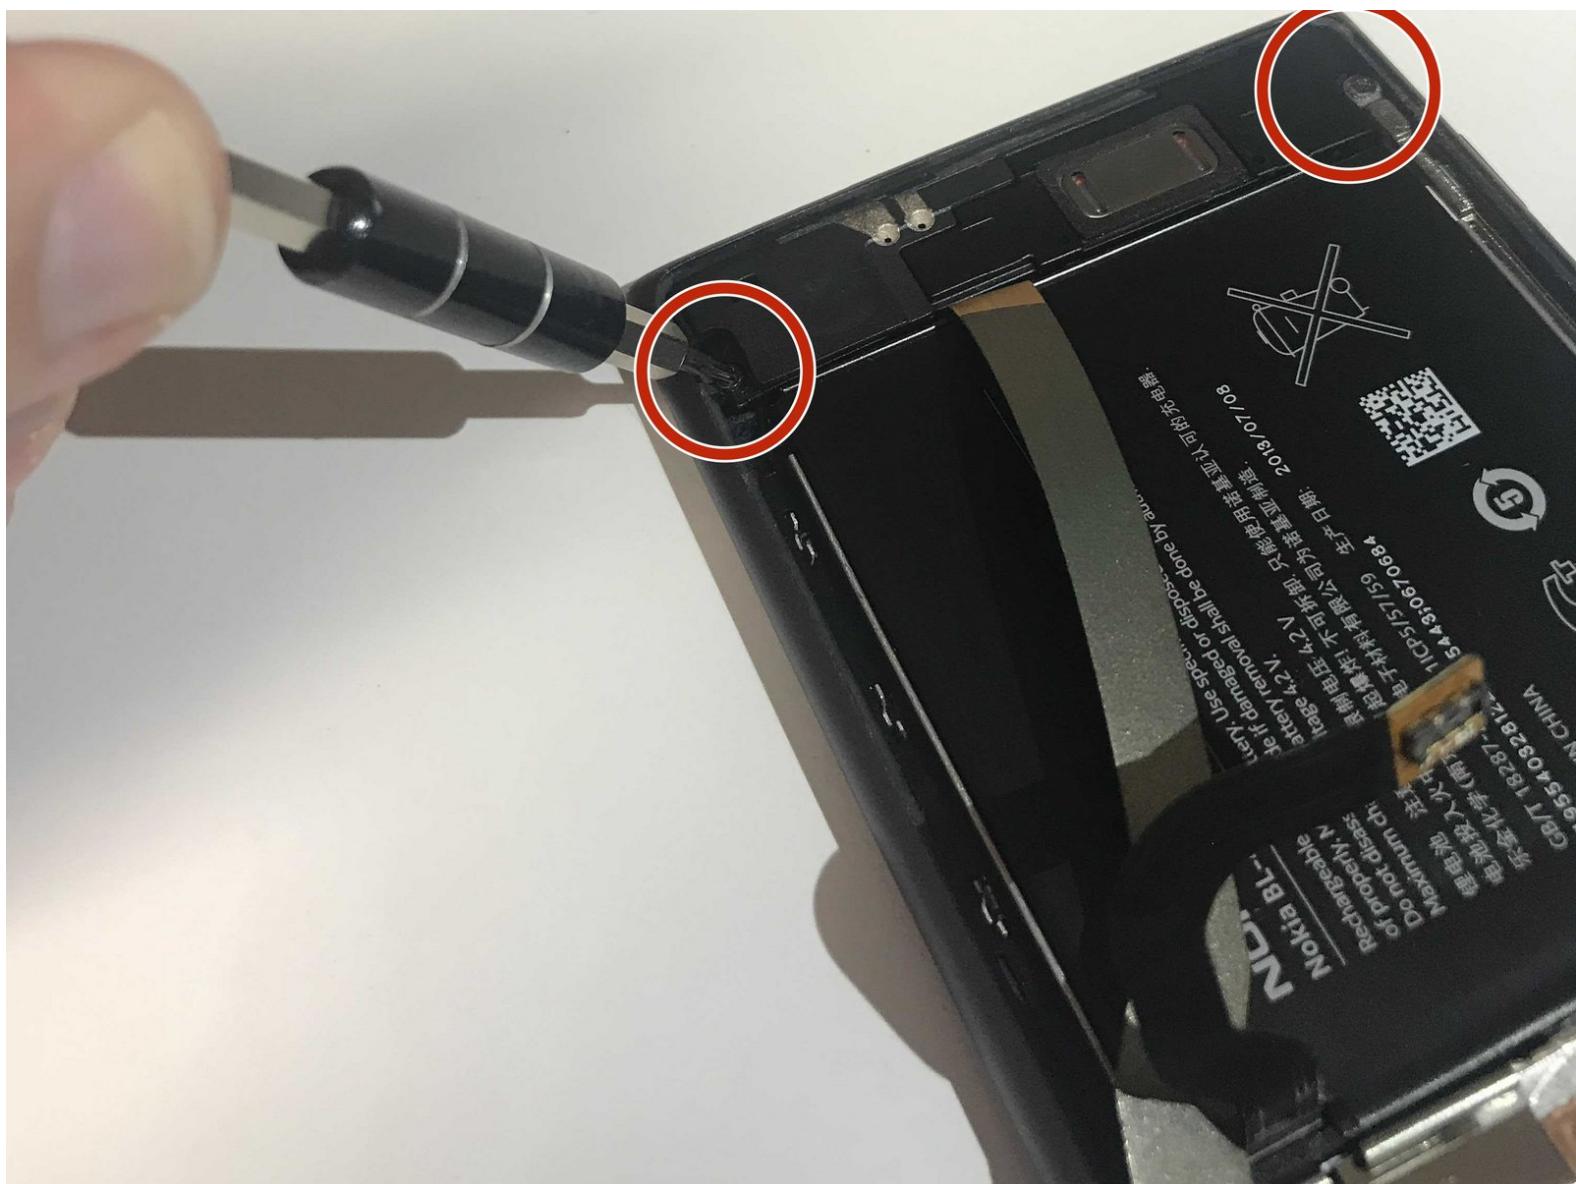

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)
- [ESD Safe Tweezers Blunt Nose \(1\)](#)
- [T7 Torx Screwdriver \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

 **PARTS:**

- [Nokia Lumia 925 Battery \(1\)](#)


Step 1 — Motherboard



- Remove the sim card holder by inserting tweezers into the hole. Push down and the holder will spring back up.
- Pull out the holder until it is completely separate.

i Something like a paperclip will work if there are no tweezers available.

Step 2

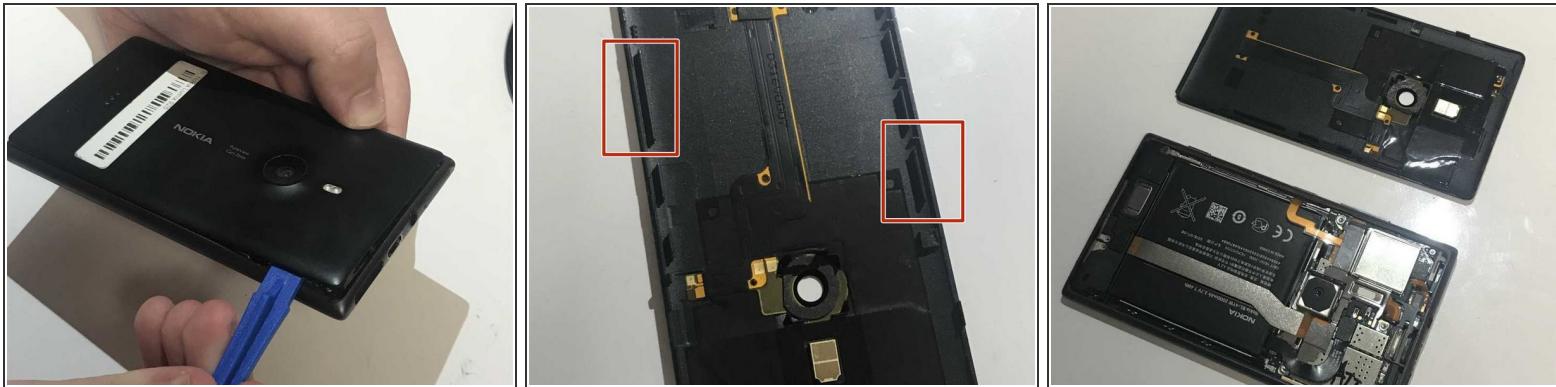

- Slide a plastic opening tool under the back cover.
- Slide the tool around the outsides of the cover to fully dislodge the pins holding the cover to the phone.



 Some pins are facing the opposite way from the others.

Step 3





- Remove the 3 screws using the T7 Torx screwdriver.
- Unclip the black tab connector.

Step 4

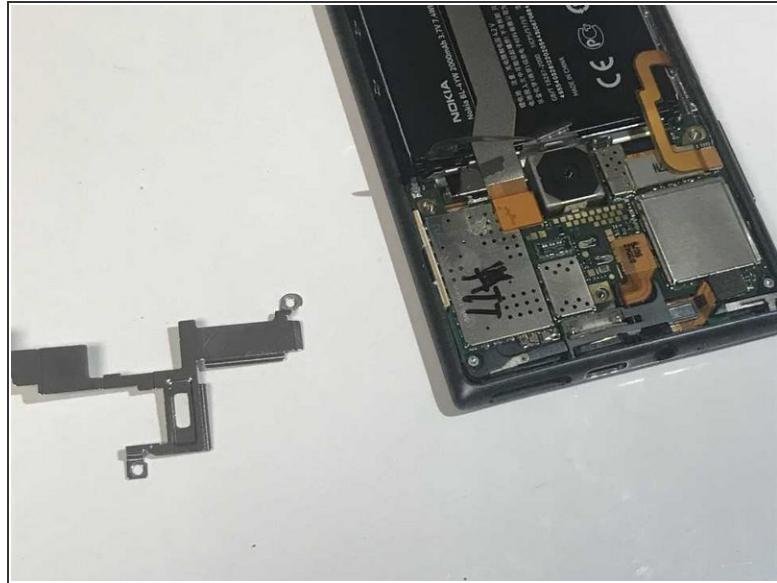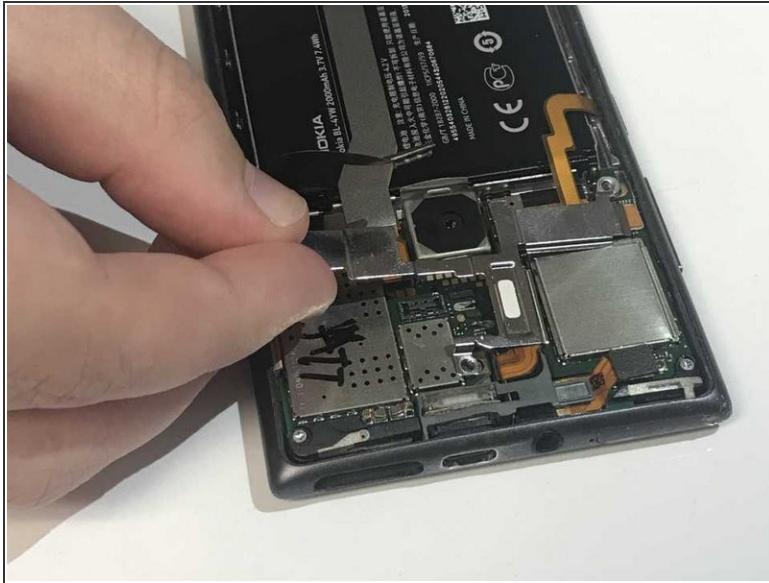



- Remove the silver metal cover.

Step 5

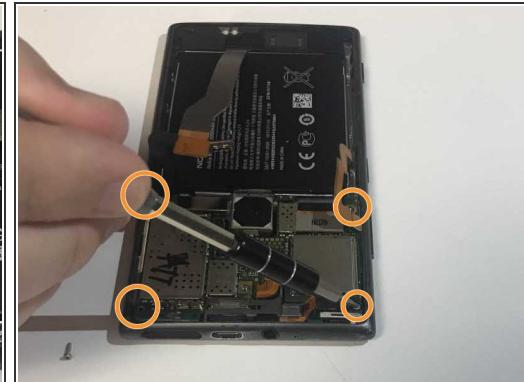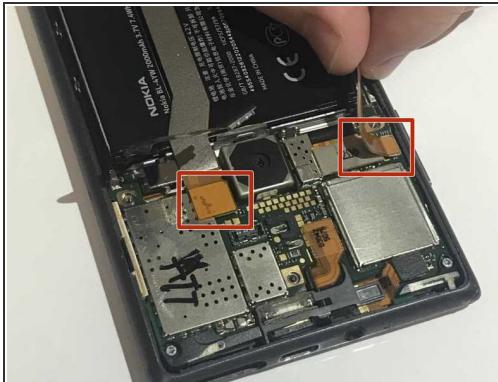

- Unclip the two orange tabs.
- Remove the four silver screws using the T5 Torx screwdriver.

Step 6

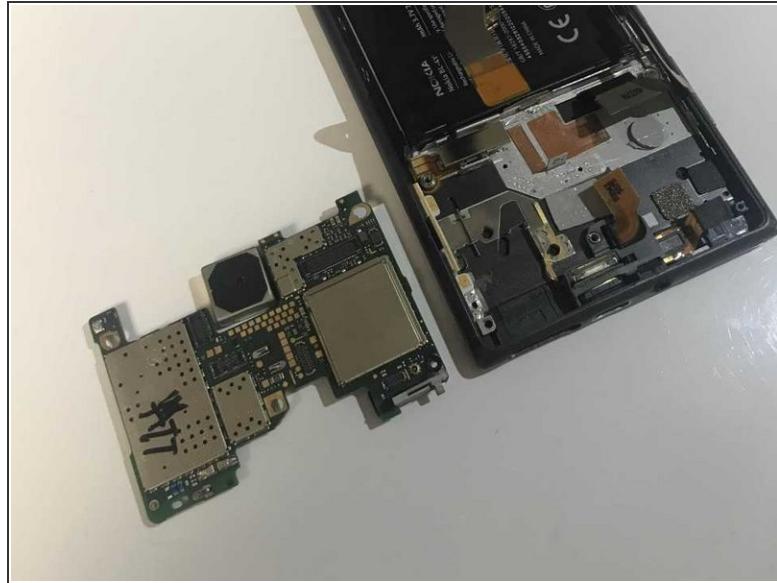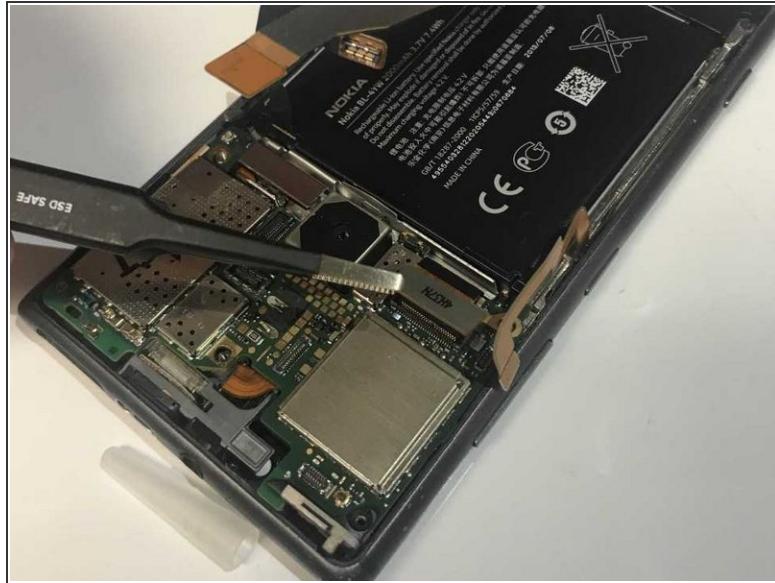

- Remove the motherboard by sliding tweezers between it and the back of the screen. Lift up.


Step 7 — Display



- Push the screen from the inside of the phone.
- Pull the screen off.

ⓘ Slide the electronic strip through the small opening.

Step 8 — Speaker

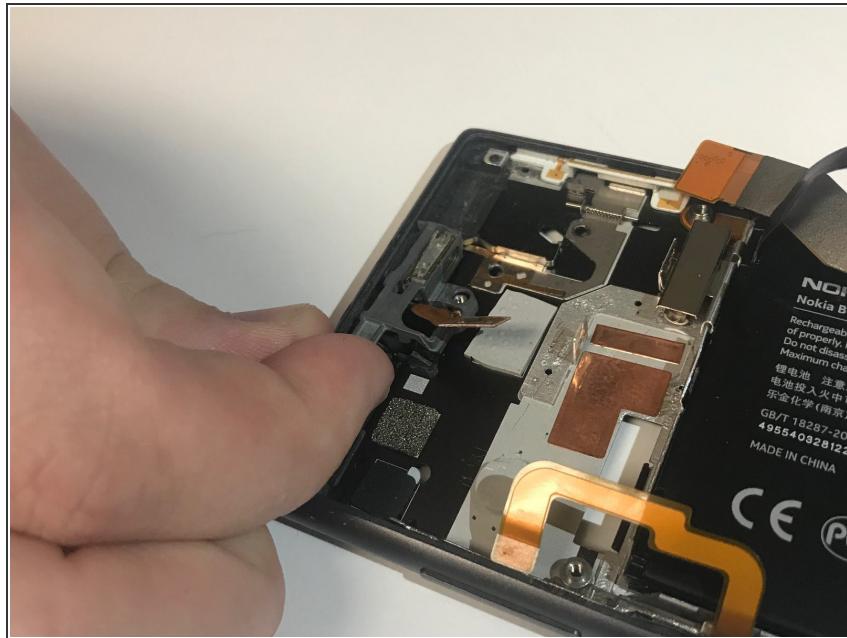


- Locate the grey speaker/camera cover.
- Carefully remove the cover with either a pair of tweezers or your fingers.

Step 9



- With a pair of tweezers, gently remove the orange colored tab closest to the speaker.

Step 10 — Front Camera

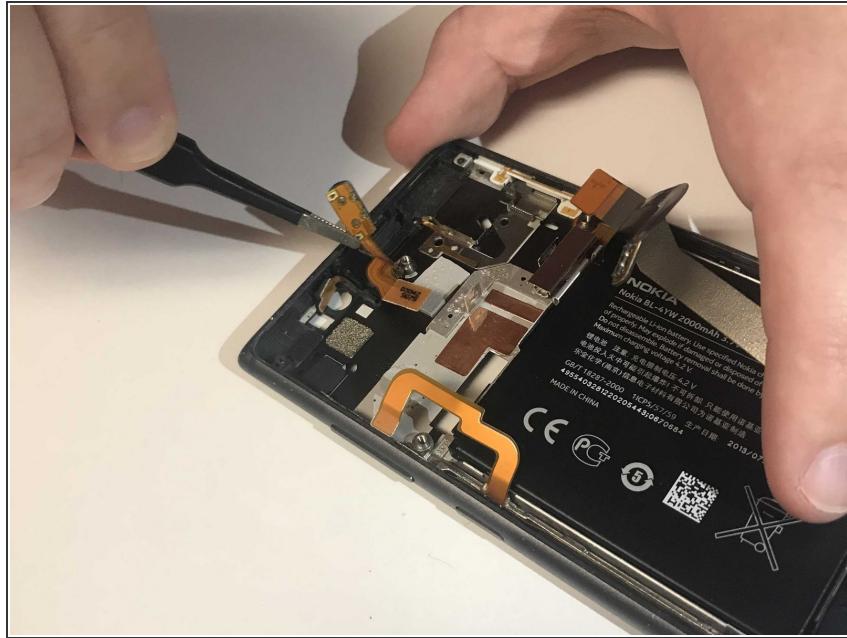


- Pull at the orange section until it becomes loose.
- *(i)* It is located in the upper leftmost section of the phone behind the front camera.

Step 11



- Pull vertically on the same orange section until the front camera comes out.
-  The front camera as well as the speaker may come out after the last step so be careful.

Step 12 — Battery

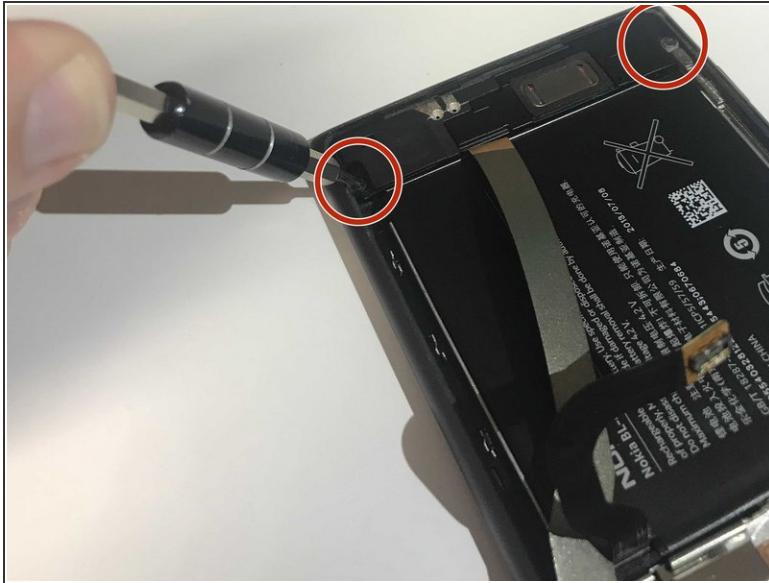

- Remove the two black screws by using the T5 Torx screwdriver.

Step 13




- Carefully pull the metal rod out.

Step 14



- Pry off the speaker.
- *i* Apply heavy pressure, and pull towards the battery.

Step 15

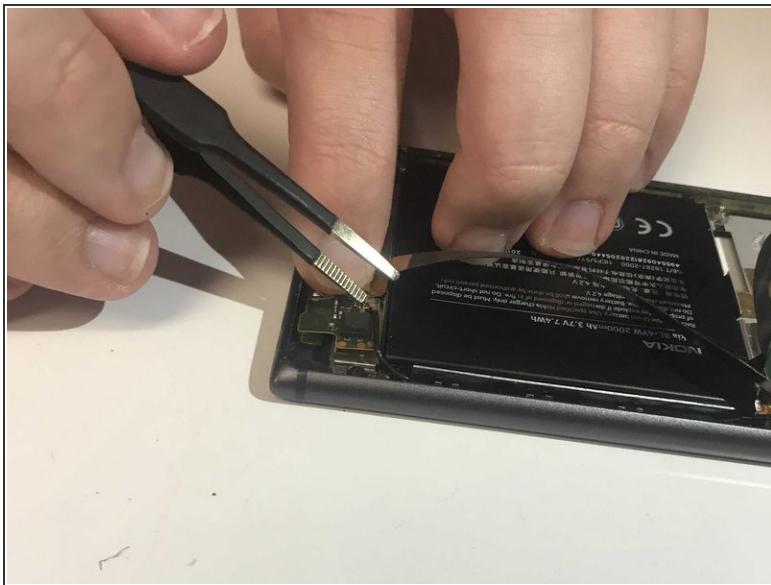

- Unclip the black wire.


Step 16



- Peel off the electronic strip.

⚠ Be careful not to tear.

Step 17

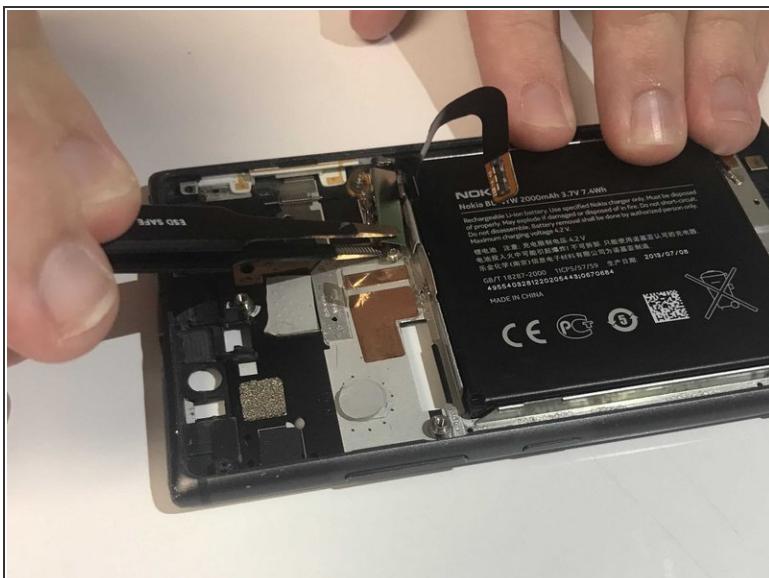

- Pry off the metal vibrating unit using tweezers.

⚠ This requires a lot of force.

Step 18



- Insert the tweezers under the corner of the battery, and lift out.

(i) You have successfully removed the battery.

To reassemble your device, follow these instructions in reverse order.