




# Nokia N70 Display Replacement

This guide shows the procedure for correctly installing/removing the Nokia N70's display screen.


Written By: Justin

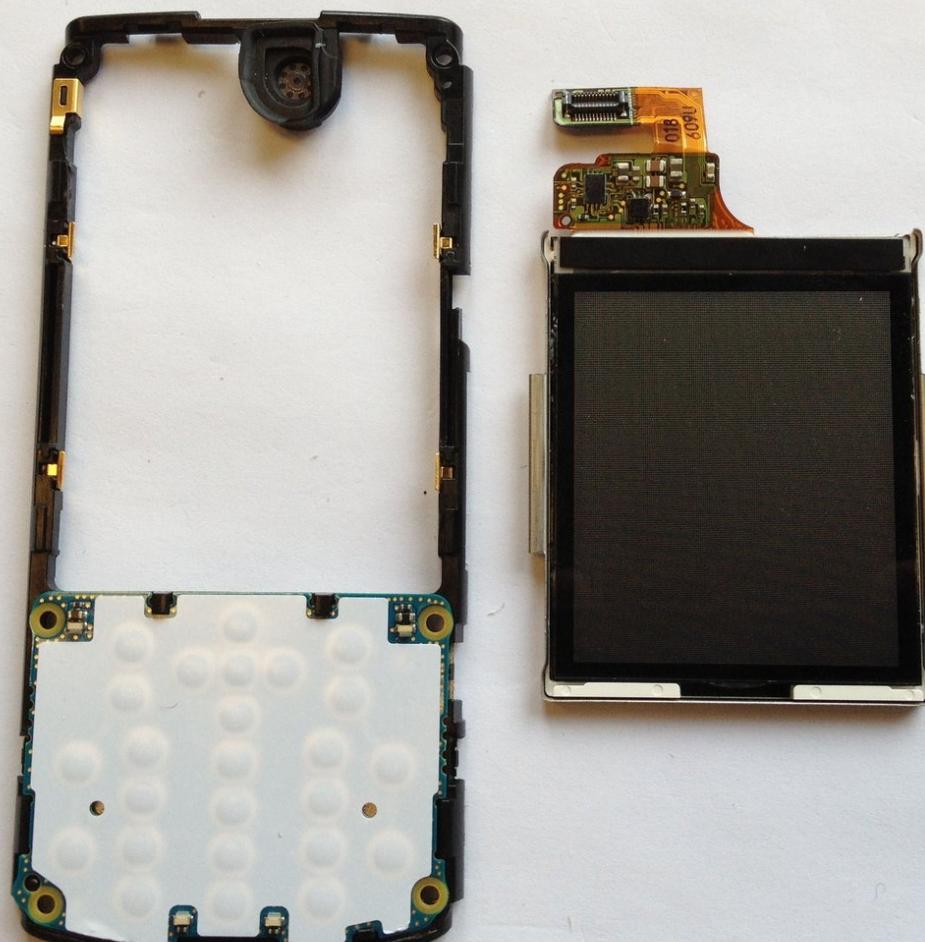

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)

## Step 1 — Battery

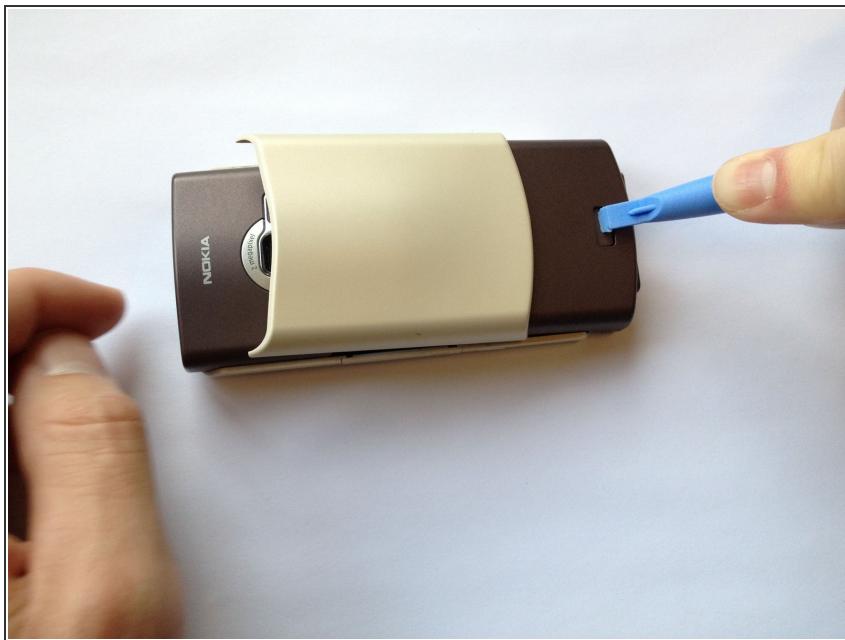

- Orient the phone as shown.
- Press the button with the plastic opening tool and slide the back case downward relative to the phone.

## Step 2



- Remove the battery cover by lifting it away from the phone.

## Step 3




- Insert the plastic opening tool into the marked space.
- Lift up the side of the battery closest to the bottom edge of the phone using the plastic opening tool.

## Step 4



- Remove the battery from the phone.

## Step 5 — Keypad

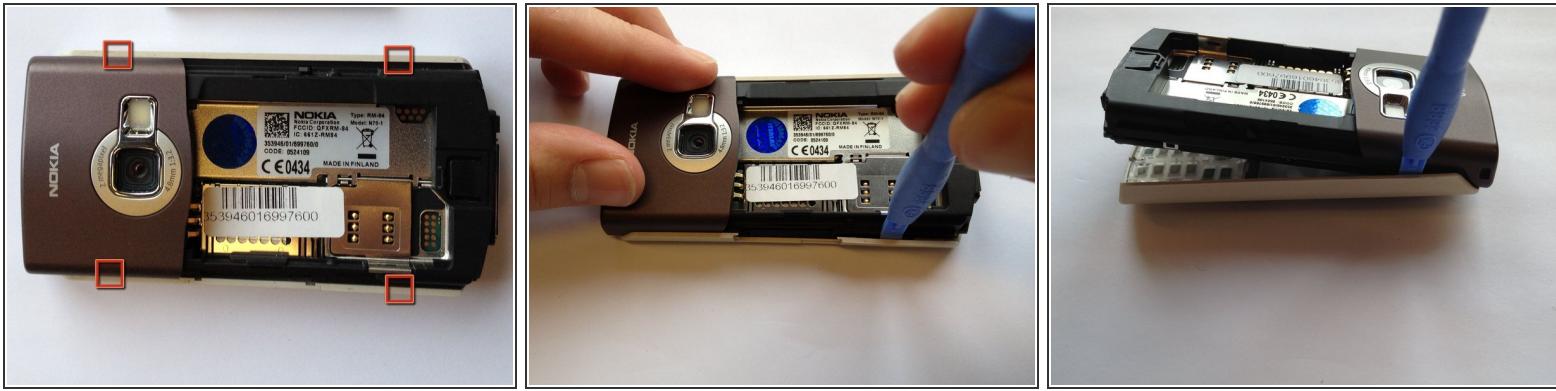


- Insert the plastic opening tool in the marked areas in between the front and back covers.
- Pry each corner with the plastic opening tool until the front case completely detaches.

## Step 6




- Orient the phone so that the keypad is facing you.
- Remove the keypad by lifting it away from the phone.

## Step 7 — Display

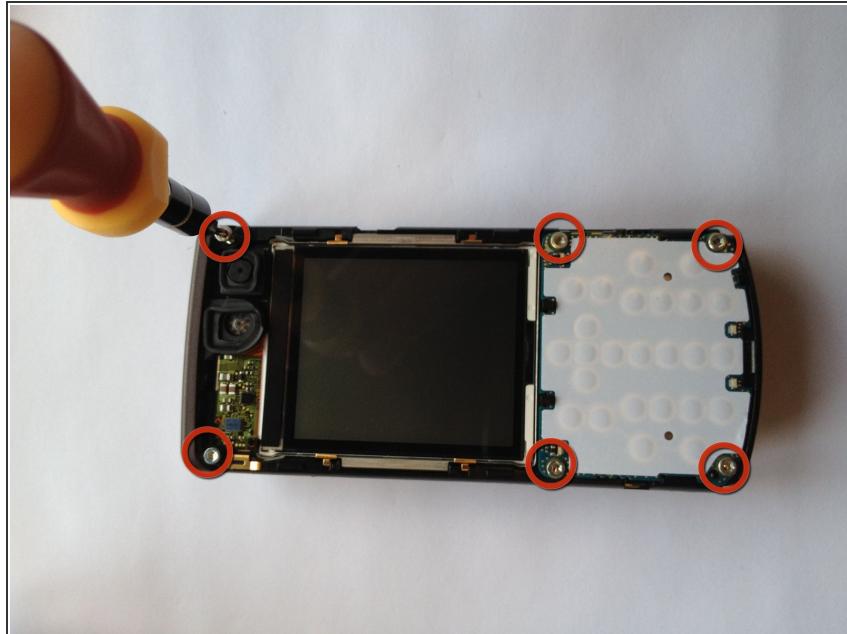


- Using a torx T6 screwdriver remove the six 15 mm torx screws.

## Step 8

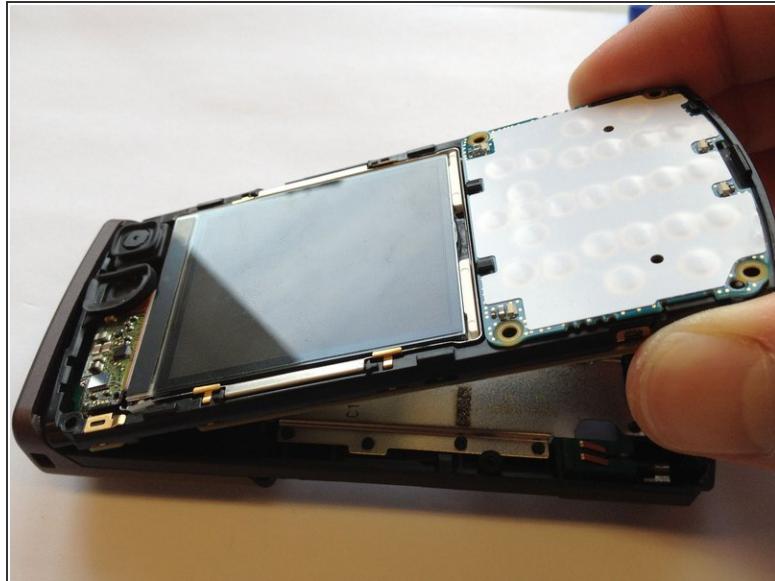

- Separate the front panel of the phone by pulling the bottom of the panel at a 45 degree angle.

## Step 9

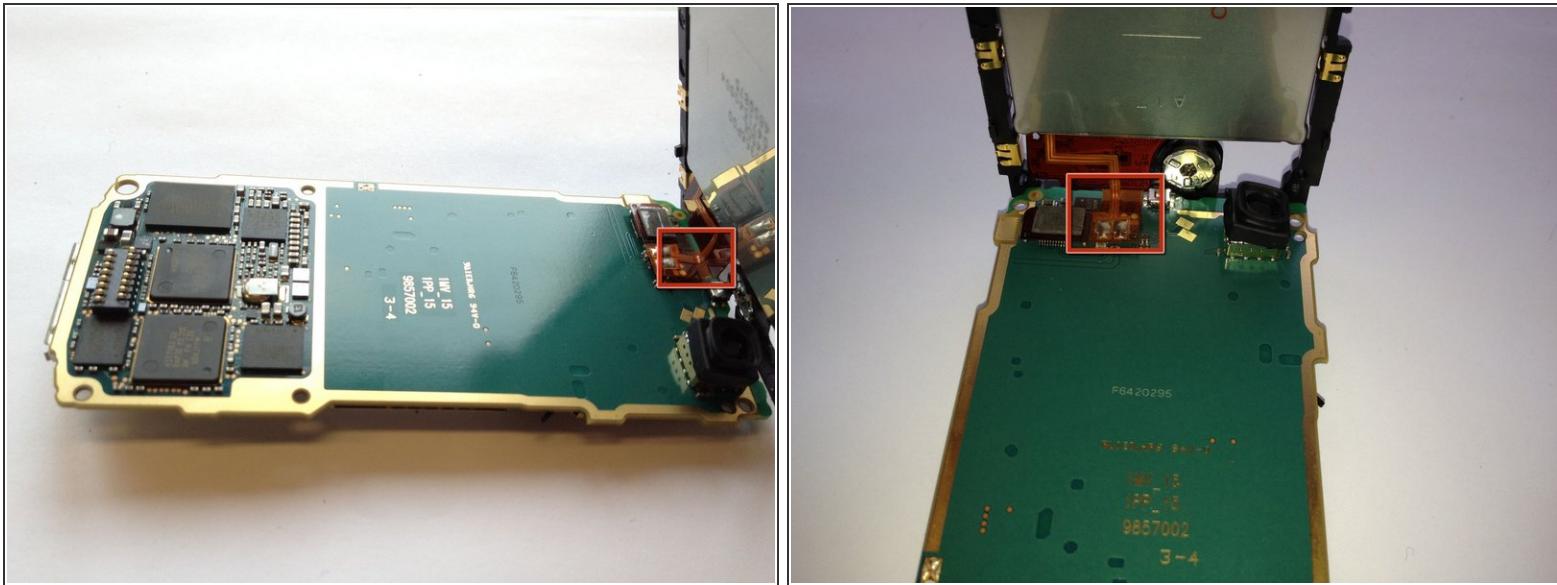

- Lift the bottom of the display circuit board up and locate the ribbon connection located where the two circuit boards intersect.
- Remove the ribbon connection that connects the two circuit boards.

## Step 10



- While pulling back each of the clamps marked in the image, lift out each side of the screen independently.

**⚠** Be careful when using the plastic prying tool to not scratch the display.

To reassemble your device, follow these instructions in reverse order.