




Nokia N70 Speaker Replacement

This guide shows the procedure for correctly installing a new media speaker into a Nokia N70.


Written By: Justin

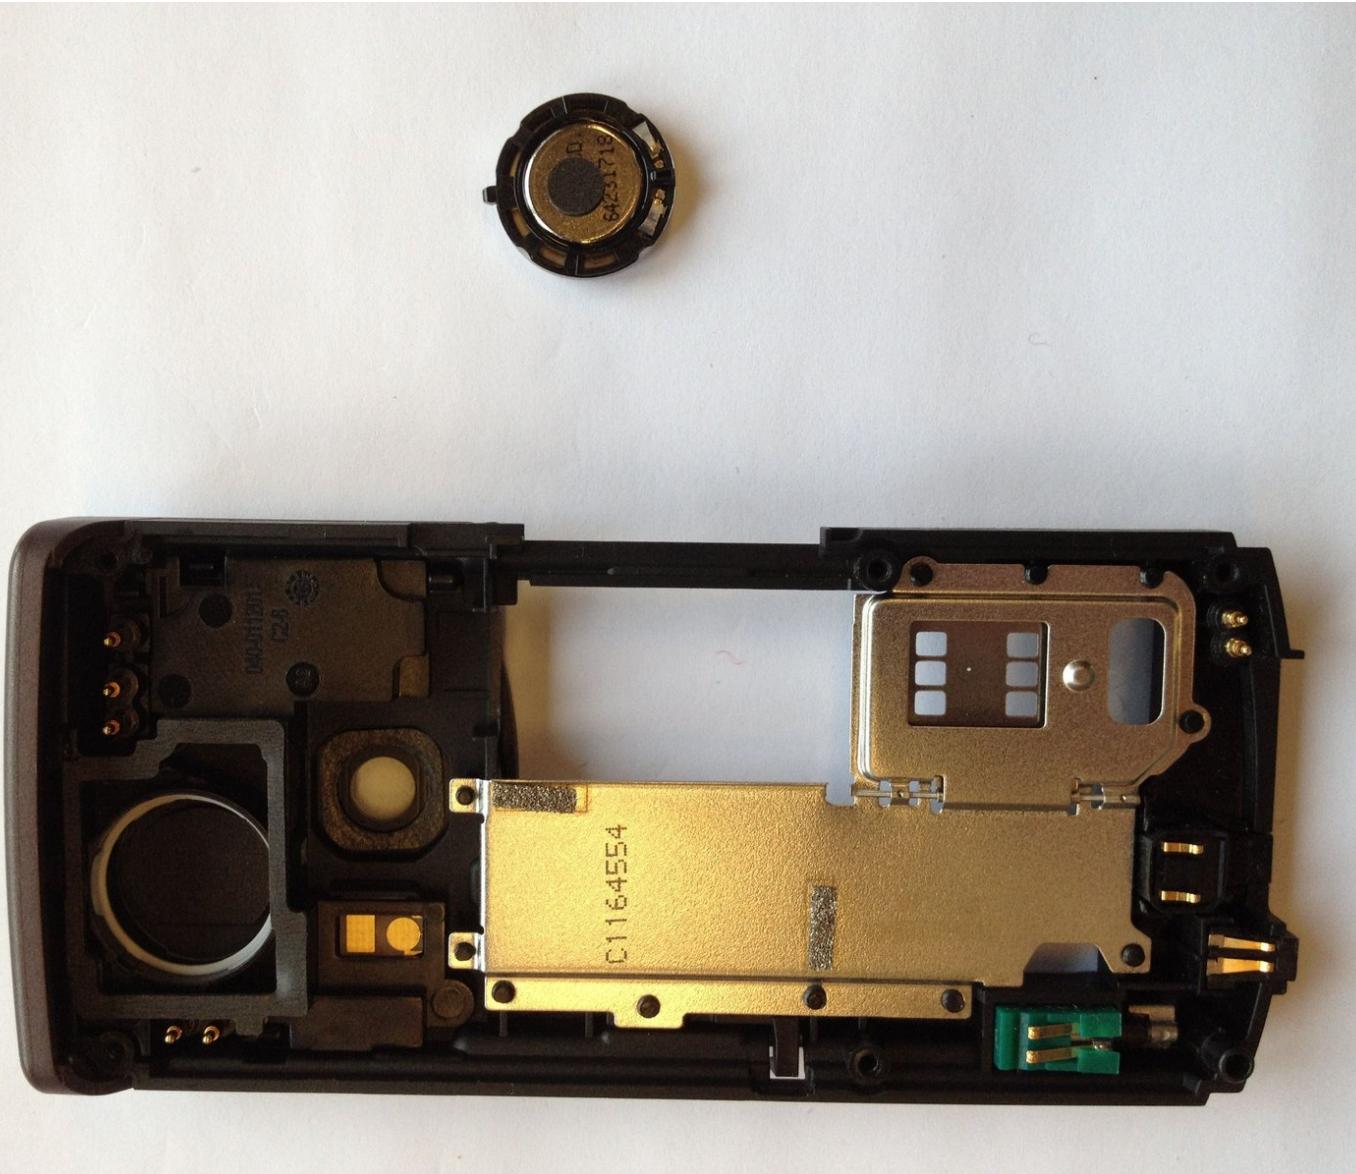

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)

Step 1 — Battery

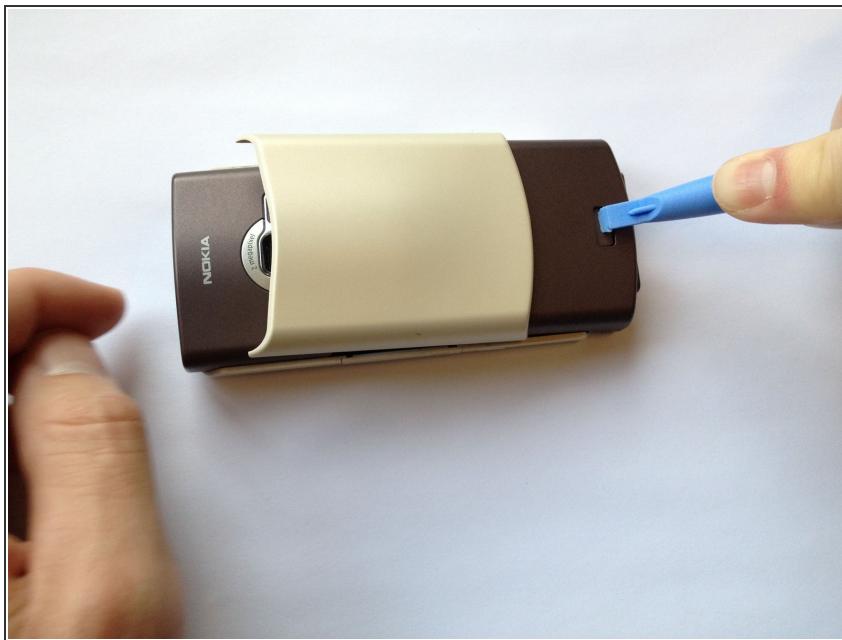

- Orient the phone as shown.
- Press the button with the plastic opening tool and slide the back case downward relative to the phone.

Step 2



- Remove the battery cover by lifting it away from the phone.

Step 3




- Insert the plastic opening tool into the marked space.
- Lift up the side of the battery closest to the bottom edge of the phone using the plastic opening tool.

Step 4



- Remove the battery from the phone.

Step 5 — Keypad

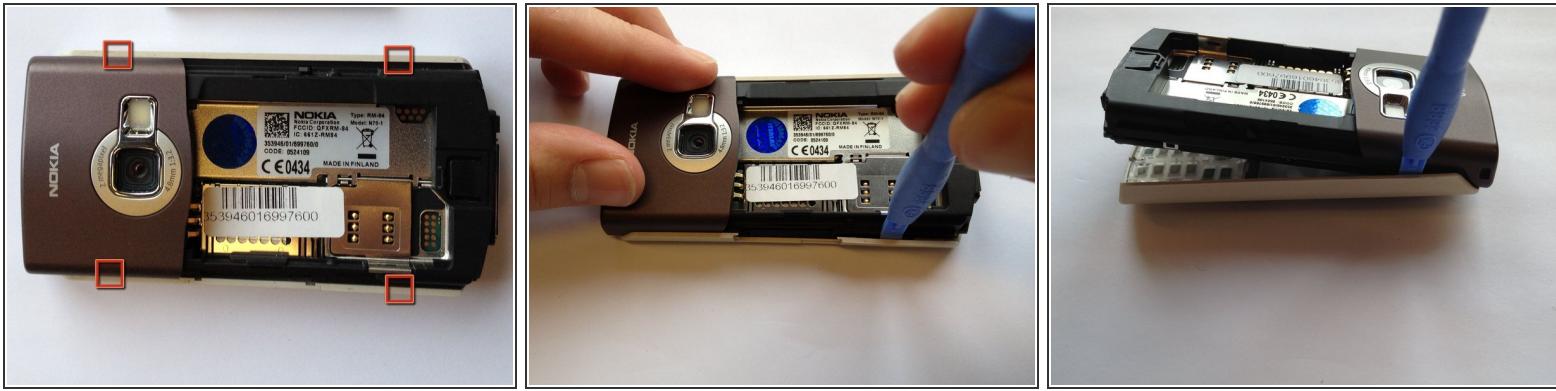


- Insert the plastic opening tool in the marked areas in between the front and back covers.
- Pry each corner with the plastic opening tool until the front case completely detaches.

Step 6



- Orient the phone so that the keypad is facing you.
- Remove the keypad by lifting it away from the phone.

Step 7 — Speaker

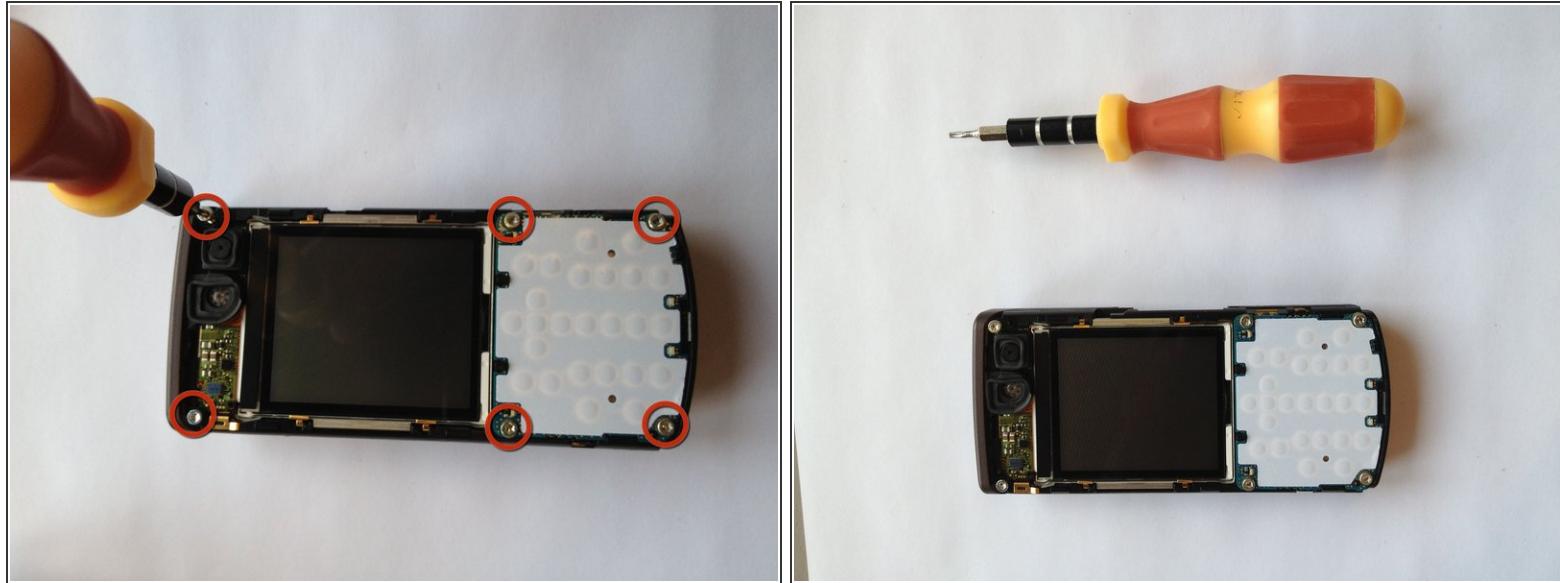


- Use the T6 Torx screwdriver to remove the six 15 mm Torx screws.

Step 8



- Lift the bottom edge of the front panel at a 45 degree angle.
- Remove front panel by slowly pulling it away from the phone at a 45 degree angle.

Step 9

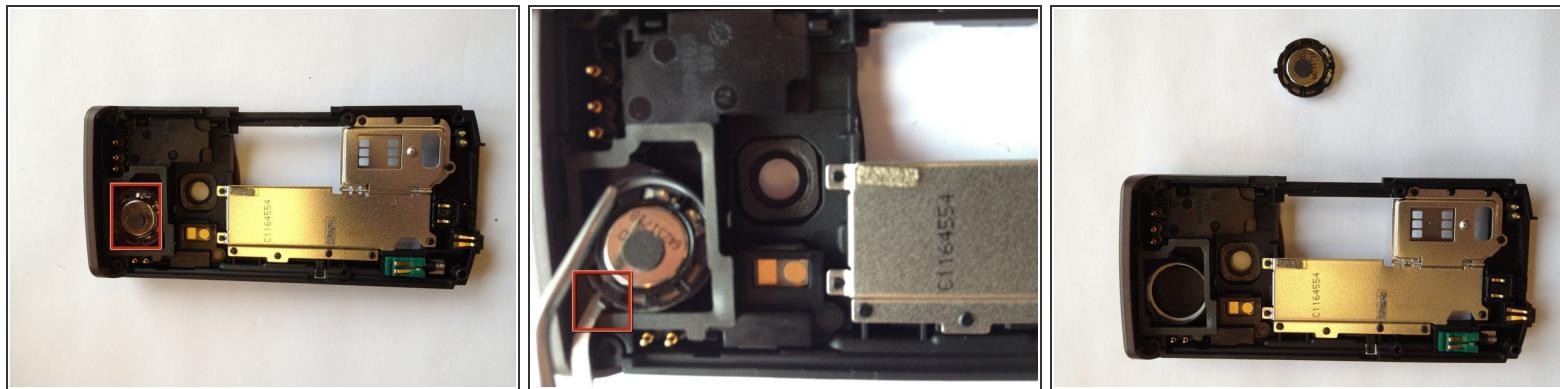

- Locate the speaker location located on the back panel of the phone.
- Using the tweezers place one side of tweezers in the rectangular slot where the speaker is located
- Slowly lift speaker away from the back panel.

To reassemble your device, follow these instructions in reverse order.