



Nostalgia Electrics RHP-310 Replacing Housing Replacement

If your outer housing is cracked and beyond repair, you will want to use this guide to replace the housing. Follow the steps below.

Written By: Dana Clarke



This document was generated on 2019-10-06 07:34:40 AM (MST).

INTRODUCTION

Follow the steps for replacing the power switch. This guide will start right after replacing power switch ends.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [New Housing](#) (1)


Step 1 — Power Switch



⚠️ Unplug popper.

- Remove plastic lid by picking the lid up.


Step 2

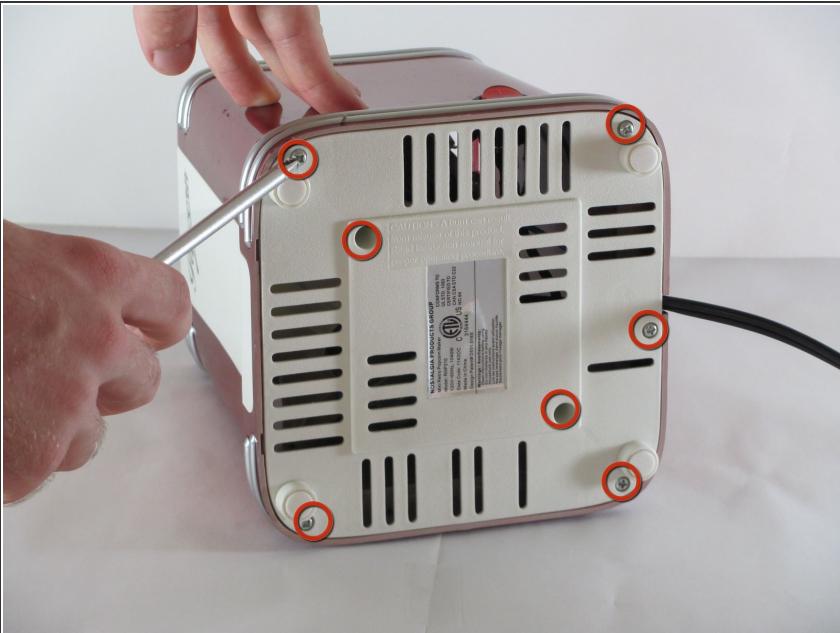

- Flip the popper on its side.
- Remove the screws on the bottom with the Phillips #2 phillips head screwdriver.



ⓘ There are seven screws on the base. Five screws on the perimeter (12mm Philips #2 screws) and two in the middle (15 mm Philips #2 screws).

Step 3

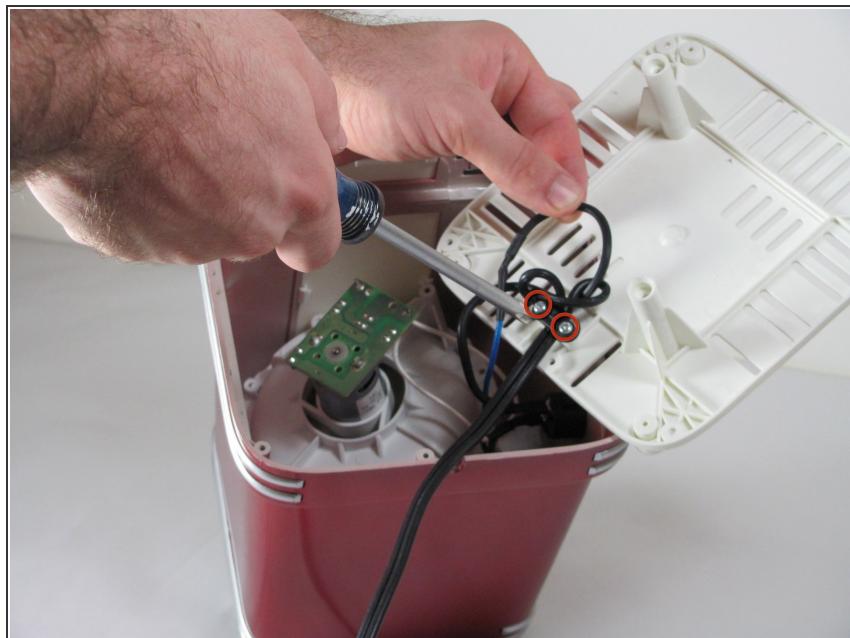

- Remove the base.
- Save the screws you took out of the bottom in a safe place. They will be needed to reattach the housing to the base.
- Unscrew the two screws (10 mm Philips #2 screws) from the base.
- Remove the base and set it aside for now.

Step 4

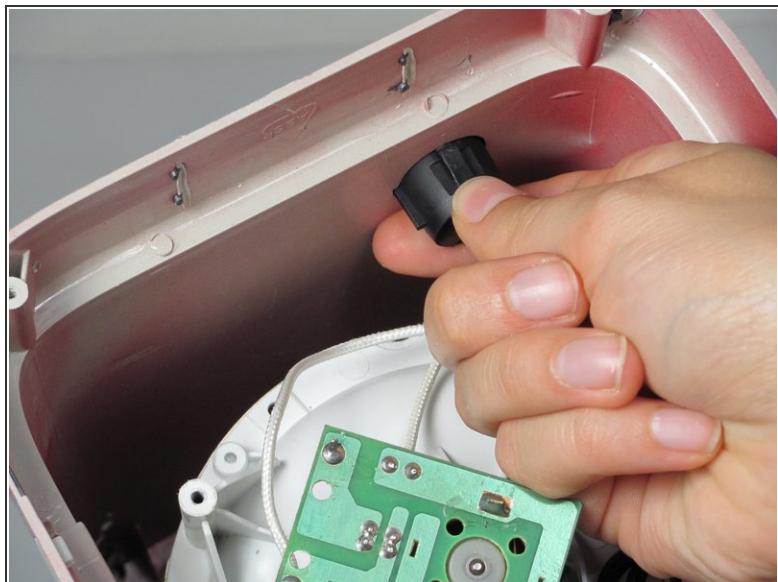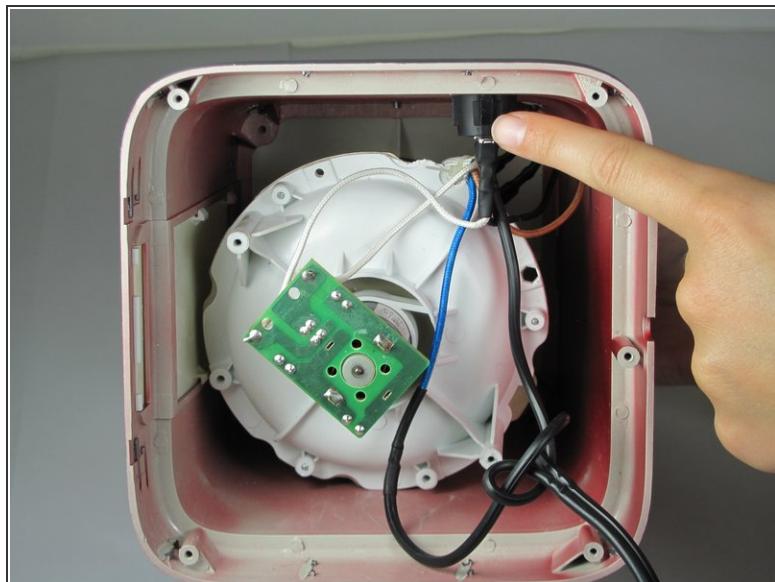

- Locate the power switch connected to the side of the housing.
- Carefully pinch the sides of the power switch.
- Push the power button up and out of the housing.

Step 5



- Now that the power switch is removed from the housing, you have to remove the wires connected to the power switch.
- Use the plastic opening tool to gently pry the wires loose from the power switch.

(i) The wires should pop easily out from the power switch.

Step 6



- Remove the power switch from the device.
- You can now replace the power switch if necessary.

Step 7 — Replacing Housing



- Now that the power switch is disconnected from the popper, you will need to remove the white top.
- Gently remove the heating component from the popper.
- Unscrew the four screws (11mm Philips #2 screws) that connect the white top to the housing.

Step 8



- Remove the white top from the housing.

i Save the screws from previous step. You will need them to connect the new housing to the white top.

To reassemble your device, follow these instructions in reverse order.