




OnePlus 6T Speaker Replacement

How to replace the OnePlus 6T speaker.

Written By: Quinn Jones

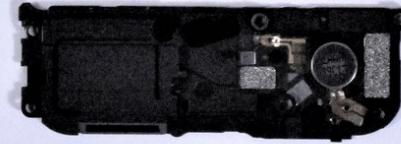

INTRODUCTION

If the audio coming from your OnePlus 6T speakers sounds distorted and troubleshooting doesn't work, you may need to replace your speakers.

TOOLS:

- Hairdryer or Heat tool (1)
- iOpener (1)
- Plastic Cards (1)
- Tweezers (1)
- Jimmy (1)
- Spudger (1)
- Halberd Spudger (1)
- Phillips #00 Screwdriver (1)

PARTS:

- OnePlus 6T SIM Card Tray (1)
- OnePLus 6T Back Cover (1)

Step 1 — Back Cover



- Make sure the phone is powered off and placed with the back cover facing towards you on a stable surface.

Step 2



- Pop open the SIM card tray by inserting a SIM card removal tool into a small hole on the upper-left side of the phone.
- Carefully remove the SIM card from its tray.

Step 3



- Loosen the binding glue within the phone using a hairdryer or an [iOpener](#).

i If you choose to use a hairdryer, hold the dryer at least eight inches from the phone and apply heat for two minutes in a circular motion around the edges of the phone.

Step 4



- Insert a Jimmy under one of the heated corners of the phone to lift it slightly.
- Insert a plastic card underneath the slightly lifted lip on the back cover and gently glide the card under the lifted phone casing.

i There will be a small amount of tension, but this is normal as the card is removing the adhesive within the phone.

- Remove the back cover from the phone.

Step 5 — Speaker



- Remove seven 3mm Phillips #00 screws from the speaker.

Step 6



- Use a spudger to lift and remove the speaker.

To reassemble your device, follow these instructions in reverse order.