




PlayStation 3 Slim Top Shield Assembly Replacement


Written By: Andrew Bookholt

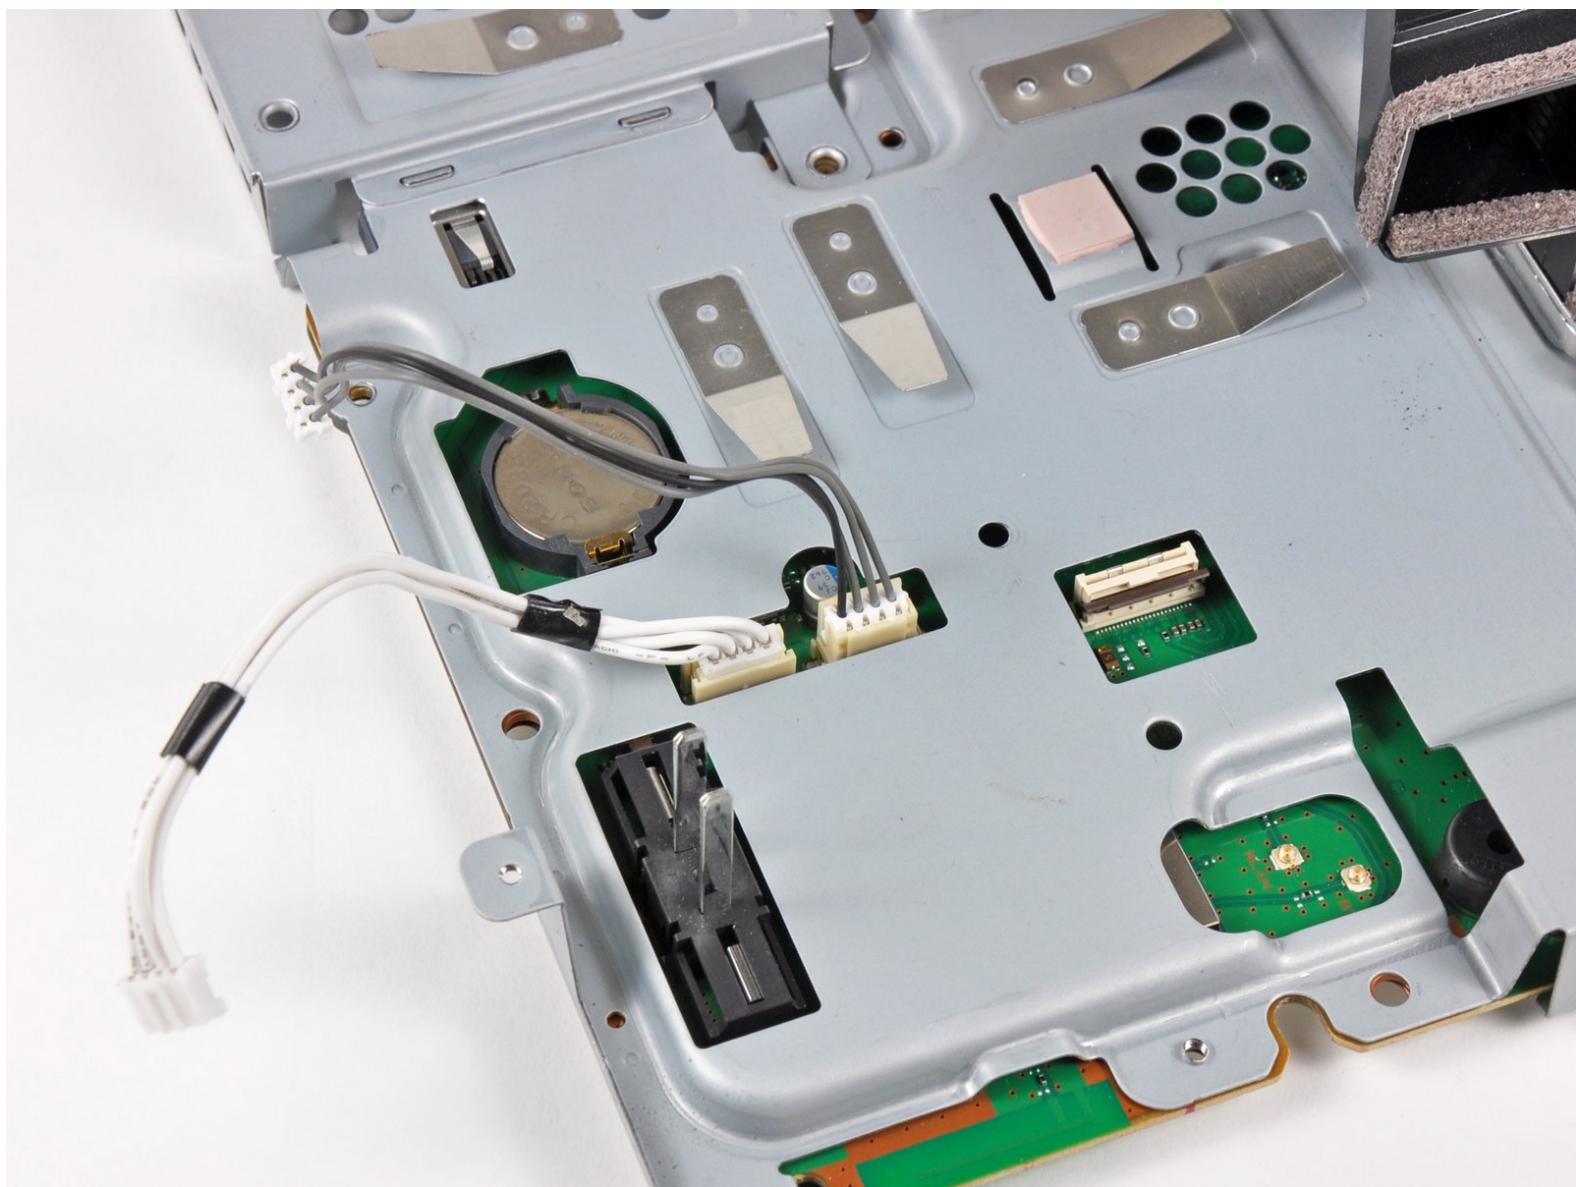

 **TOOLS:**


- Phillips #0 Screwdriver (1)

Step 1 — Top Shield Assembly

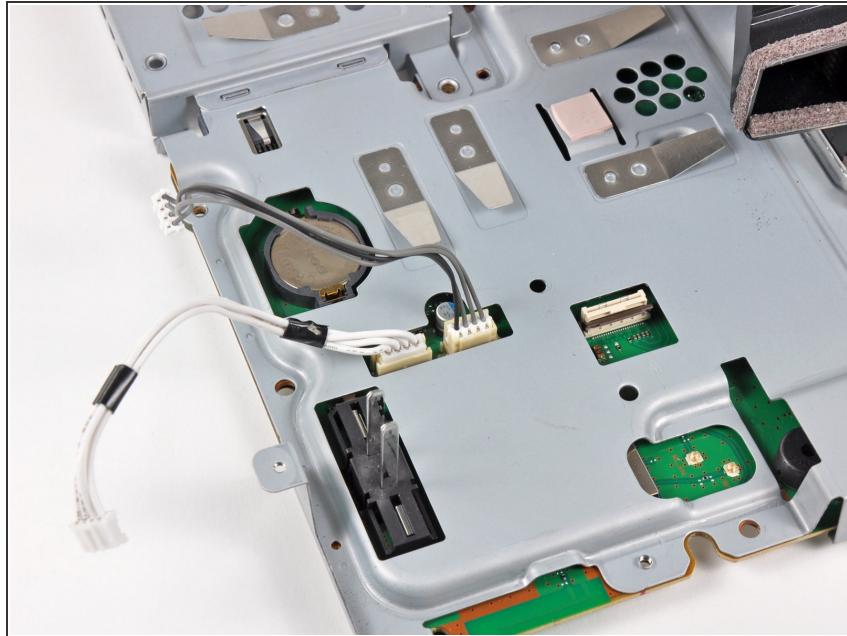


- Disconnect the DC-In and Blu-ray power cables from the motherboard.
- *(i)* Pull the cables straight upward to lift the connectors up and out of their sockets on the motherboard.

Step 2

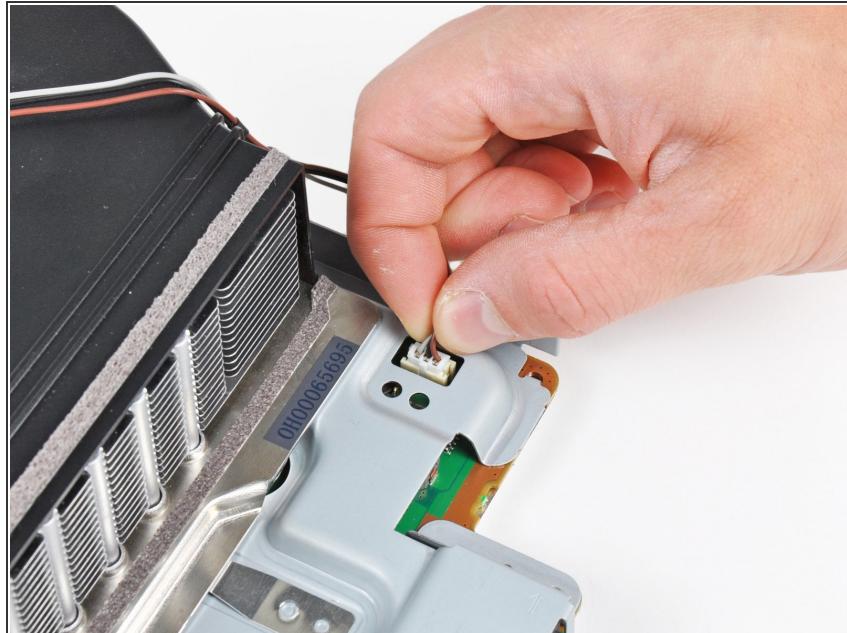


- Pull the fan cables straight up to lift the fan connector up and out of its socket on the motherboard.

Step 3

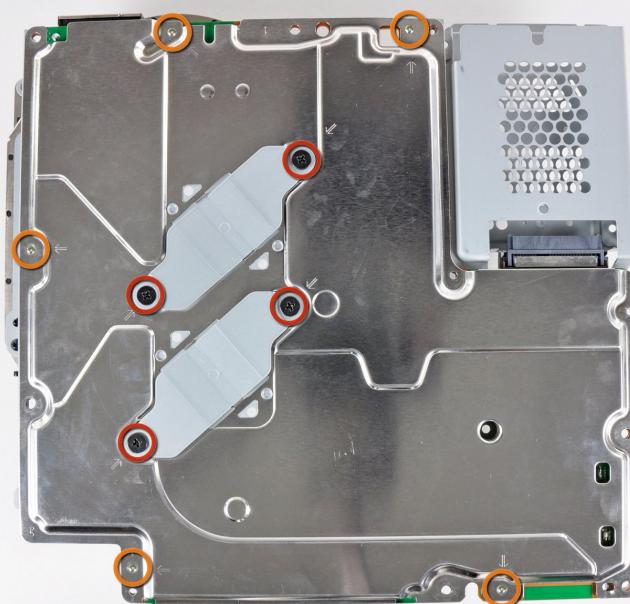


- Remove the following nine screws holding the motherboard assembly together:
 - Four 14.8 mm shouldered Phillips
 - Five 9.5 mm Phillips

Step 4

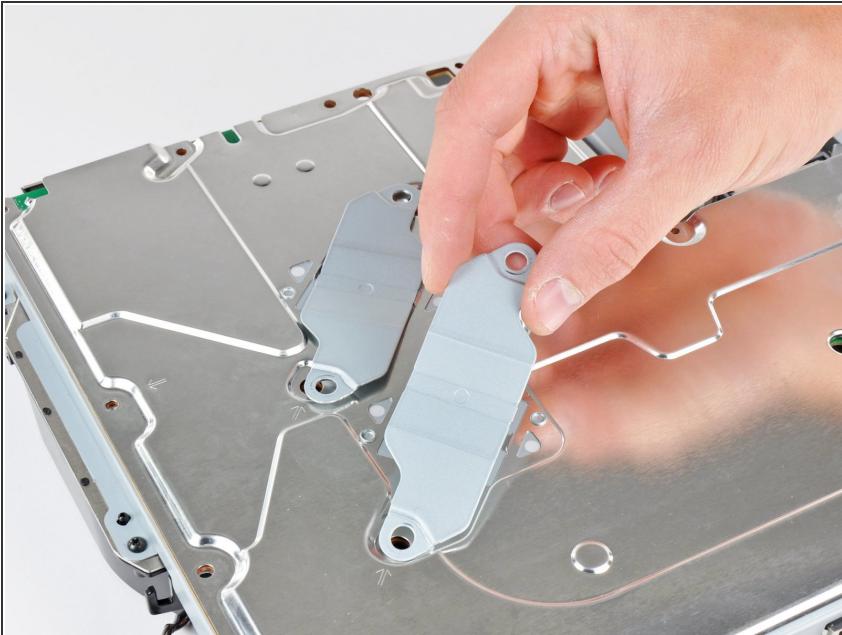



- Remove the two heat sink clamps from the bottom of the motherboard assembly.

Step 5

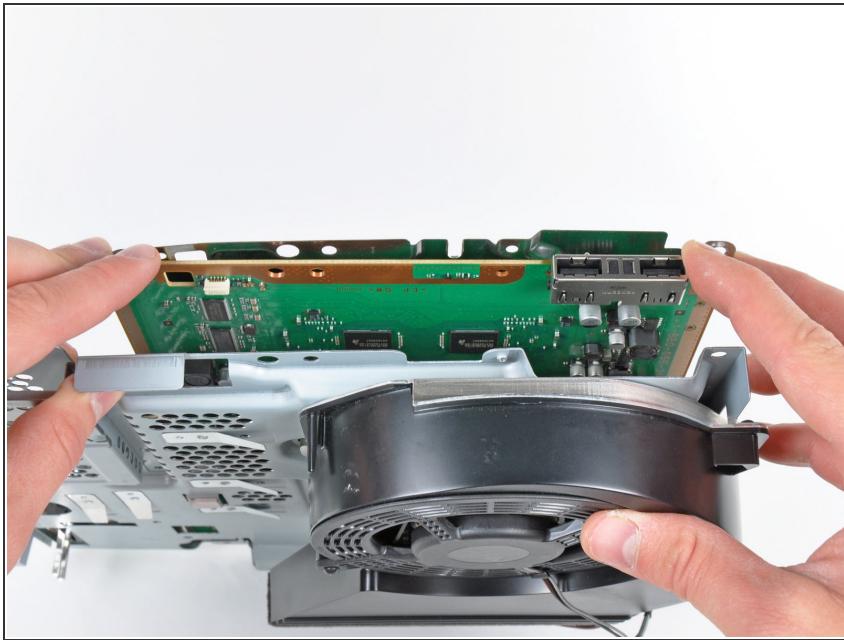


(i) If necessary, gently pry the motherboard off the top shield near the heat sink and its shroud.

Step 6

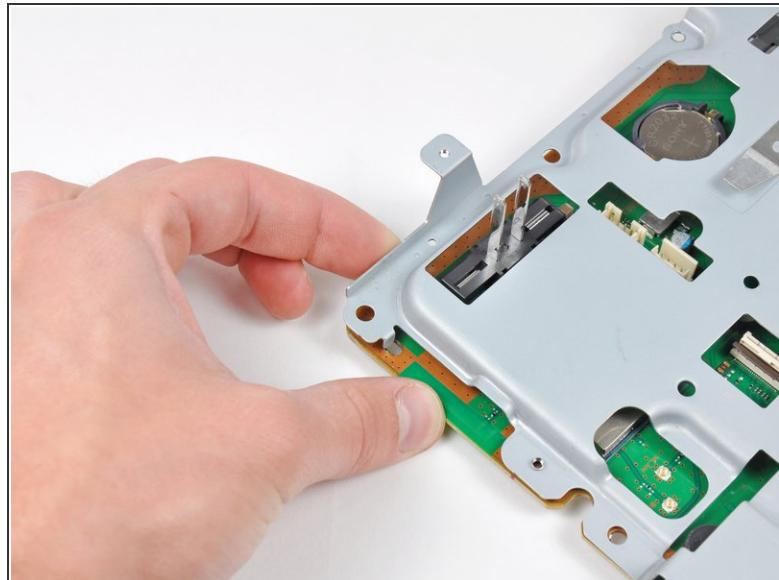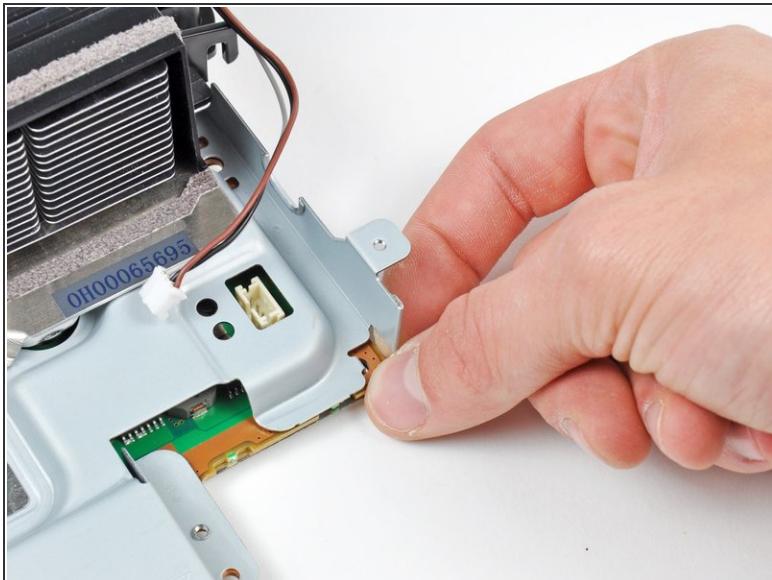

- Gently press the board away from the top shield assembly near the fan connector and the corner of the board near the wireless sockets.

Step 7

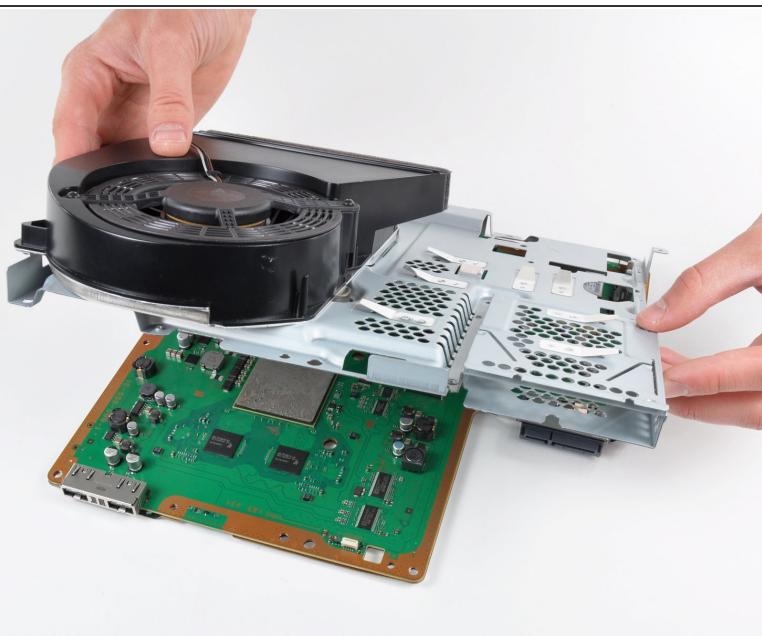

- Lift the top shield assembly off the motherboard from its front edge.

⚠ Be careful not to damage the sockets as you rotate the top shield assembly away from the motherboard.

To reassemble your device, follow these instructions in reverse order.