




PlayStation 3 Super Slim Teardown - Video tutorial

PlayStation 3 super slim - how to fully disassemble.

Written By: ZFix

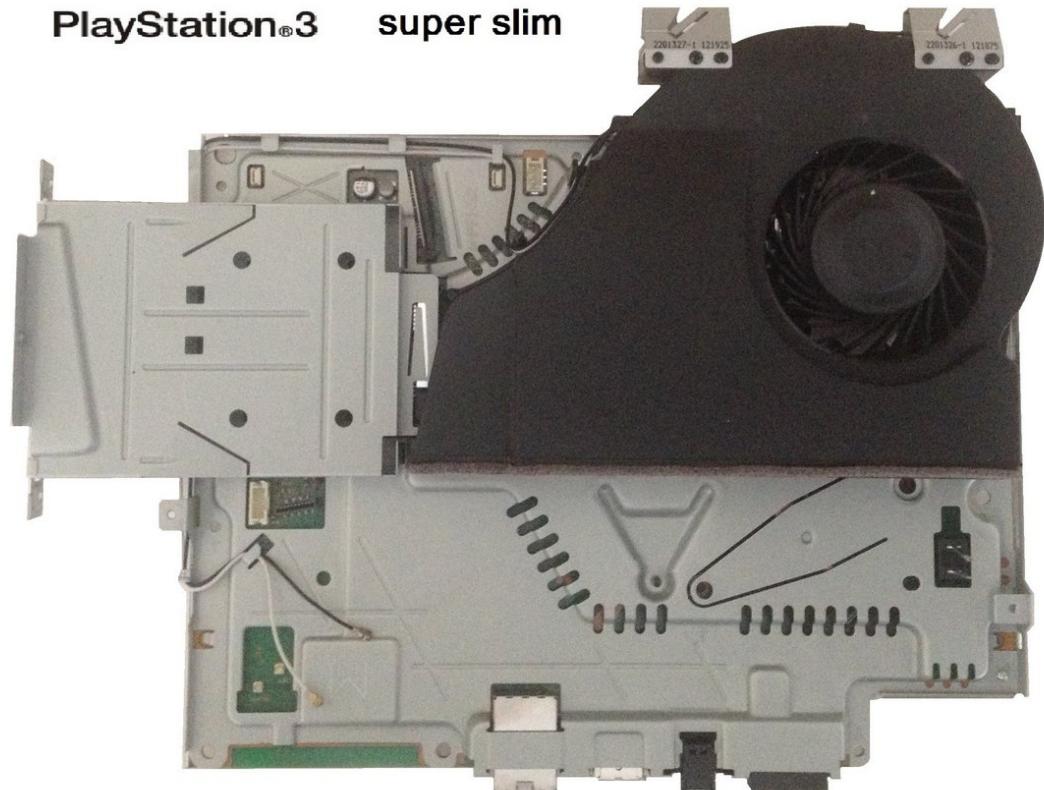

disassembling

INTRODUCTION

PlayStation 3 super slim - how to fully disassemble.

[video: <http://www.youtube.com/watch?v=PADgRIE1kso>]

You can see also: [PlayStation 3 Super Slim Teardown](#)

[Please SUBSCRIBE to my channel ツ](#)

TOOLS:

- [T8 Torx Screwdriver \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — PlayStation 3 Super Slim Teardown - Video tutorial



- Remove the three rubber feet, warranty sticker and four screws.
- Gently pull up on the bottom cover to remove it.

Step 2



- Slide the HDD cover toward the rear of the device to remove it.
- Remove the blue screw shown to remove the HDD caddy.

Step 3



- Use a metal spudger to push the tab on the rear top finisher, and lift up to remove it.

Step 4




- Repeat step 3 for the front top finisher.

Step 5




- Remove the two screws indicated in the disk reader.
- Remove the five screws shown around the edge of the top cover.
- Lift the top cover up to remove it.

Step 6

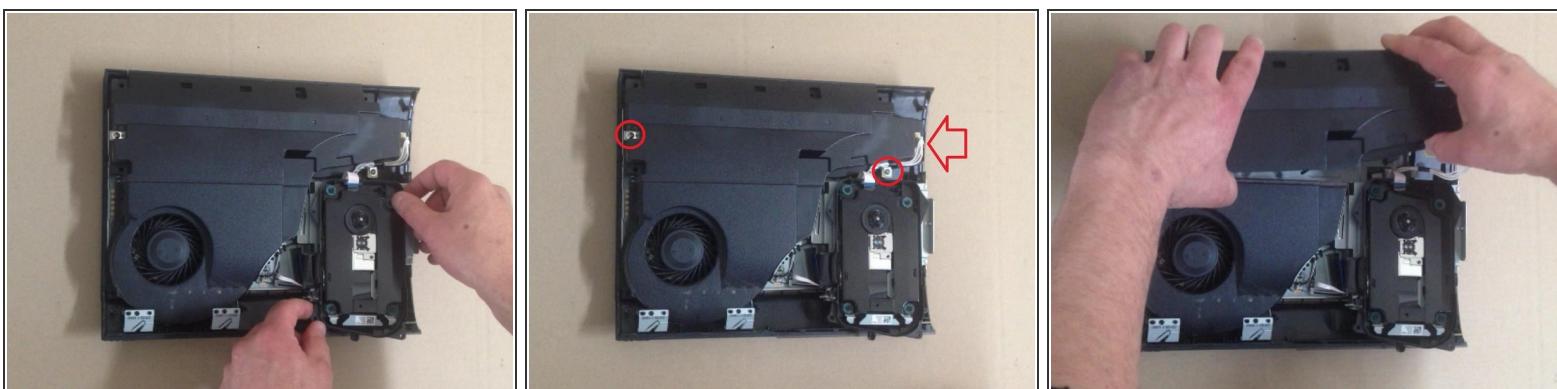

- Move the optical disk reader assembly to the left to expose one of the screws holding the power supply in.
- Remove the two screws indicated and carefully disconnect the cable on the right side of the power supply.
- Lift the power supply up to remove it.

Step 7

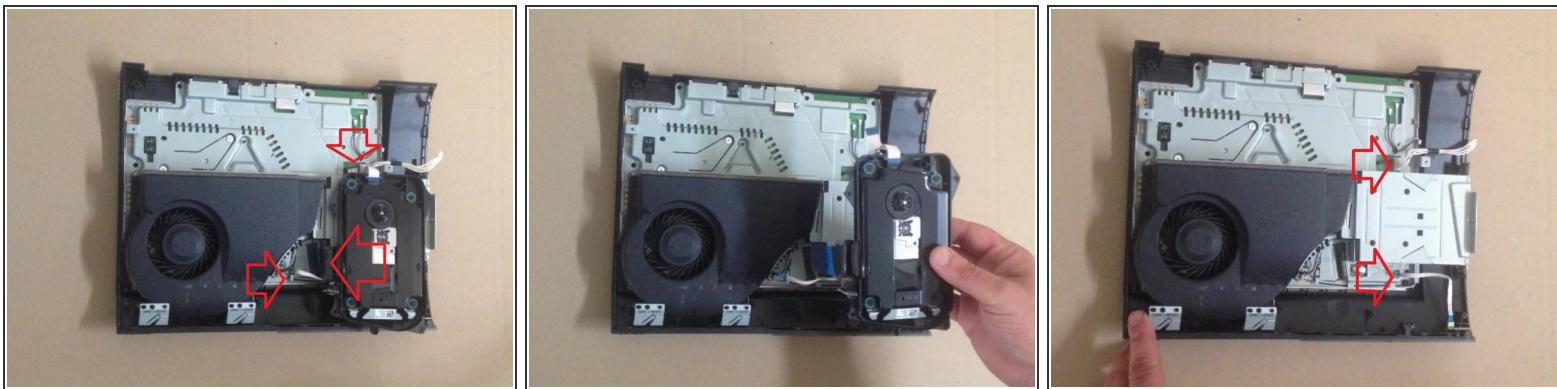


- Carefully disconnect the ribbon cables indicated.
- Lift the optical disk reader up to remove it.
- Disconnect and remove the white cable and ribbon cable indicated.

Step 8




- Remove the seven screws indicated.
- Lift the motherboard assembly up out of the lower half of the case to remove it.
- Carefully disconnect the Wi-Fi antenna cables and fan connector indicated by red arrows.

Step 9

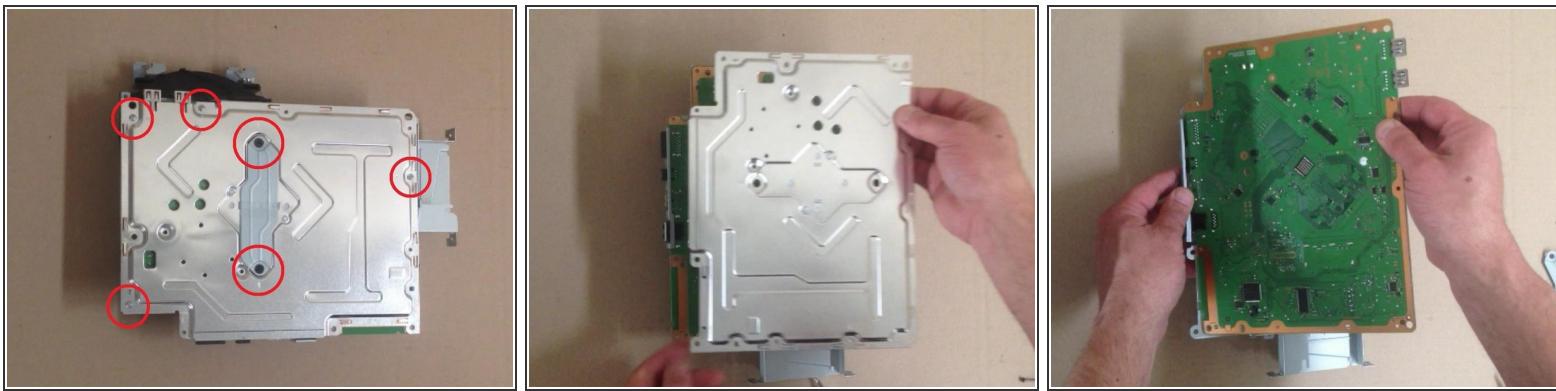

- Remove the six screws indicated to separate the heatsink and shield from the motherboard.

Step 10

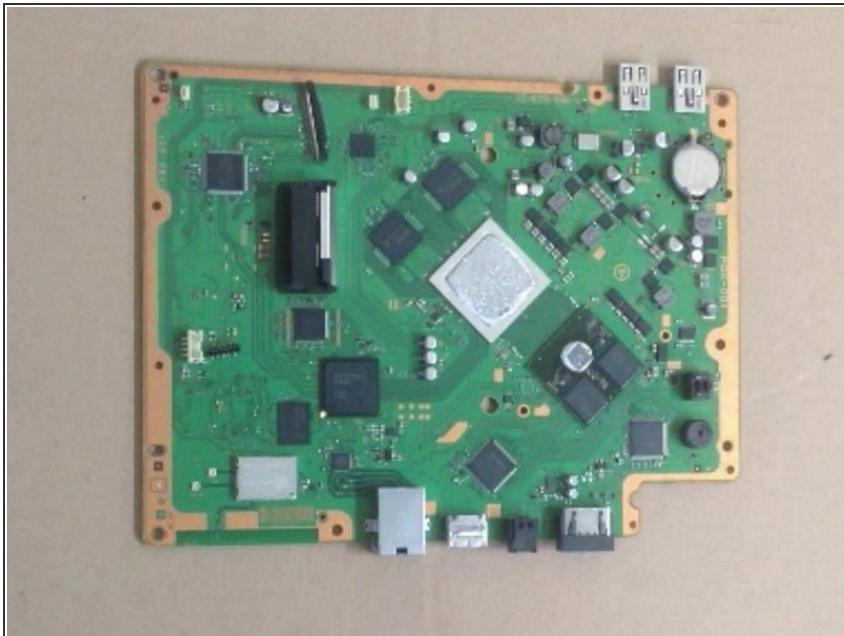

- **Did you do it successfully?**



[Please SUBSCRIBE to my channel](#)
[ツ](#)

To reassemble your device, follow these instructions in reverse order.