



# PlayStation 4 Slim Motherboard Replacement

This is a replacement guide for the Playstation 4 Slim motherboard.

Written By: Harry Koos



# INTRODUCTION

Use this guide to remove and replace your PS4 Slim's motherboard.

## TOOLS:

- T8 Torx Screwdriver (1)
- iFixit Opening Tools (1)
- Metal Spudger (1)
- Phillips #1 Screwdriver (1)
- Tweezers (1)

## PARTS:

- PlayStation 4 Slim (CUH-20xx) Motherboard (1)
- PlayStation 4 Slim (CUH-21xx) Motherboard (1)

## Step 1 — Bottom Cover



- Locate the plastic warranty sticker next to the three ports on the side of the console.
- Remove the warranty sticker by peeling it off with any kind of spudger.

**⚠** Removing the warranty sticker will NOT cause your warranty to be null and void.

## Step 2



- Unscrew and remove the 5.0mm screw that was behind the sticker using a T8 security Torx screwdriver with a counter-clockwise motion.

## Step 3



- Place the Playstation 4 Slim upside down with the side of the screw you just removed facing you.
- Pry up on the two corners that are facing you with your fingers.

*(i)* This may take a bit of force to open up and you will hear a fairly loud click when the bottom cover detaches.

- Remove the bottom cover by sliding it towards the back corners and lifting up.

## Step 4 — Power Supply




- Place the Playstation 4 Slim right side up, with the PS logo on top and the side with the words "SONY" and "PS4" facing you.
- Pry up on the two corners that are facing you with your fingers.

*(i)* This may take a bit of force to open and you will hear a fairly loud click when the top cover detaches.


- Remove the top cover by sliding it towards the back corners and lifting up.

## Step 5

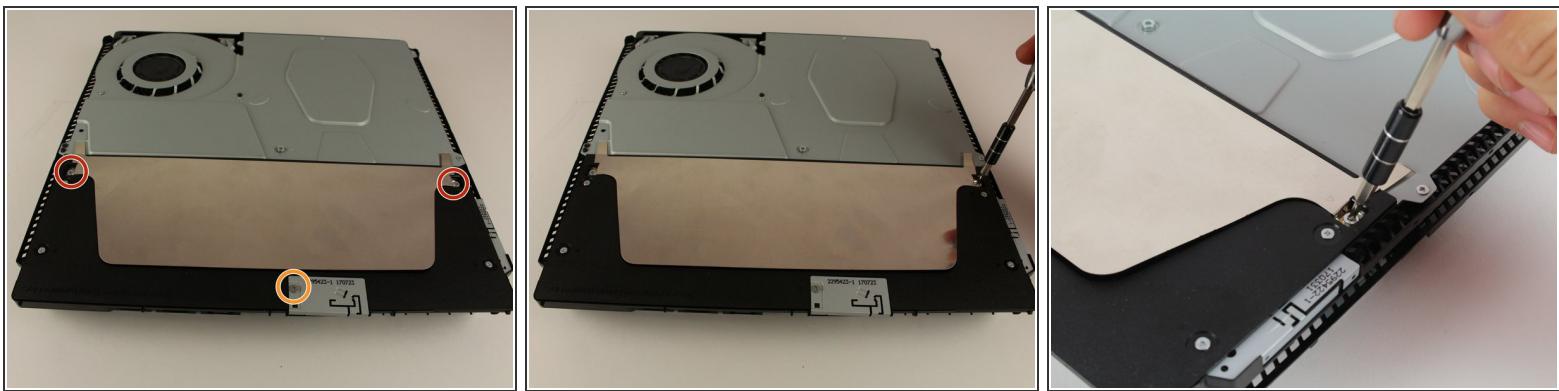


- Unscrew and remove the two screws (left one 31.0mm and right one 24.0mm) using a T8 screwdriver with a counter-clockwise motion.
- Unscrew and remove the 3.0mm screw using a Phillips #1 screwdriver with a counter-clockwise motion.

## Step 6

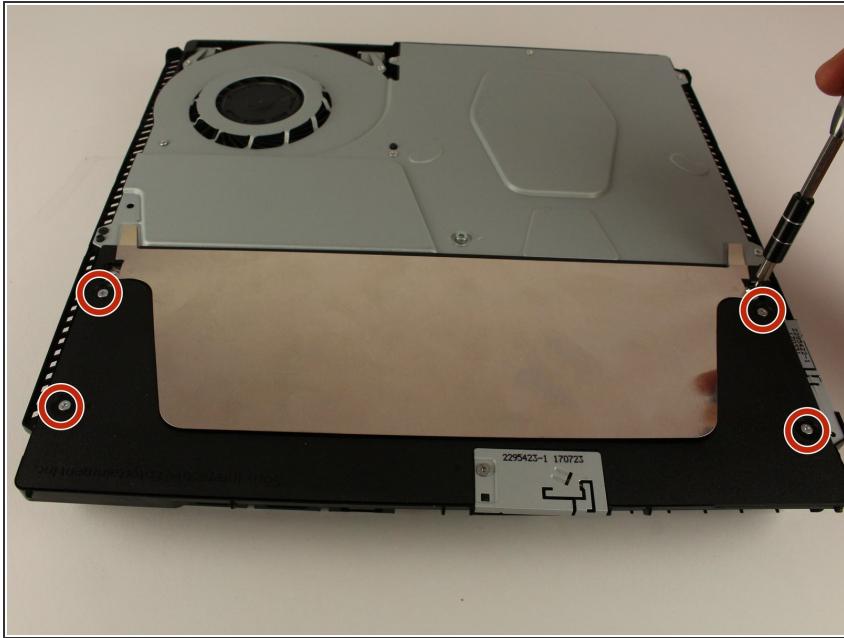


- Remove the four 16mm Philips screws holding the power supply in place.

## Step 7

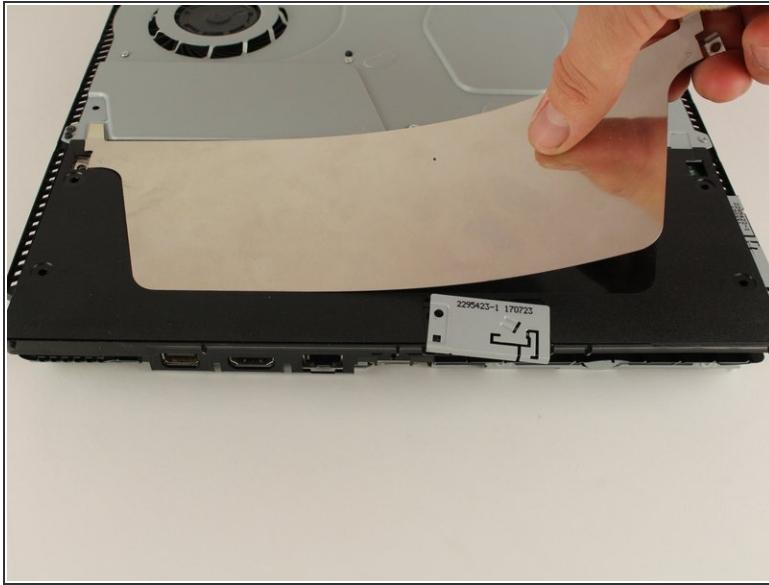


- Remove the metal sheet from the top of the power supply by grabbing and lifting up with your hands.

## Step 8

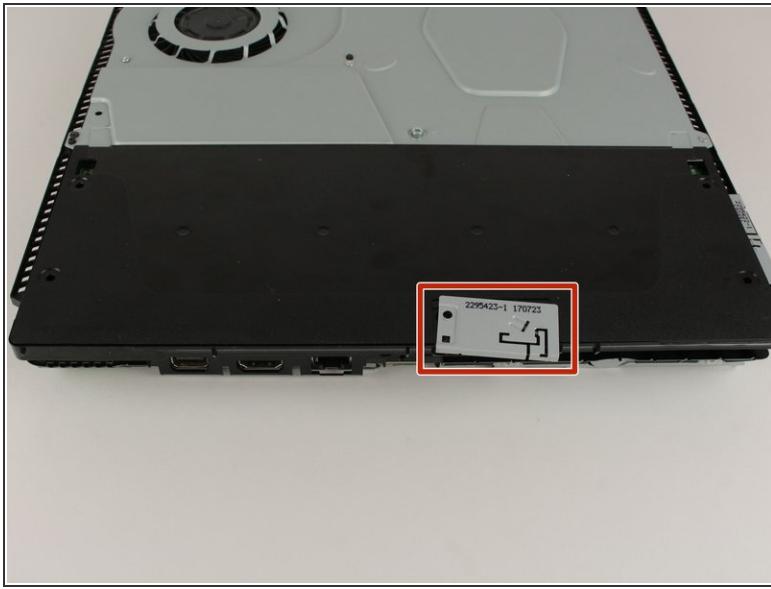

- Remove the antenna from the top of the power supply by guiding the wire with your fingers through the grooves underneath the metal panel.

## Step 9

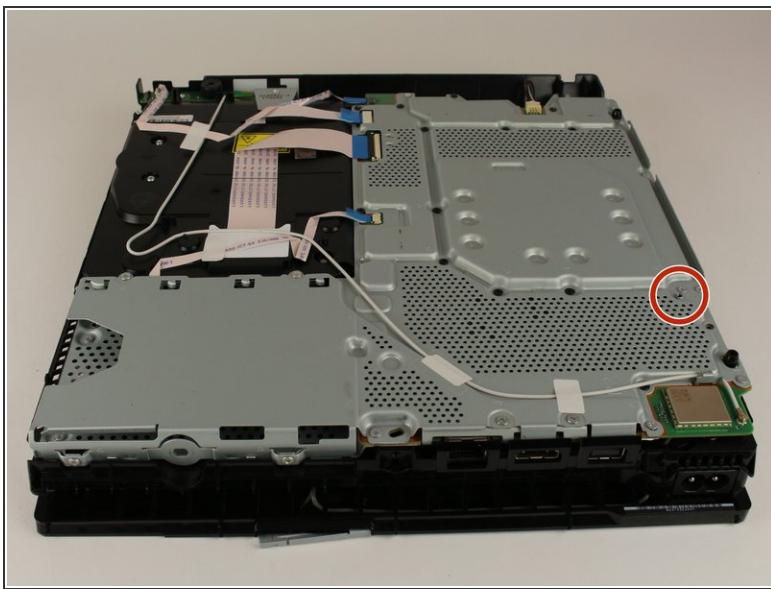

- Flip the Playstation 4 Slim onto its back.
- Unscrew and remove the 4.0mm screw using a Phillips #1 screwdriver with a counter-clockwise motion.

## Step 10




- Use a plastic opening tool to make space between the power supply and console by wedging and wiggling it in-between the two.
- Lift the power supply up and onto the metal sheet using your hands.

## Step 11




- Disconnect the wire connection from the power supply by firmly gripping it with your fingers or tweezers and pulling out.
- Remove the power supply completely by grabbing and lifting up with your hands.

## Step 12 — Motherboard

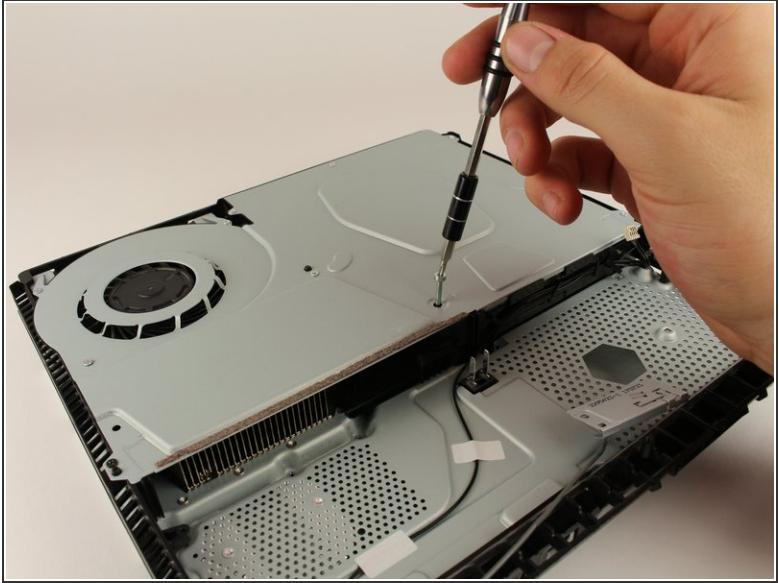


- Unscrew and remove the 31.0mm safety screw using a T8 screwdriver with a counter-clockwise motion.

## Step 13

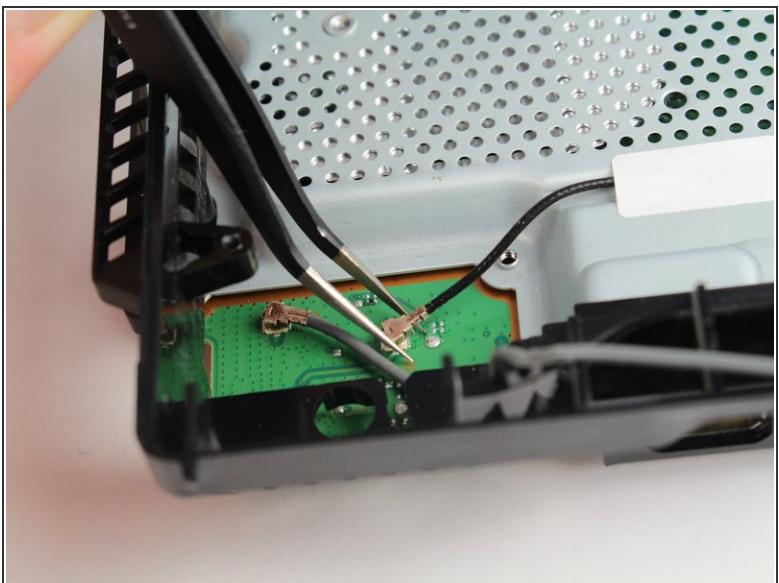


- Locate the two wires connected to the bottom of the motherboard.
- Remove the wires by firmly grasping the metal connections with your fingers or tweezers and pulling up until they disconnect.

## Step 14

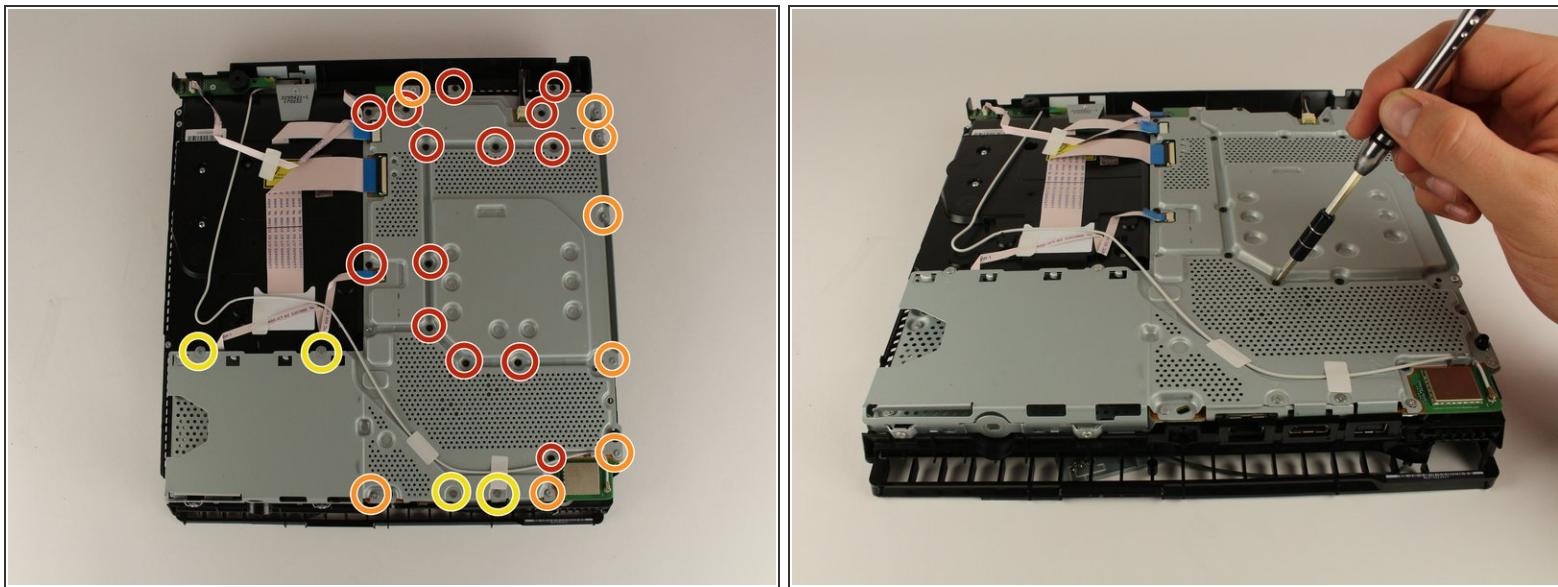

- Flip the device to the backside.
- Unscrew and remove 14x 4.0mm black screws using a Phillips #1 screwdriver with a counter-clockwise motion.
- Unscrew and remove 8x 6.0mm silver screws using a Phillips #1 screwdriver with a counter-clockwise motion.
- Unscrew and remove 4x 3.0mm silver screws using a Phillips #1 screwdriver with a counter-clockwise motion.

## Step 15

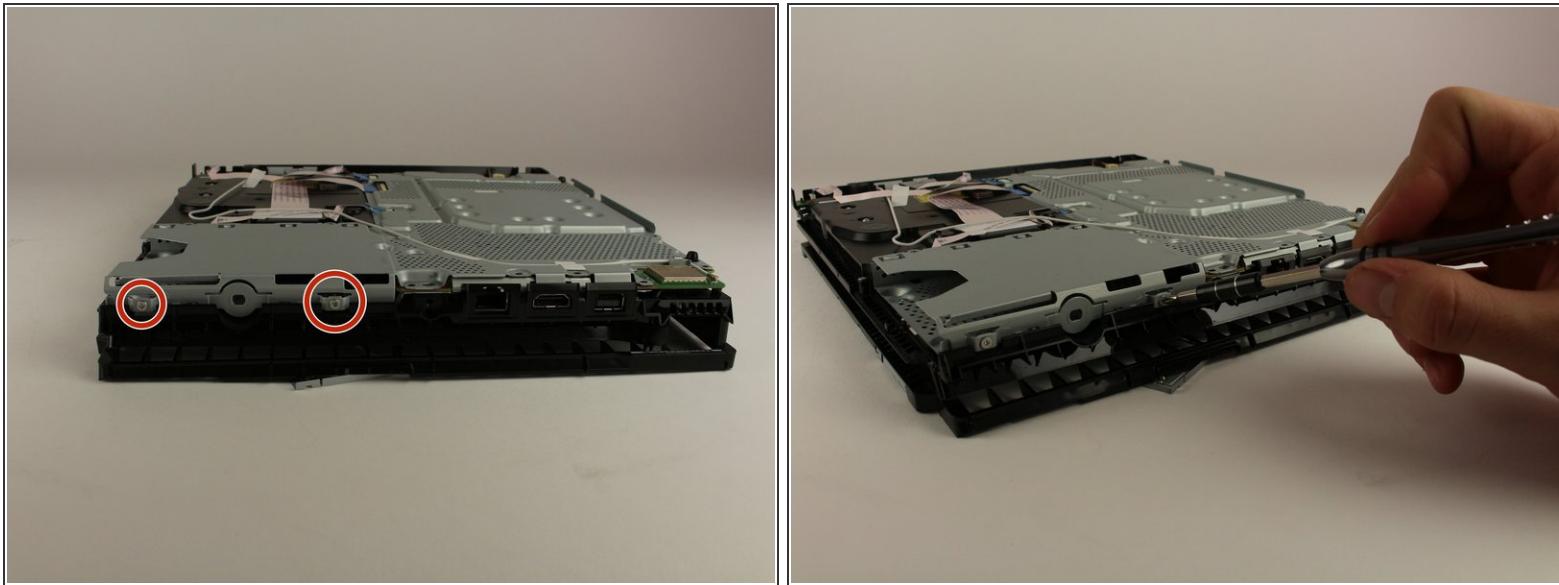


- Unscrew and remove the two 5.0mm screws on the side of the console using a Phillips #1 screwdriver with a counter-clockwise motion.

## Step 16




- Locate the white wire connected to the corner of the top of the motherboard.
- Disconnect the wire by firmly grasping the metal connection with your fingers or tweezers and pulling up until it detaches.
- Unthread the wire from the tape and move it off to the side using tweezers or your fingers.

## Step 17

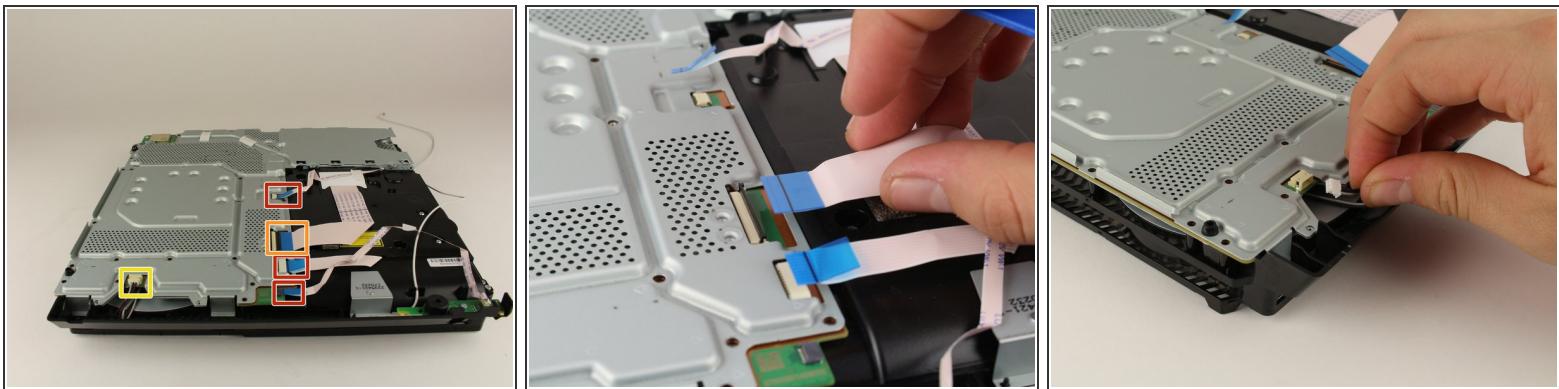

- Remove the connections by pulling out on the blue tabs with your fingers.
- Flip up the black clip on the largest tab with your finger before removing it.
- Remove this wire connection by firmly gripping the wire with your fingers and pulling it out.

## Step 18

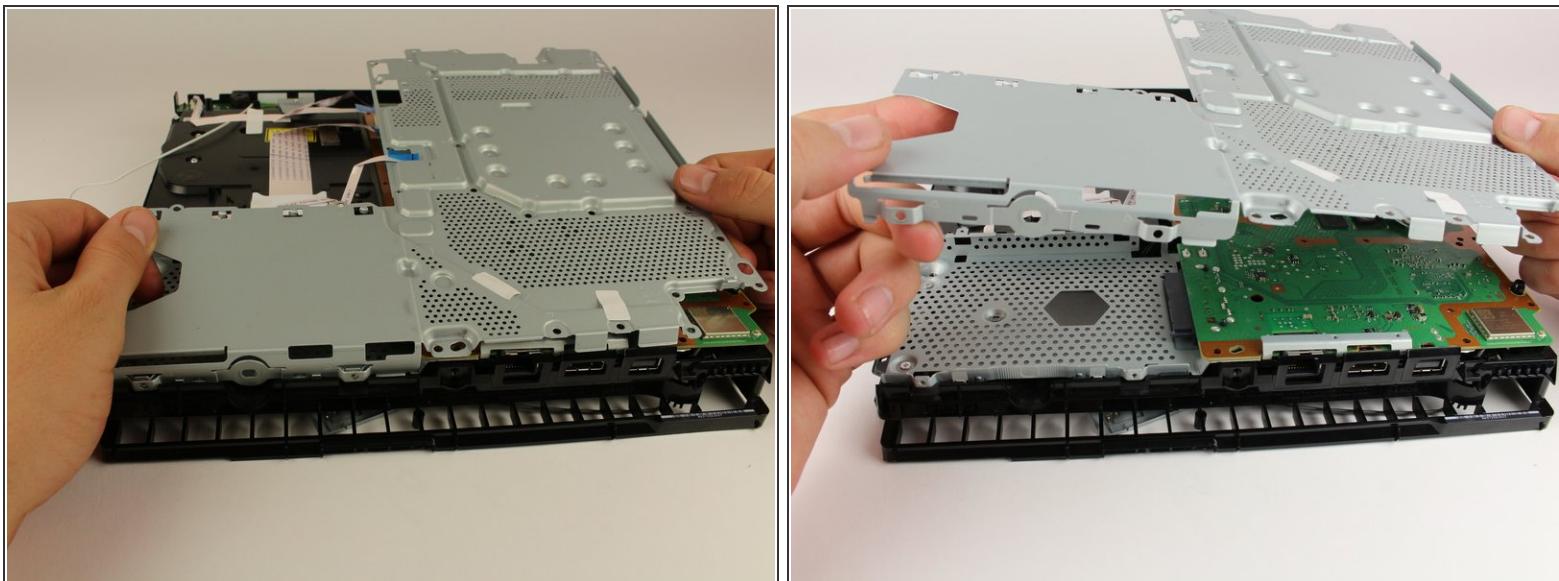


- Remove the metal plate by grabbing two sides of the plate and lifting up and away from yourself.

*(i)* You may need to wiggle the plate a bit to get it loose before you lift it out.


**⚠** Do not lose any of the black pads attached to the motherboard while performing this step.

## Step 19

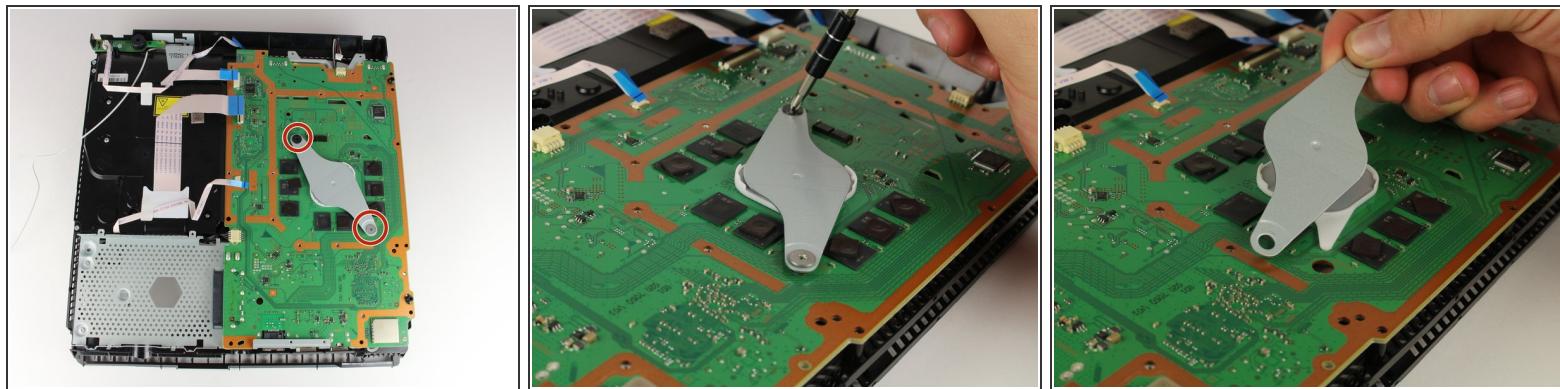

- Unscrew and remove the two 10.0mm screws (one silver and one black) using a Phillips #1 screwdriver with a counter-clockwise motion.
- Remove the small metal plate by grabbing it with your fingers and lifting up.


## Step 20

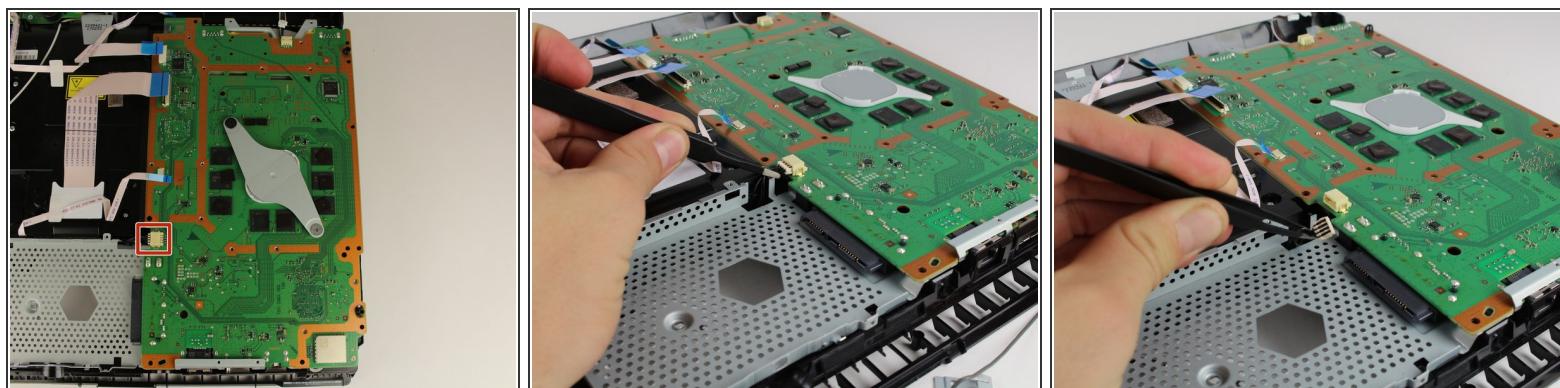

- Remove this wire connection by firmly grasping it with tweezers and pulling out.

**⚠** This might require a bit of force to disconnect, but be sure not to break any of the wires.

## Step 21

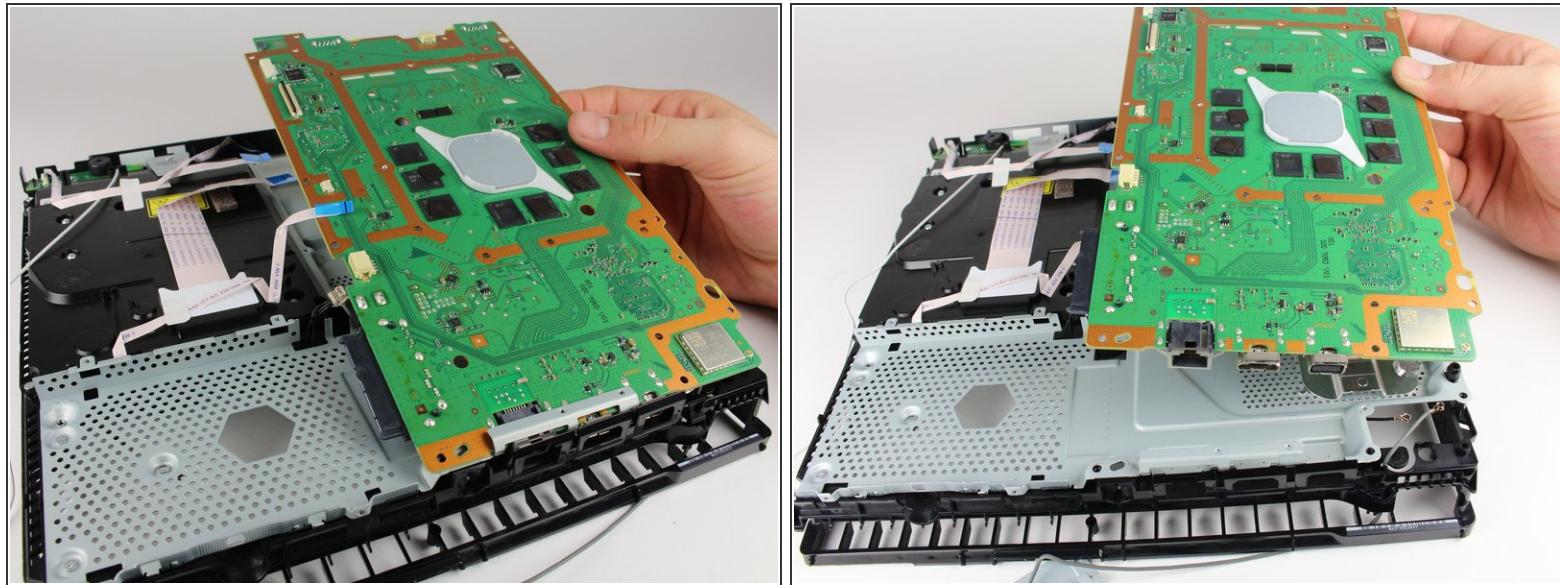

- Remove the motherboard by grabbing the edge of the board with one or two hands and pulling away and up.
- You may need to wiggle the board a bit to get it loose before you remove it.

To reassemble your device, follow these instructions in reverse order.