



Presidential Footrest Disassembly

This Guide will show you how to remove the back cover on a Infinity Presidential 2.0

Written By: Nick





TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Flush Wire Cutters](#) (1)
 - [Zip Ties](#) (1)
-

Step 1 — Step 1



- ⚠ Be sure footrest is on a surface that wont scratch the bottom.
- Remove the 9 screws on the plastic cover.
- The Orange circle is the screw that holds the bracket in place . this screw does have a bushing on it DO NOT LOSE IT.
- ⚠ Cut zip tie on cable bundle .

Step 2 — Step 2




- Tilt Footrest forward and remove 3 Bottom screws.


Step 3 — Step 3




- Remove screws on left and right wheel and remove wheels from assembly .

 Be sure to put wheels in safe place to avoid any damage.

Step 4 — Complete

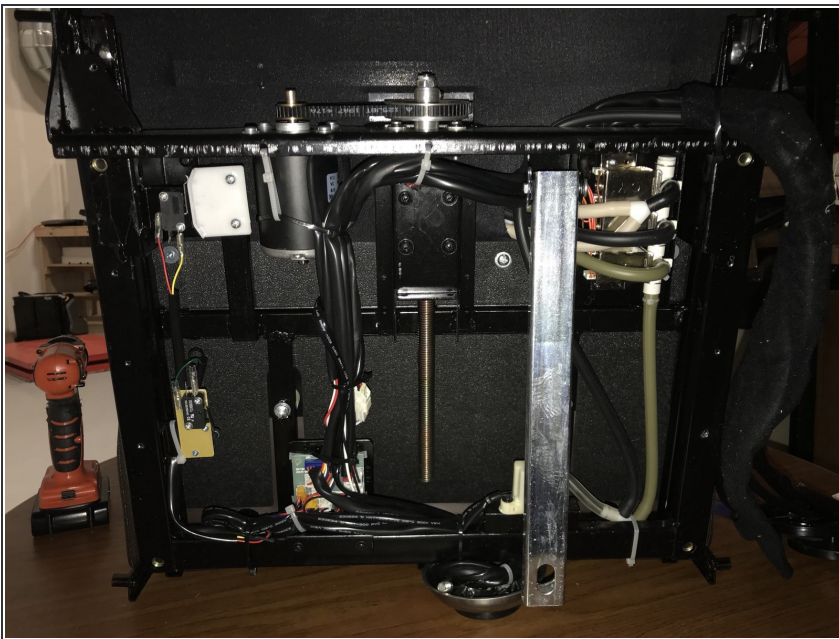

 WHEN PULLING OFF THE COVER THE CABLE BUNDLE WILL NEED TO BE THREADED THROUGH THE CUT OUT ON THE COVER. DO NOT FORCE IT. THIS MAY RESULT IN DAMAGING THE CONNECTORS .

- You're done ! from here you have complete access to extend mechanism and valve.

To reassemble your device, follow these instructions in reverse order. **DON'T FORGET TO REPLACE ANY CUT ZIP TIES**