




# Razer Blade Stealth (2018) Audio and USB-C Port Replacement

This guide outlines how to replace the audio and USB-C ports in the Razer Blade Stealth 2018.

Written By: Helene Willits

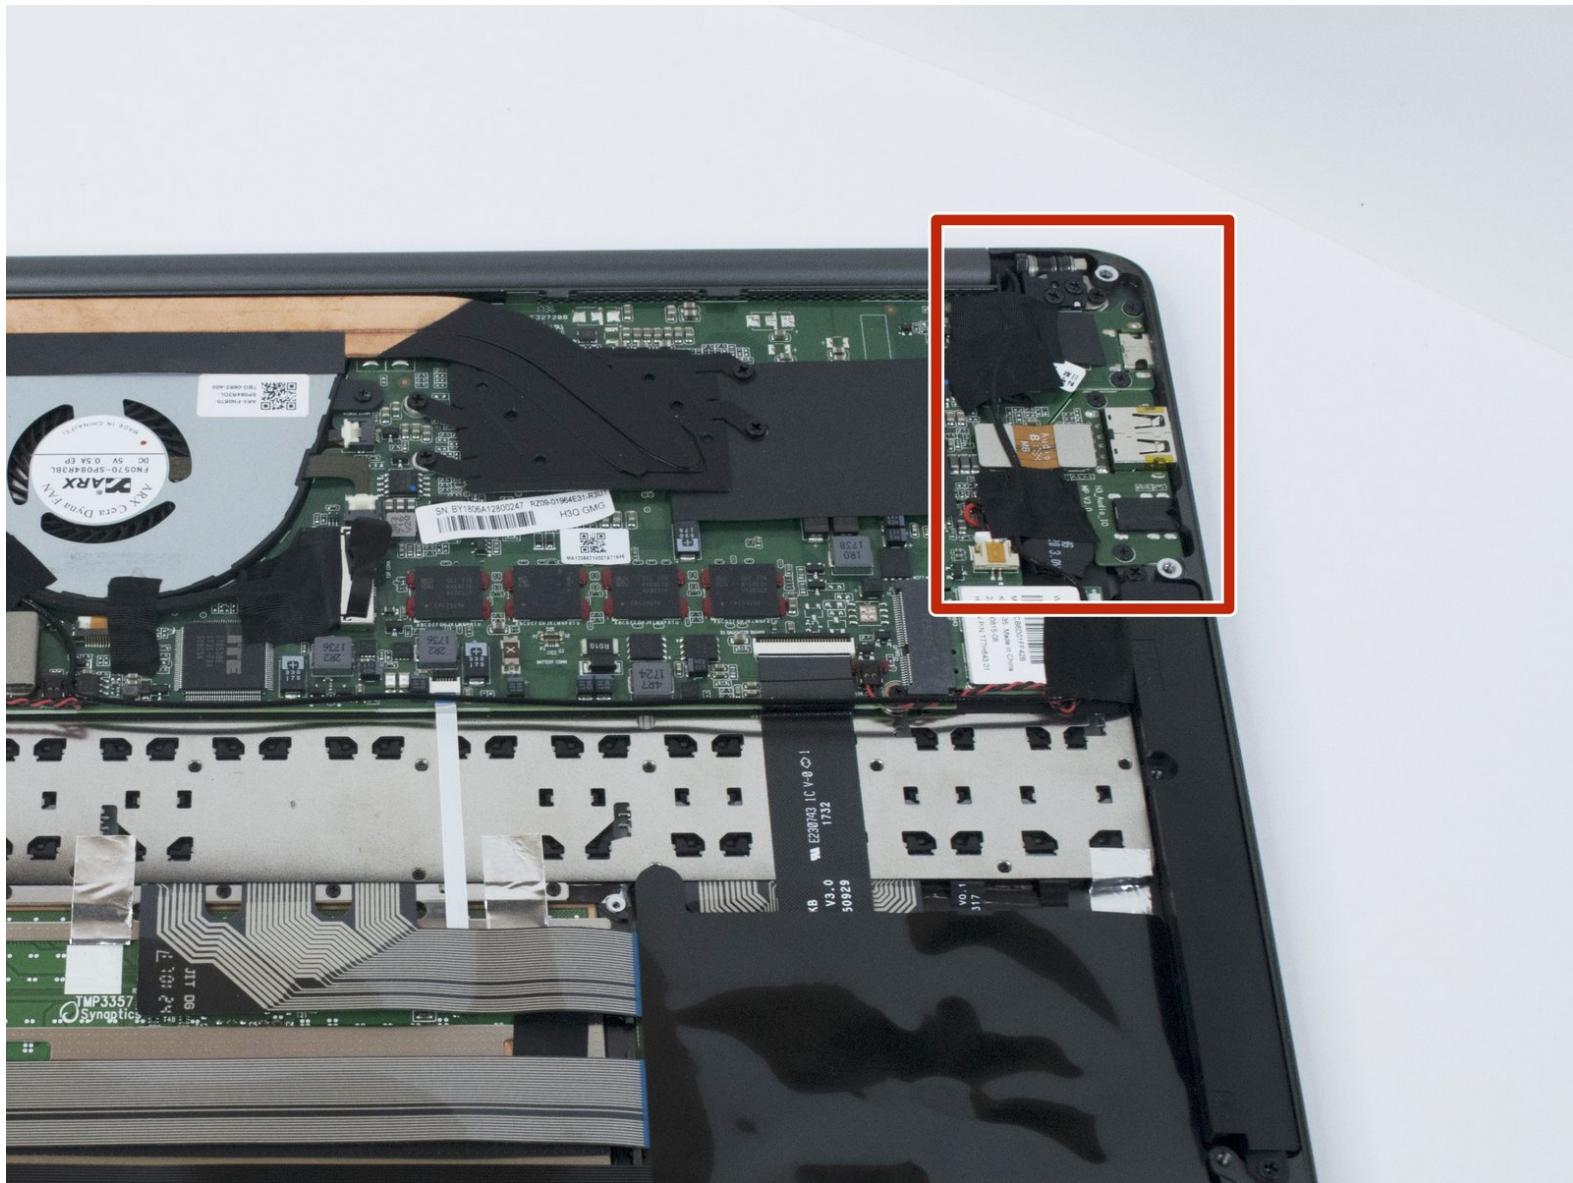

## INTRODUCTION

This guide outlines how to replace the audio and USB-C port module in the Razer Blade Stealth 2018. The audio may be faint or not work. If the computer is not charging, the USB-C port may be damaged. This module is found on the right-hand side of the laptop and often has issues regarding loose ports and external device communication. Some tools are required for this replacement.

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Small Plastic Spudger](#) (1)

## Step 1 — Battery



⚠ Ensure the laptop is fully powered off before beginning!

- Use a Torx T5 screwdriver to remove the eight, 3mm screws on the bottom cover of the laptop.
- Whenever removing screws from the device, remember to save and label them.


## Step 2



- Remove the bottom cover of the laptop by sliding it away from the hinge.


⚠ Do not force the cover up!

## Step 3

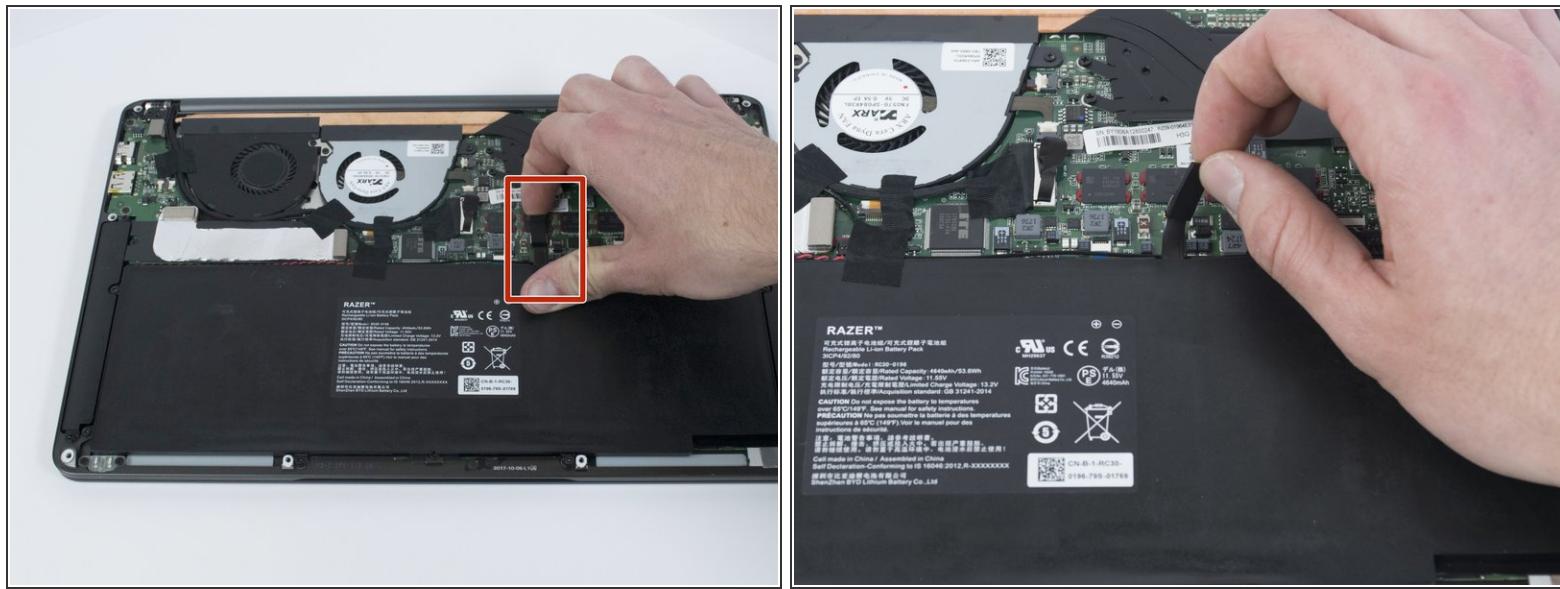


- Gently disconnect the battery from the motherboard by lifting up on the connector.

## Step 4

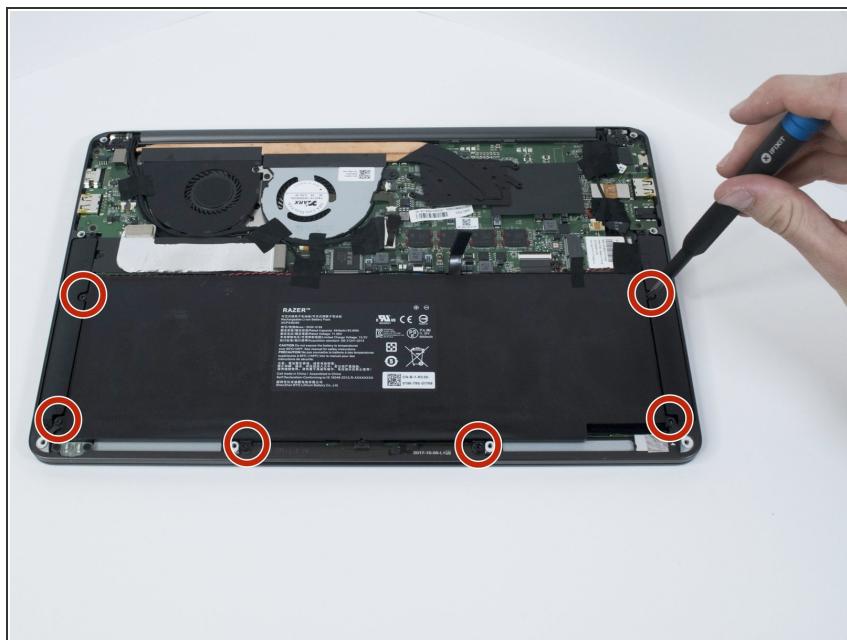

- Use a Phillips #00 screwdriver to remove the six, 5mm screws securing the battery.


## Step 5

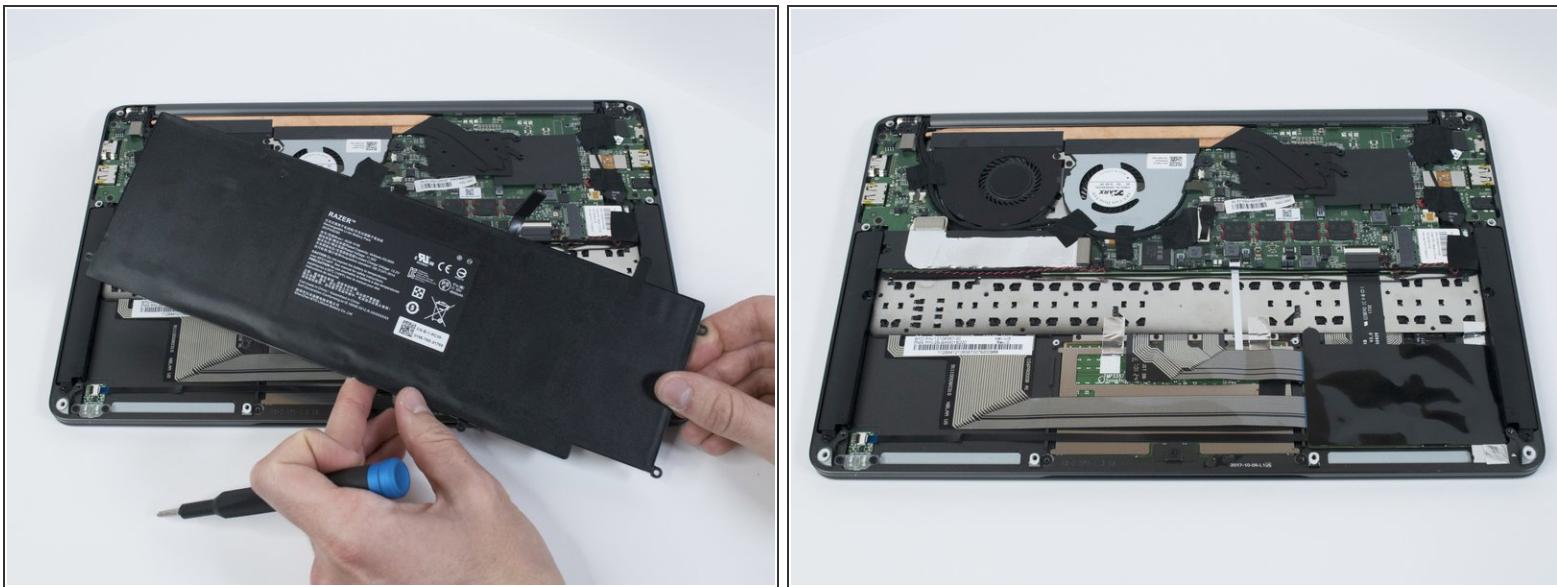

ⓘ Remove any tape attached to the battery.


- Use the plastic spudger to pry out the battery.

## Step 6 — Audio and USB-C Port

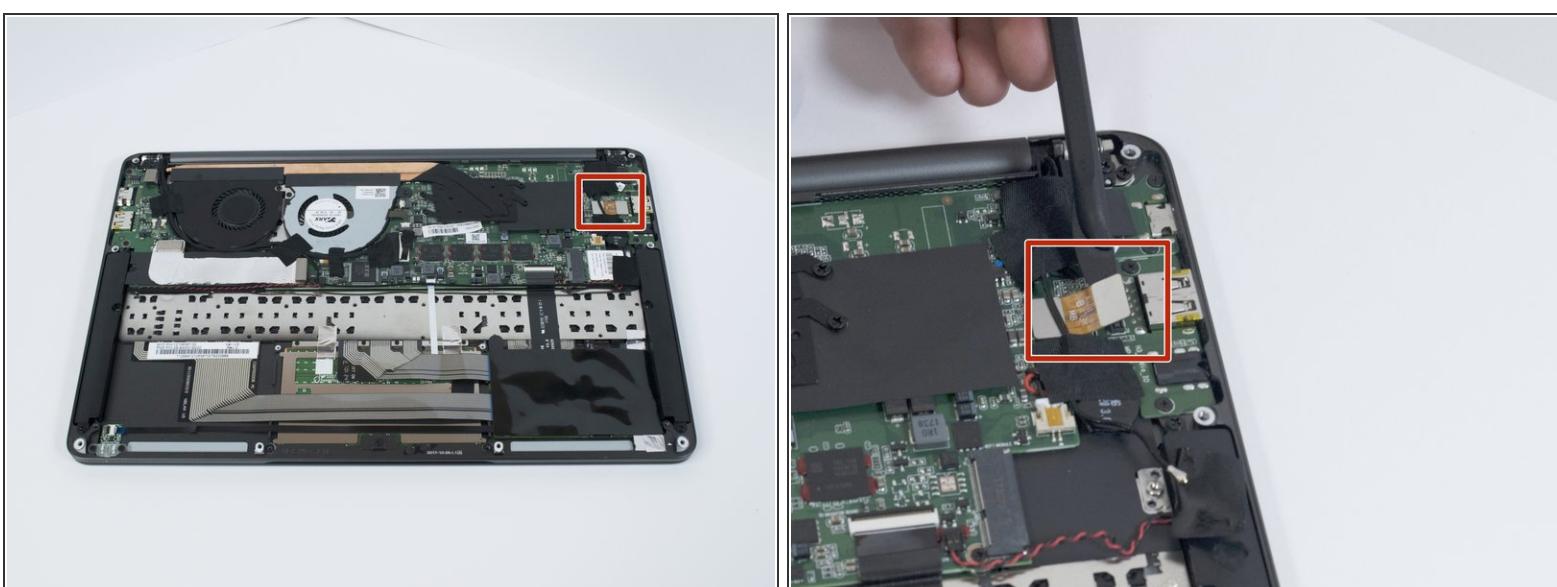

- Use a plastic spudger to lift up the module connector.

## Step 7

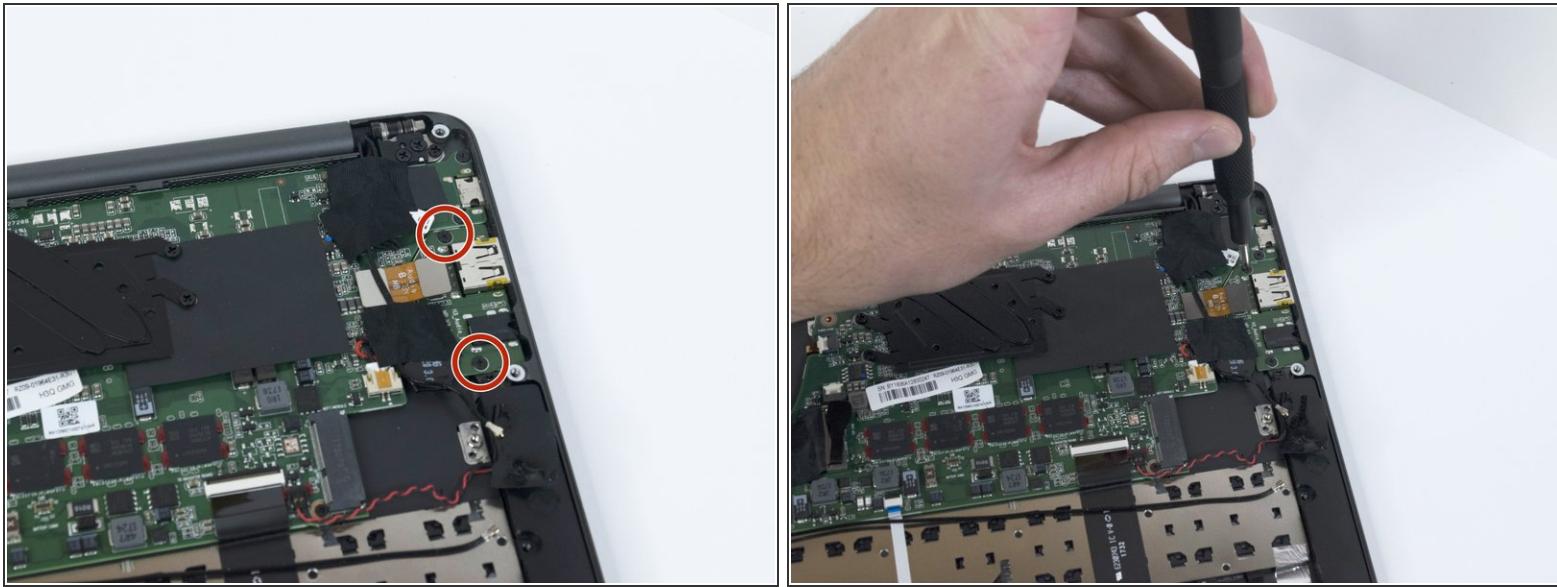

- Use a Phillips #00 screwdriver to remove the two, 3mm screws from the USB-C and audio port module.

## Step 8



- Use a plastic spudger to remove the USB-C and audio port module from the chassis.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-01-09 02:24:12 AM (MST).

