




# Razer DeathAdder Chroma Scroll Wheel Replacement

This guide will inform you on how to access and replace the scroll wheel for the DeathAdder Chroma.

Written By: Corrie Tung

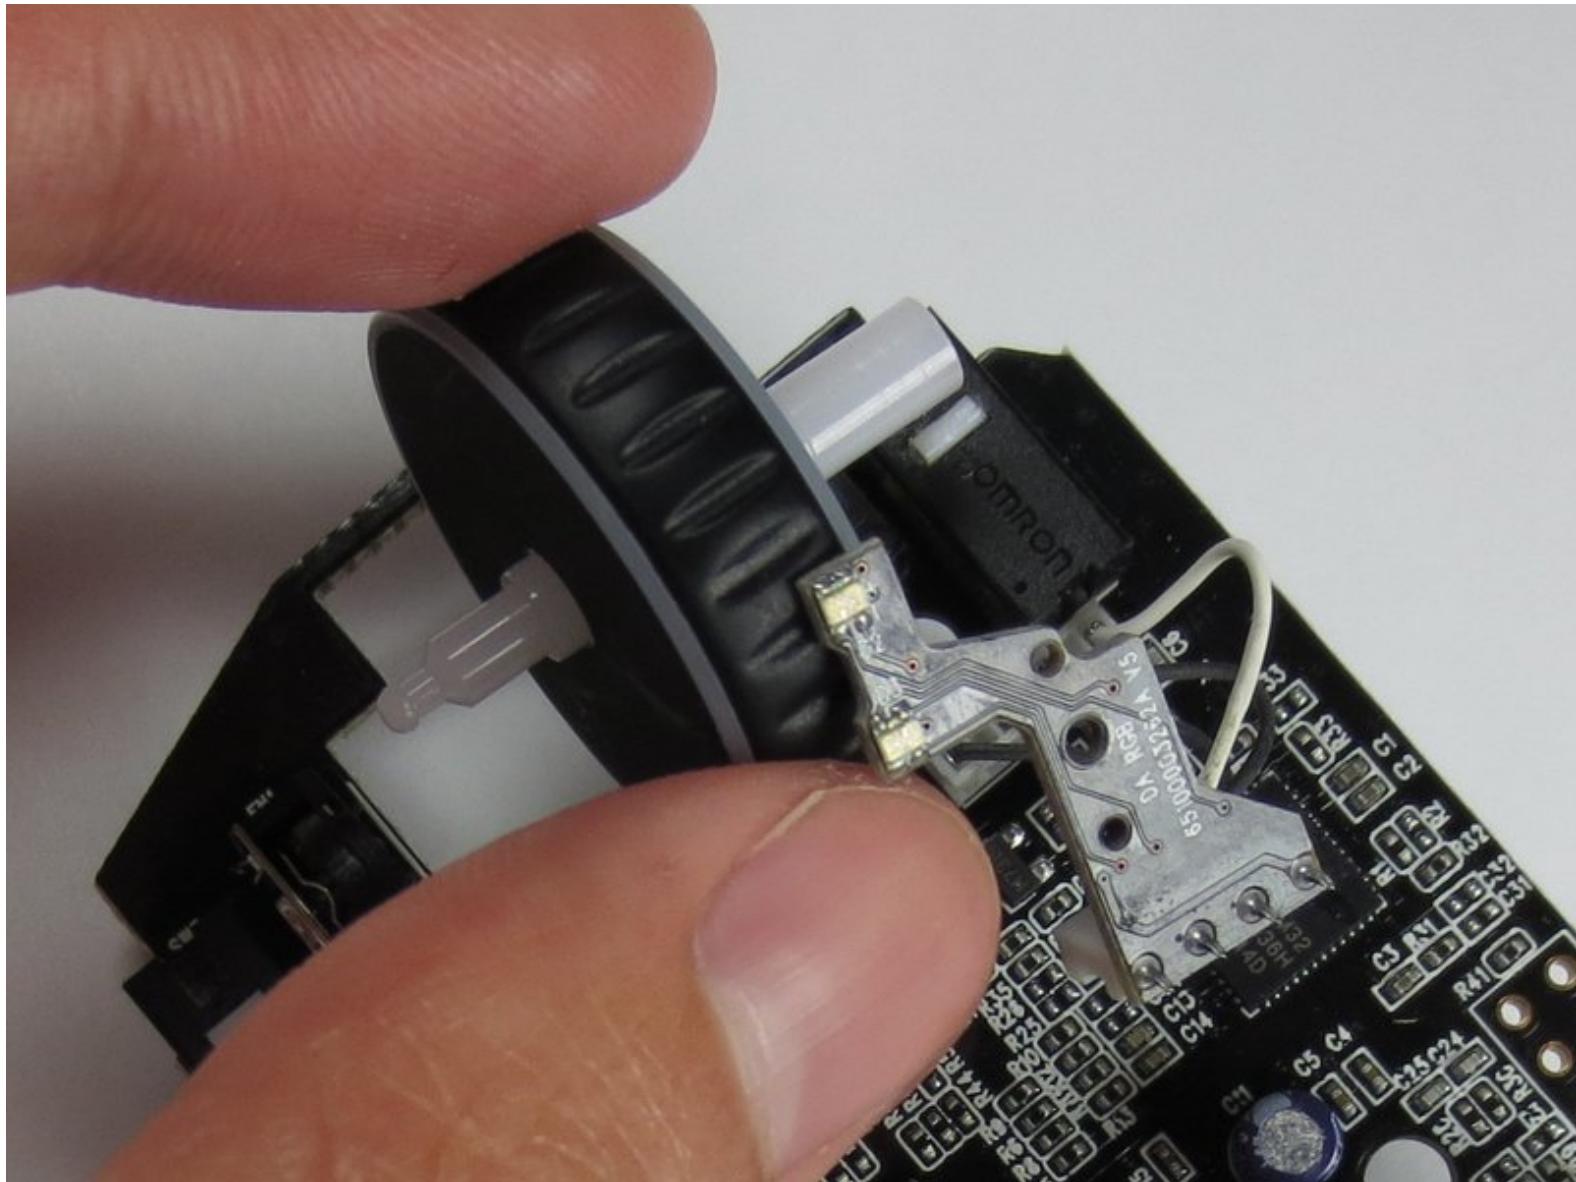

This document was generated on 2019-09-22 08:20:04 AM (MST).

## INTRODUCTION

The Razer DeathAdder Chroma may experience faulty scroll wheel operation, such as a stuck wheel or having a non-functional scroll wheel click. This guide will show you how to access the scroll wheel for cleaning or replacement.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Outer Casing



- Opening the mouse casing will void any warranty that exists for the mouse.
- Turn the mouse over so the bottom is facing up.

## Step 2



- Use the blunt end of the spudger to pry the adhesive rubber pads from the top left and right edges.

## Step 3



- Use a Phillips #0 screwdriver to remove two 6.7 mm screws.

## Step 4



- Use your fingers to identify the location of the screw under the bottom label.

## Step 5



- Use a Phillips #0 screwdriver to remove one 6.7 mm screw.
- *i* Clear the label away from around the screw for easier removal.



## Step 6



- Turn the mouse over so the bottom is facing down.
- Separate the top casing from the bottom base by pulling the top casing upwards.

**!** Separating the casing too quickly could damage the ribbon connector between the motherboard and the LED lights.



## Step 7

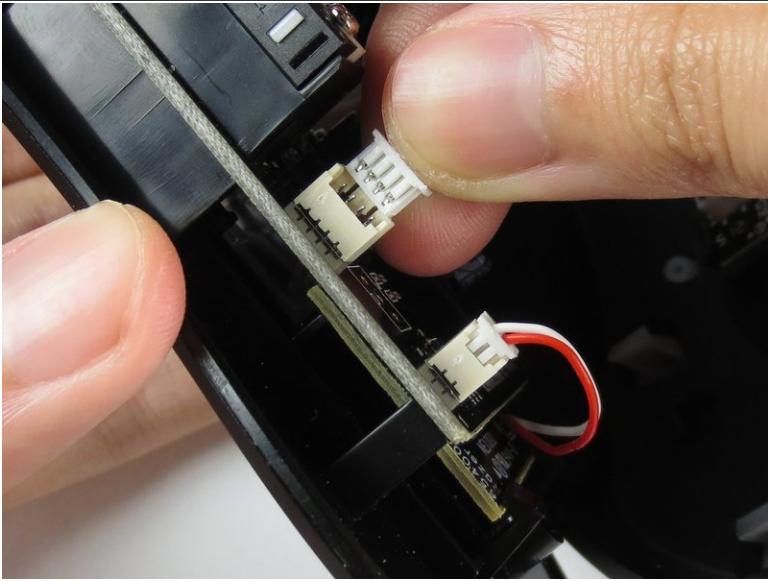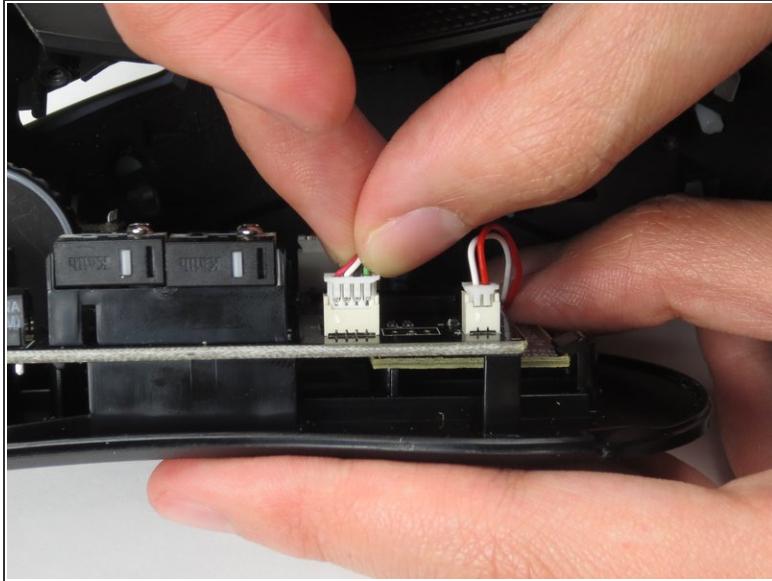

- Disconnect the ribbon connector between the motherboard and the LED lights by pulling upward.


 Pulling too hard could damage the wire connections.

## Step 8 — Motherboard

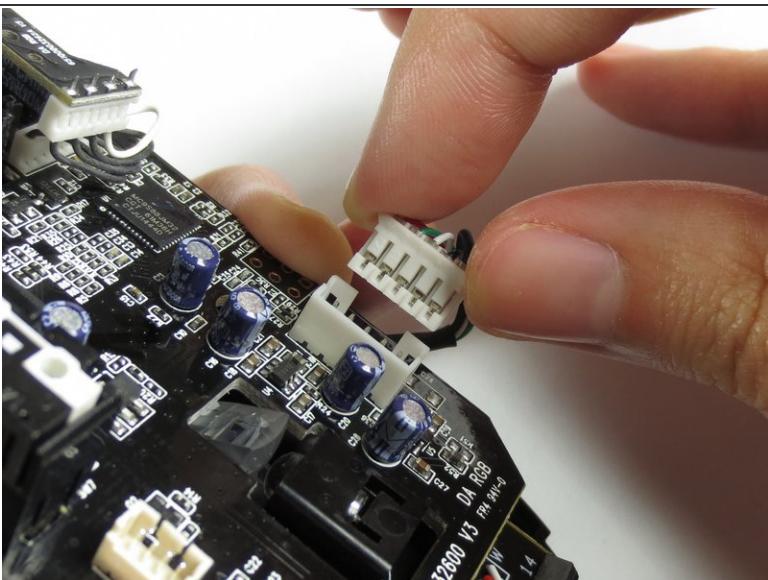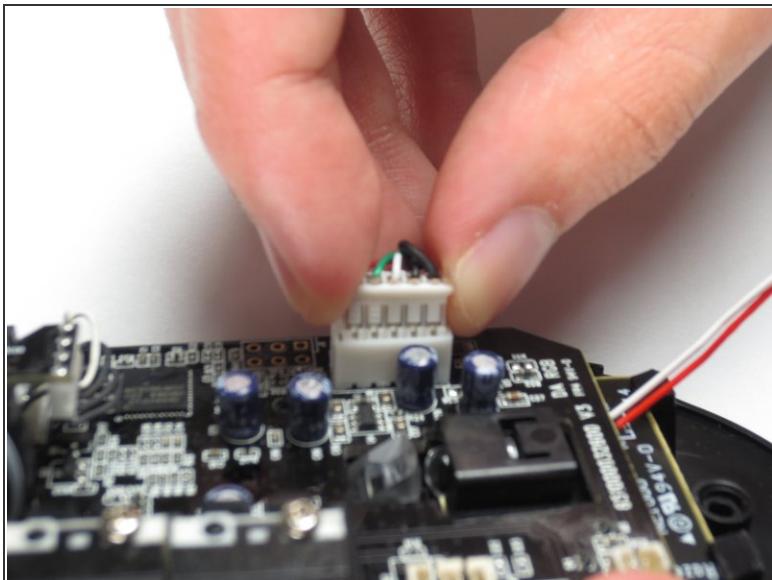



- Disconnect the ribbon connector between the motherboard and the USB cable by pulling upward.

## Step 9

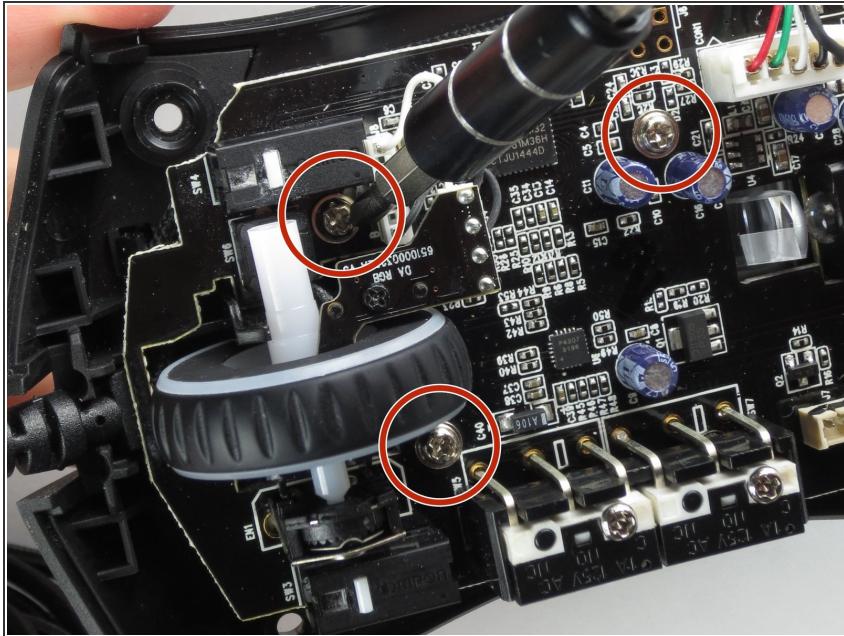


- Use a Phillips #0 screwdriver to remove three 5.5 mm screws.

## Step 10

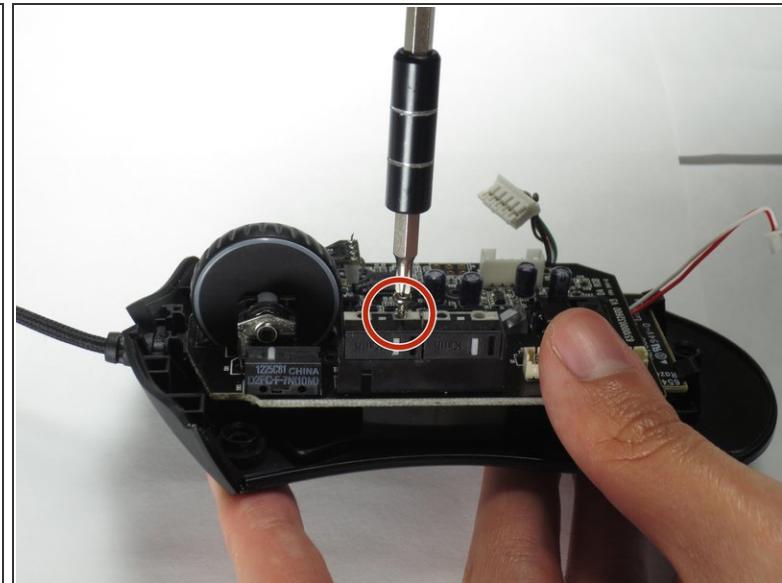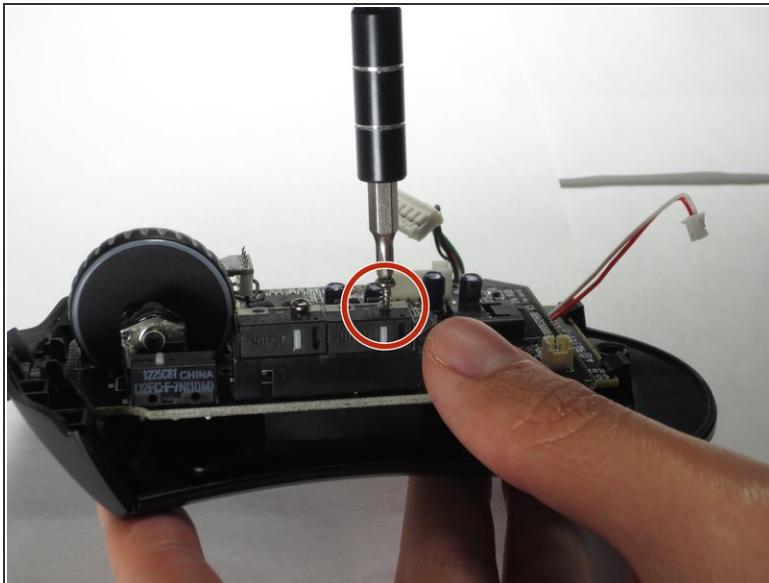



- Use a Phillips #0 screwdriver to remove two 11.5 mm screws on the side buttons.

## Step 11

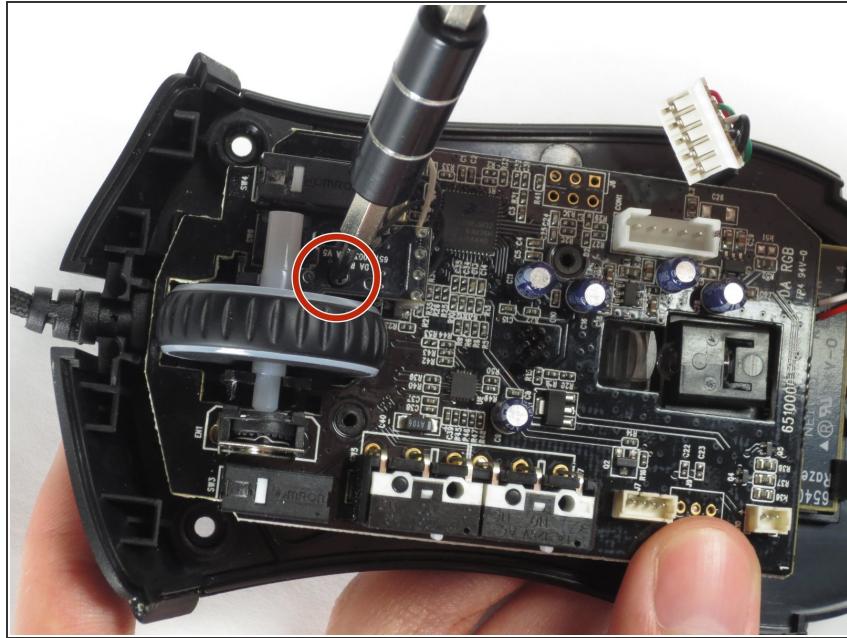


- Use a Phillips #000 screwdriver to remove one 5.0 mm screw.

## Step 12

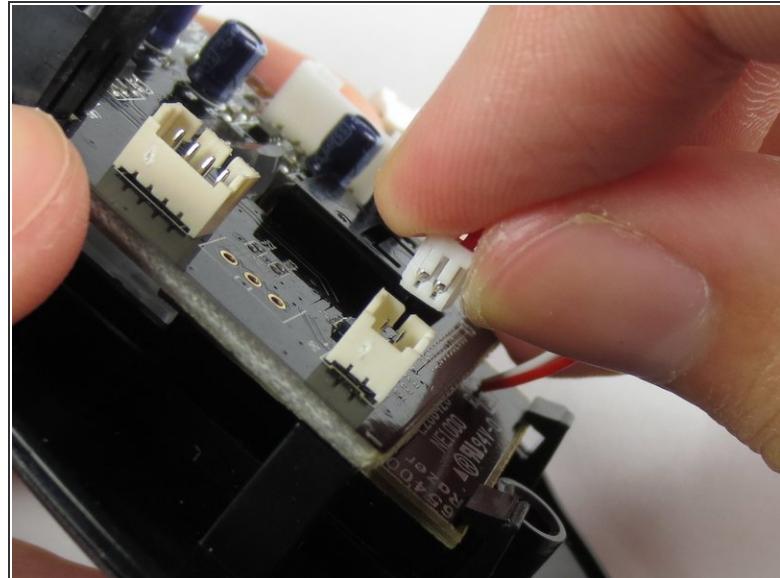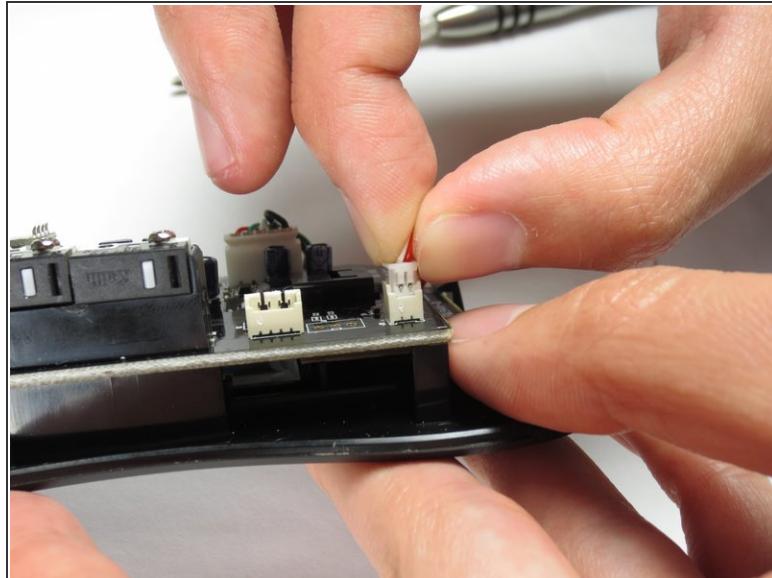



- Disconnect the ribbon connector between the motherboard and the optical sensor.

## Step 13

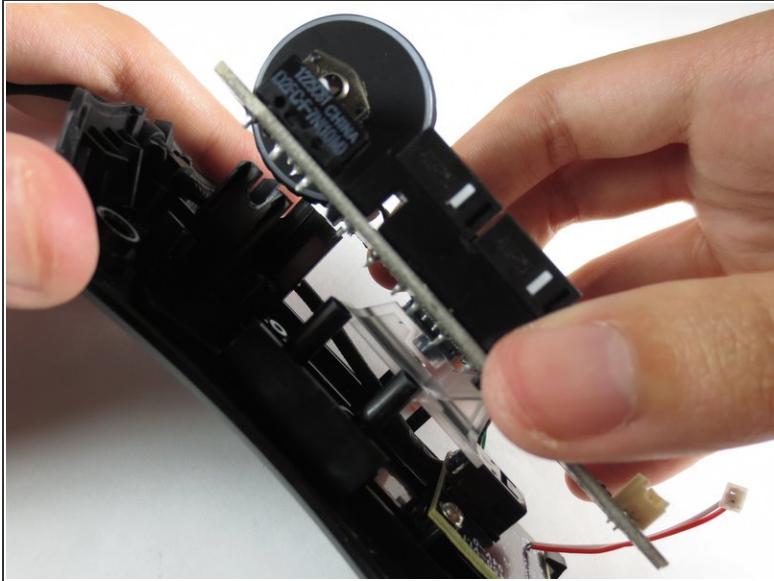

- Remove the motherboard by grasping the sides and gently pulling upward.

## Step 14 — Scroll Wheel

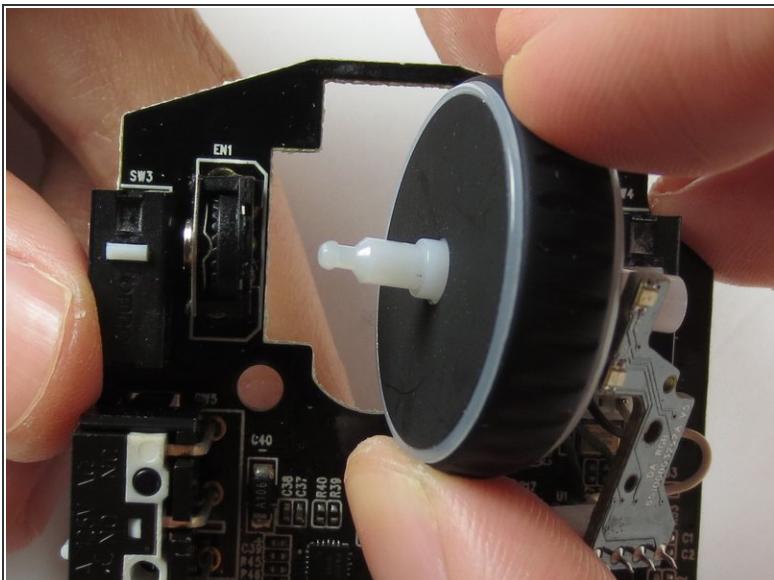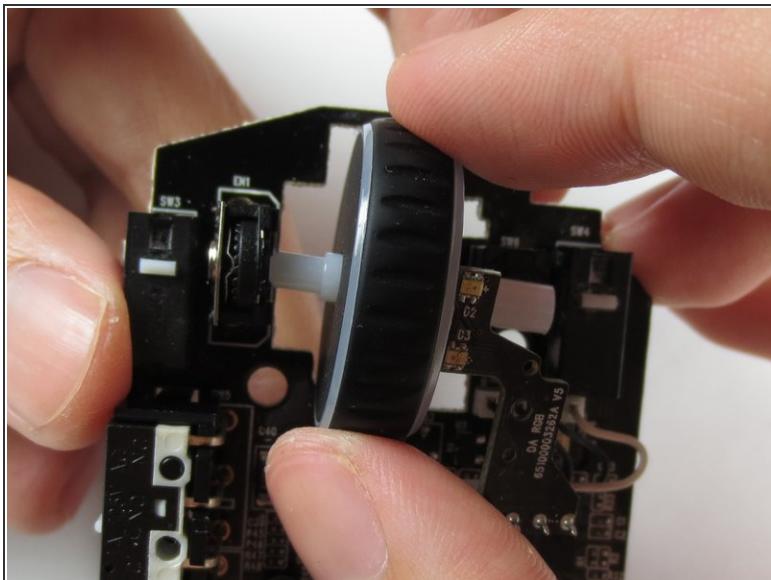

- Remove the scroll wheel from the socket by pulling to the right.

**⚠** Pulling too hard could damage the scroll wheel connector.

To reassemble your device, follow these instructions in reverse order.