



Repairing Nokia 6500 Slide LCD

Nokia 6500 Slide LCD replacement. Save your money & time. Do it for as low as IDR 50,000 and it takes less than 10 minutes.

Written By: dwi



INTRODUCTION

Nokia 6500 Slide LCD replacement. Save your money & time. Do it for as low as IDR 50,000 and it takes less than 10 minutes.

TOOLS:

- [T5 Torx Screwdriver](#) (1)

Step 1 — LCD



- Press the eject button to open battery enclosure. Remove battery, sim card and micro sd card.

Step 2



- Remove four screws using torx 5 screwdriver.

Step 3



- Pry each side evenly around its edges. The phone should start to split into two halves.

Step 4




- The top and bottom half of the phone is still connected by two ribbon connectors each side. Use a thin plastic like a credit card to carefully disconnect it.

Step 5




- Make sure all components stay on each side (see picture).

Step 6

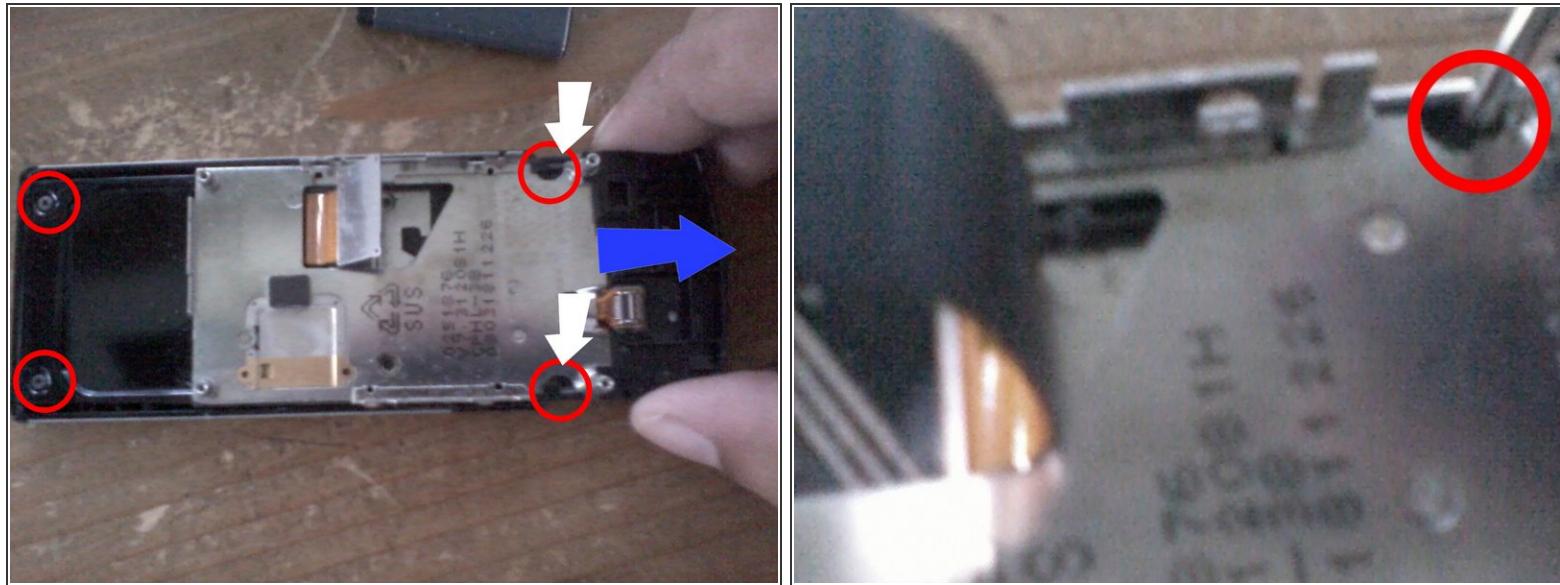

- Pull the black part away from the rest of the phone in the direction shown by the white arrows follows by the blue.
- This way you can accessing the two screws at the bottom of the phone. Remove four screws using torx 5 screwdriver.

Step 7

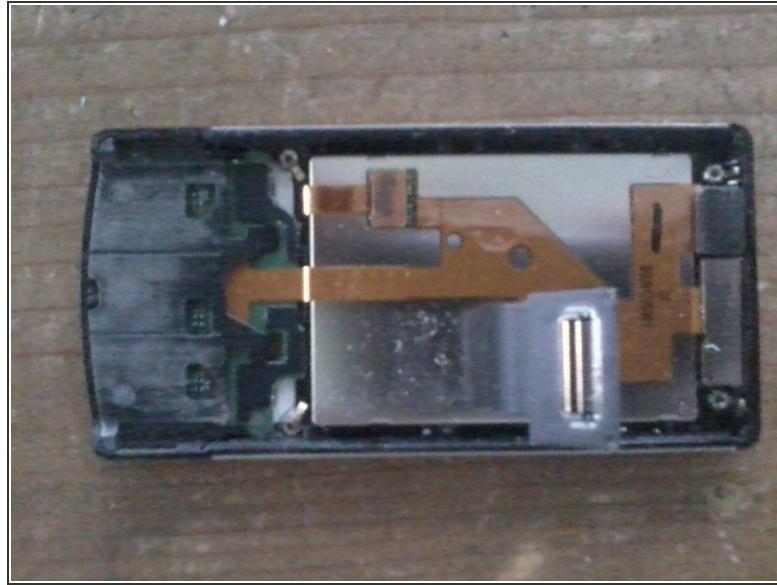

- Carefully pry out the lcd cover.
- Make sure the board connector pass the cover by angle.

Step 8



- Disconnect the LCD connector.
- Carefully peel the ribbon away from the back of the screen. It's held in place with double sided tape.
- The LCD screen will now be loose and can be removed and replace with the new one.

To reassemble your device, follow these instructions in reverse order.