




Replacement of the Jack port on the Dell XPS 13 9380

This guide explains how to remove the Jack port from your Dell XPS 13 9380.

Written By: Schwarzer

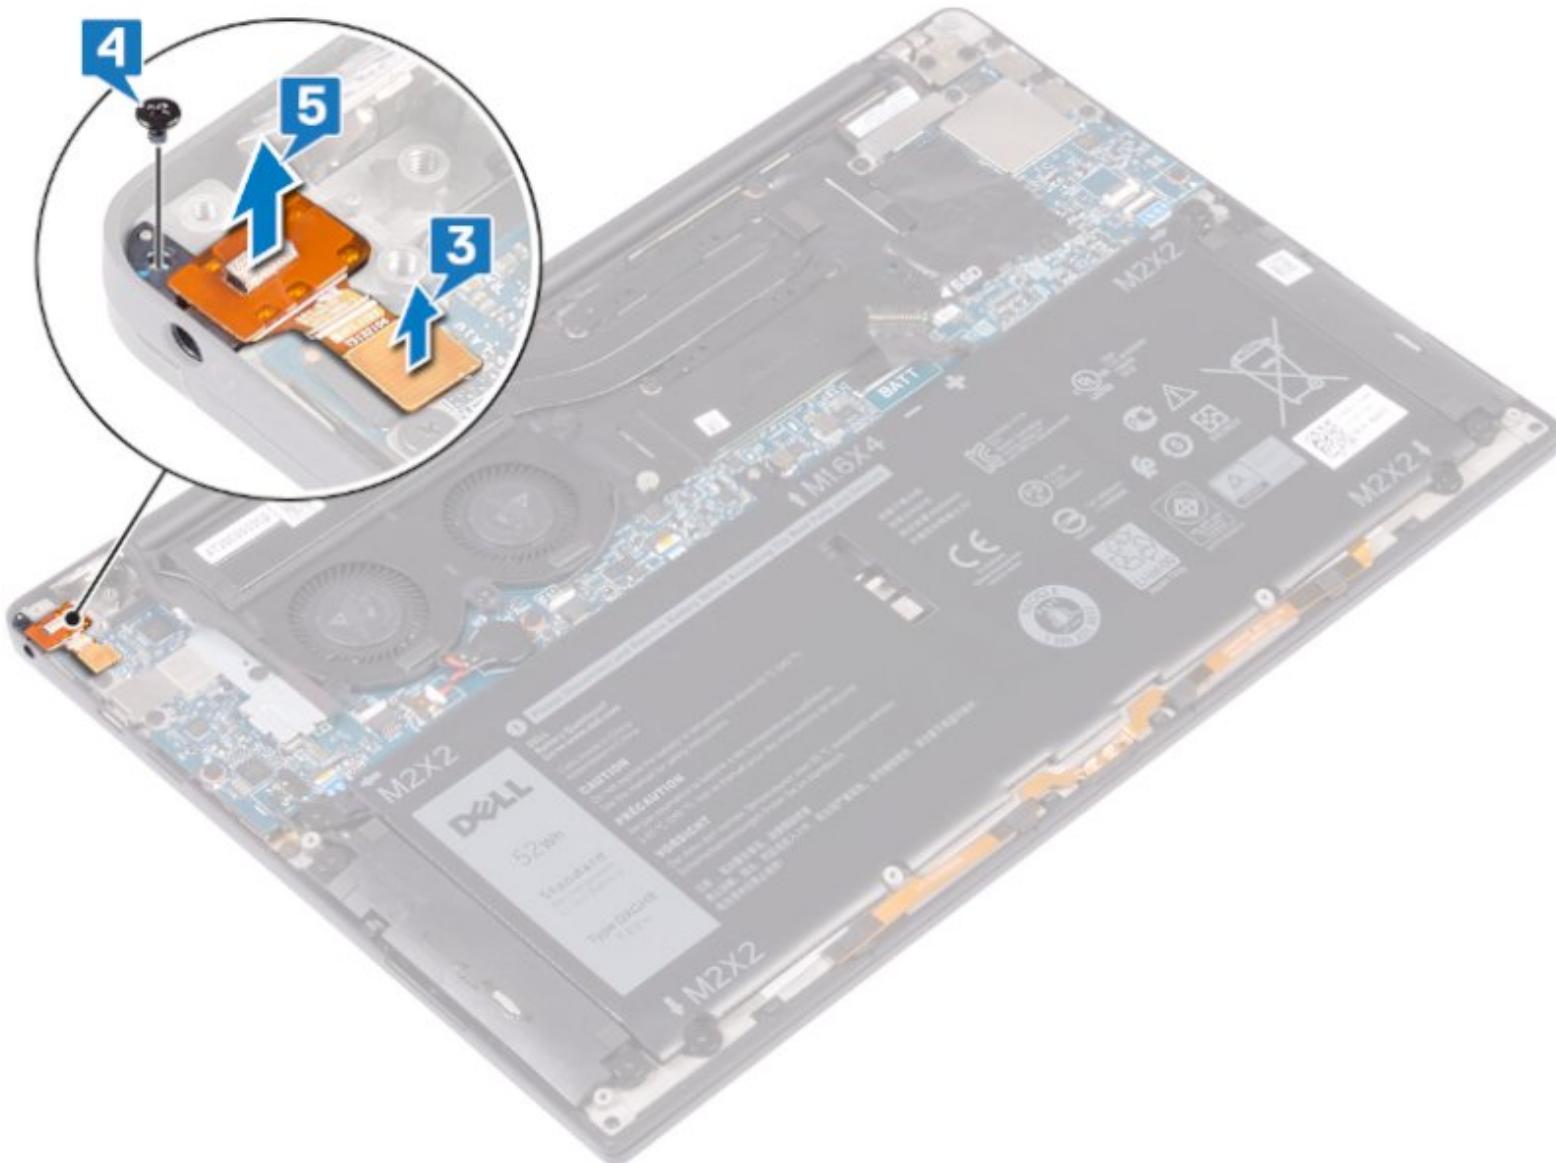


INTRODUCTION

You need to disconnect or replace the Jack port on your Dell XPS 13 9380, this guide is for you!

TOOLS:



- Mako Driver Kit - 64 Precision Bits (1)

Step 1 — Remove the back panel

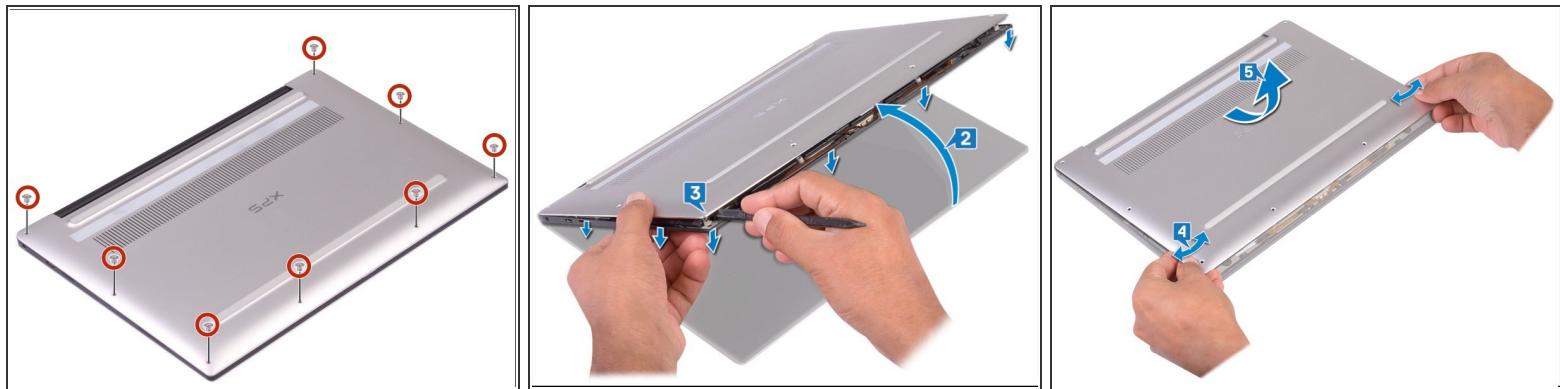


- Unscrew the eight screws (Torx M2x3) that attach the back panel.
- Turn the computer over, then open it by tilting it.
- Using a Spudger, lever on the back panel.
 - By sliding the back panel from left to right, release the clips that attach it. This way you can remove it

Step 2 — Remove the battery

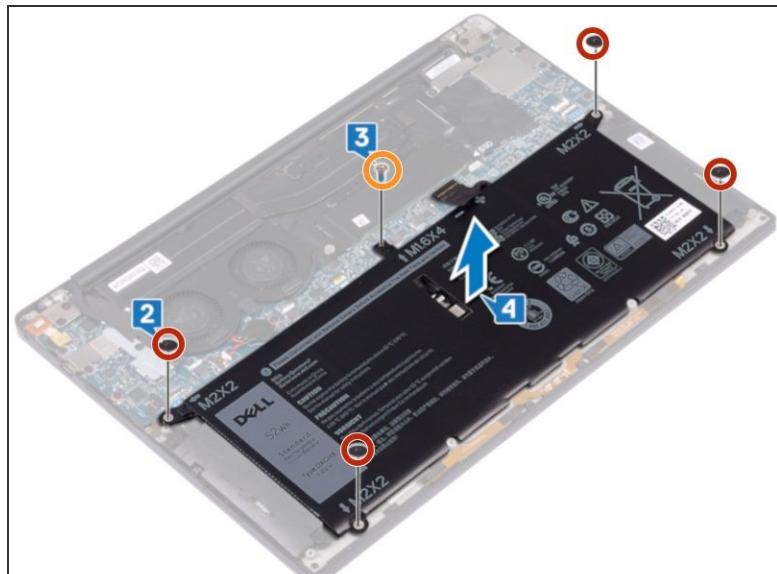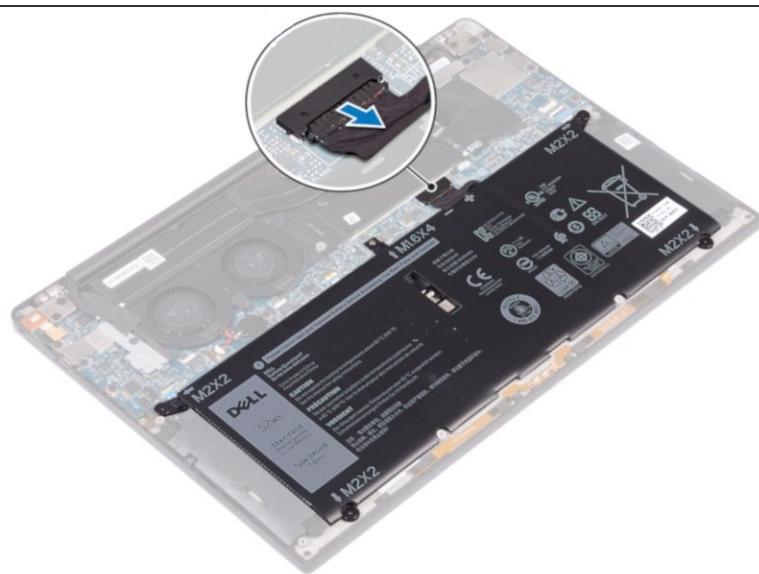

- 1- Disconnect the cable from the battery.
- 2- Remove the four screws (M2 x 2) that attach the battery.
- 3- Remove the screw (M1.6 x 4) that fixes the battery.
- 4- Remove the battery from its place.

Step 3 — Port Jack

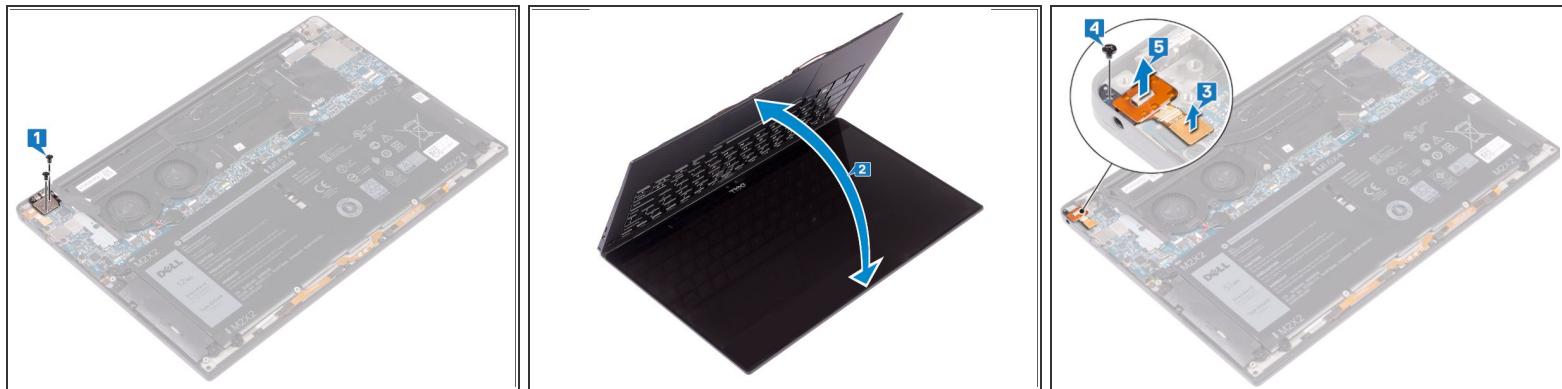

- 1- Remove the two screws (M2.5 x 4) that fix the left hinge.
- 2- Place the back of the computer screen on a clean and flat surface, then open and close the computer.
- 3- Disconnect the cable from the Jack port of the motherboard.
- 4- Remove the screw (M1,6x3) that fixes the jack port.
- 5- Remove the Jack port.

To reassemble your device, follow the instructions in reverse order.