




# Replacement of the coin cell battery on the Dell XPS 13 9380

This guide explains how to replace the coin cell battery in your Dell XPS 13 9380.

Written By: Schwarzer

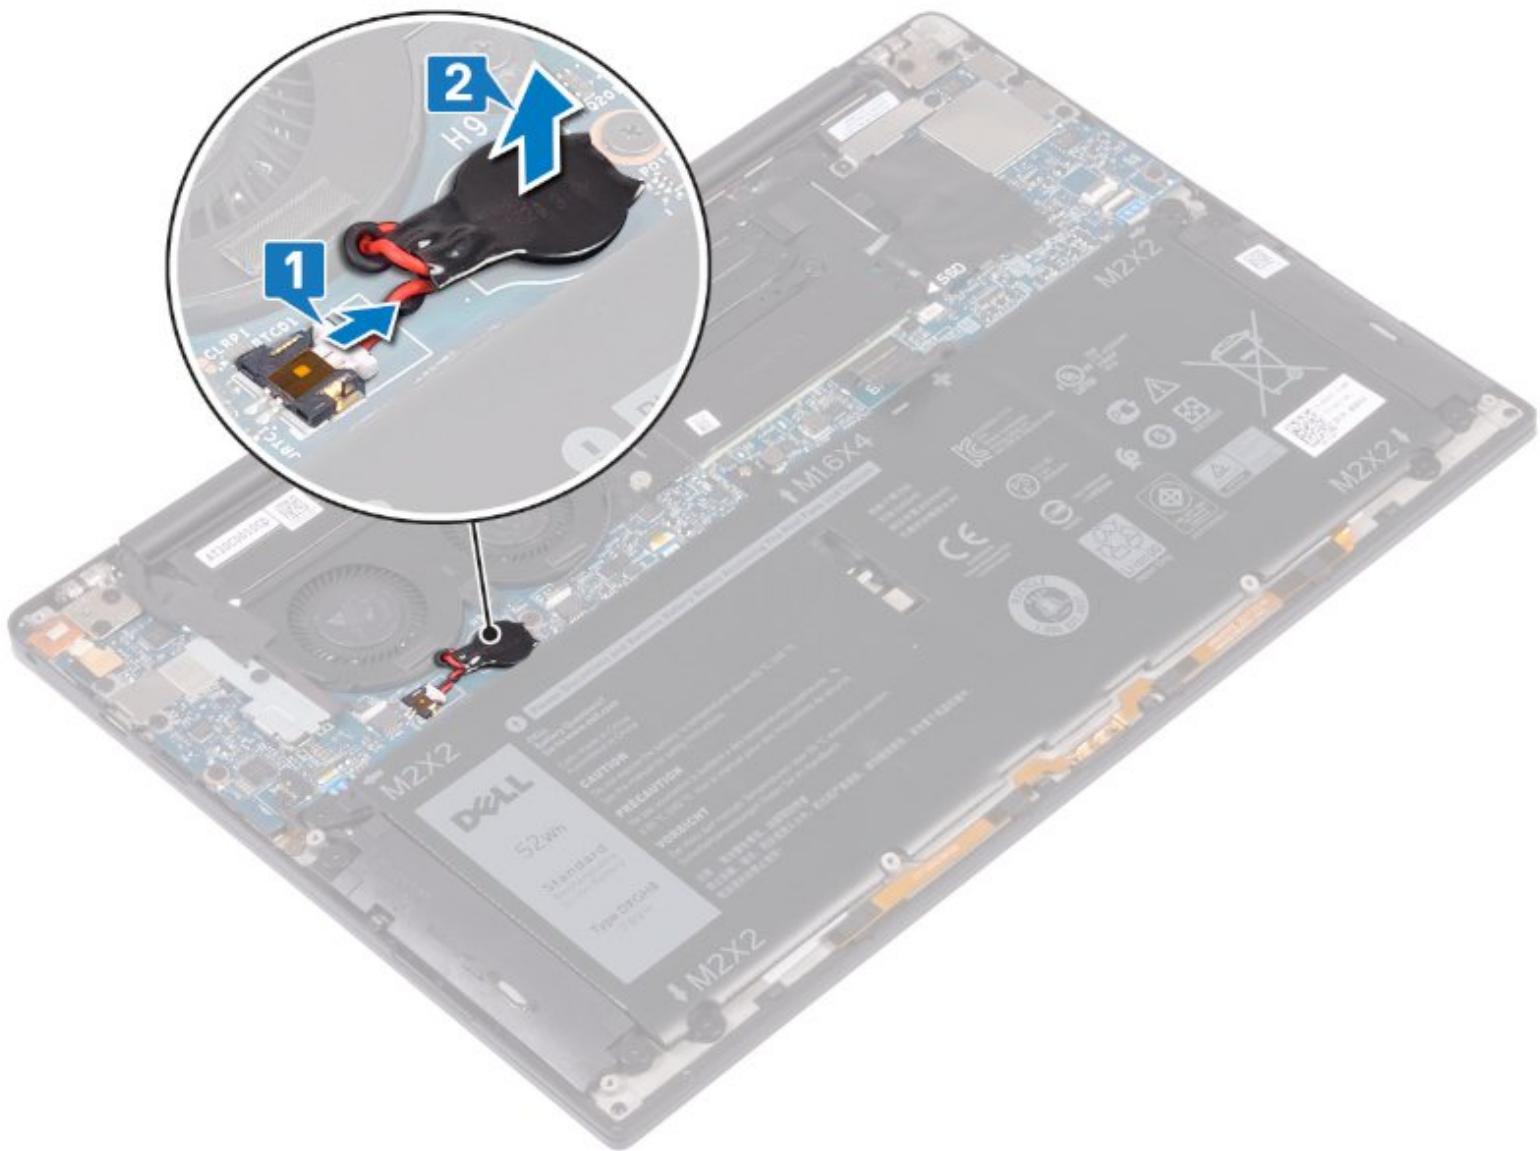


## INTRODUCTION

***You must disconnect or replace the coin cell battery in your Dell XPS 13 9380, this guide is for you!***

### **TOOLS:**



- Mako Driver Kit - 64 Precision Bits (1)

## Step 1 — Remove the back panel

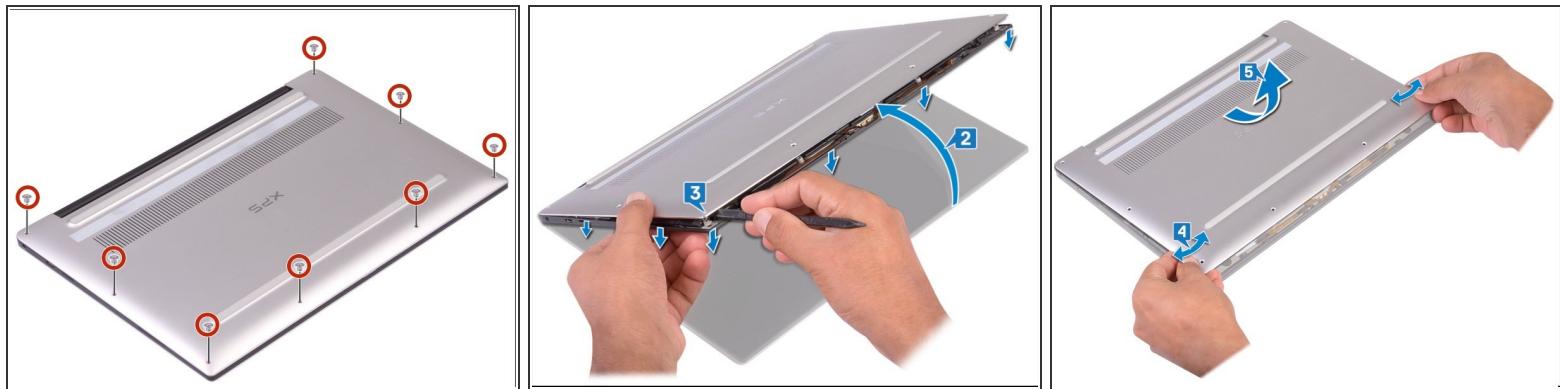


- Unscrew the eight screws (Torx M2x3) that attach the back panel.
- Turn the computer over, then open it by tilting it.
- Using a Spudger, lever on the back panel.
  - By sliding the back panel from left to right, release the clips that attach it. This way you can remove it

## Step 2 — Remove the battery

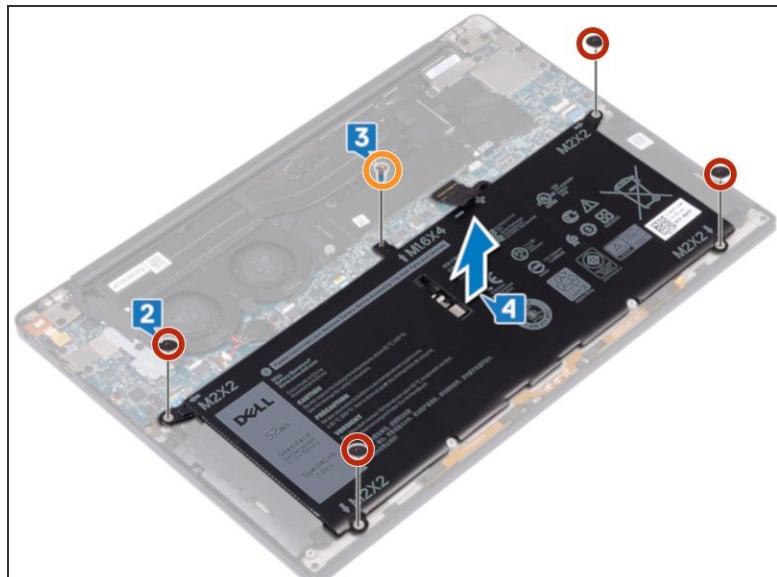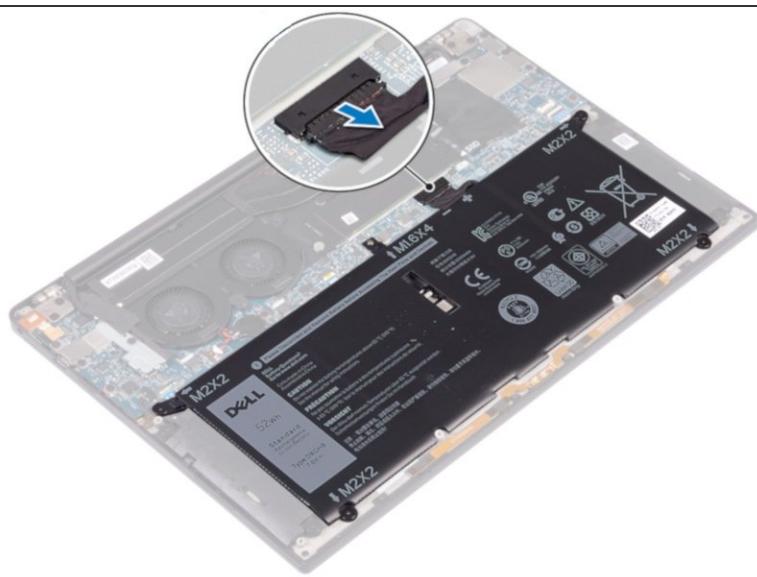

- 1- Disconnect the cable from the battery.
- 2- Remove the four screws (M2 x 2) that attach the battery.
- 3- Remove the screw (M1.6 x 4) that fixes the battery.
- 4- Remove the battery from its place.

## Step 3 — Coin cell battery

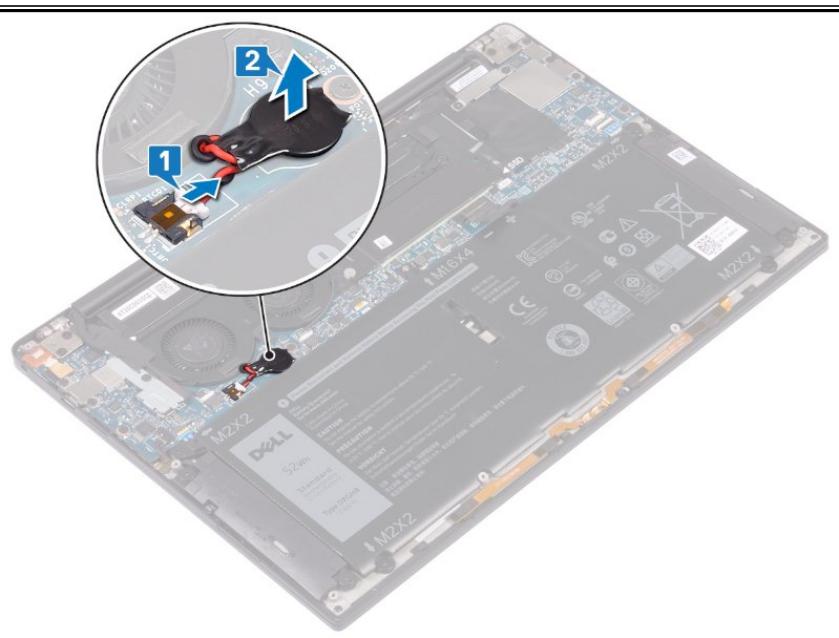

 We removed or disconnected the battery to avoid any electrical discharge.

 ***Removing the coin cell battery resets the BIOS settings to factory values. Before removing the coin cell battery, it is recommended to note the BIOS settings.***

- 1- Disconnect the coin cell battery cable from the motherboard
- 2- Use a lever to remove the coin cell battery from the motherboard.

To reassemble your device, follow the instructions in reverse order.