



Samsung Epix Keyboard Replacement

Step-by-step guild to replacing your old worn out keyboard buttons.

Written By: Chris



INTRODUCTION

Step-by-step guild to replacing your old worn out keyboard buttons.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery




- Press button on back of phone below camera.
- While button is depressed, remove the back panel of the phone by sliding off (not shown in picture).

Step 2

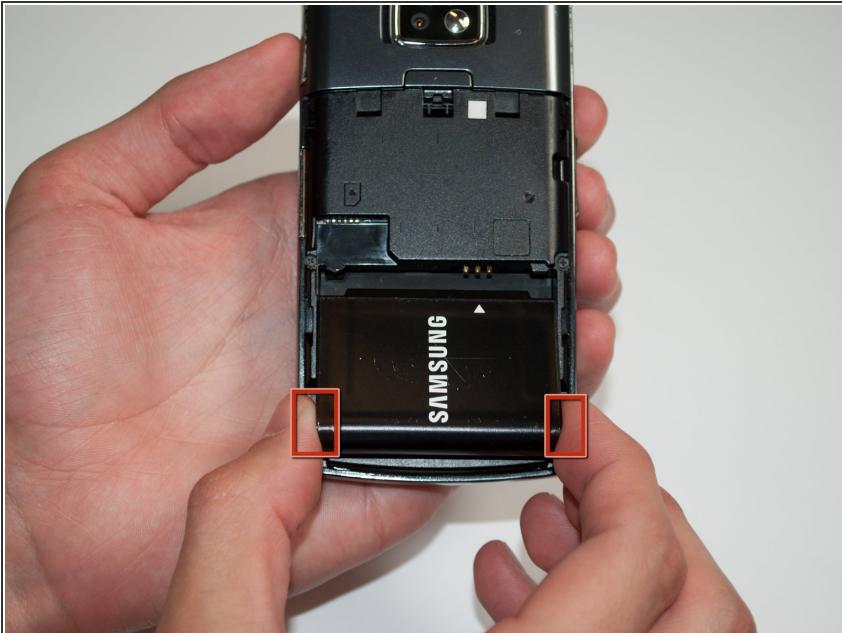

- Grasp the battery near the bottom with two fingers.
- Lift battery up and out gently.

Step 3 — Keyboard

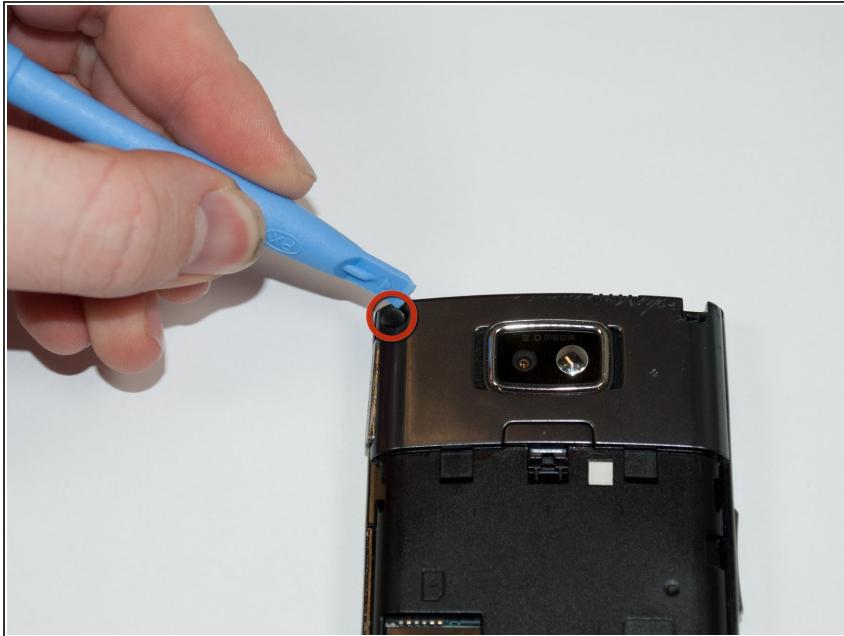

- Using an iPod opening tool, remove the screw cover in the top left corner by lifting it up.

Step 4



- Use the Phillips #00 screwdriver to remove the six screws on the back of the phone. Three are evenly spaced on each side.

i The upper right screw is 4.5mm while the rest are 6.5mm.

Step 5



- Slide the iPod opening tool into the seam on the side of the phone and turn it slightly to unhook the eight clips.

(i) There are three clips on each side and two at the bottom of the phone.

Step 6



- Once all eight of the clips have been unhooked, lift the back panel off of the phone.

⚠ Be careful not to remove the front panel. It is still connected to the phone chassis by a ribbon cable located in the bottom right side of the motherboard.

Step 7



- Using an iPod opening tool, unlatch the ribbon cable located in the lower right corner of the motherboard.
- Carefully remove the ribbon.

Step 8



- Remove the front faceplate.

Step 9



- Grasp the rubber keyboard in the corner with your fingers and lift to remove.

To reassemble your device, follow these instructions in reverse order.