




Samsung Galaxy Tab A 10.1 S-Pen Speaker Replacement

This guide will provide you with step by step instructions on how to replace speakers of the Samsung Galaxy Tab A 10.1 tablet.

Written By: Guneet Bawa

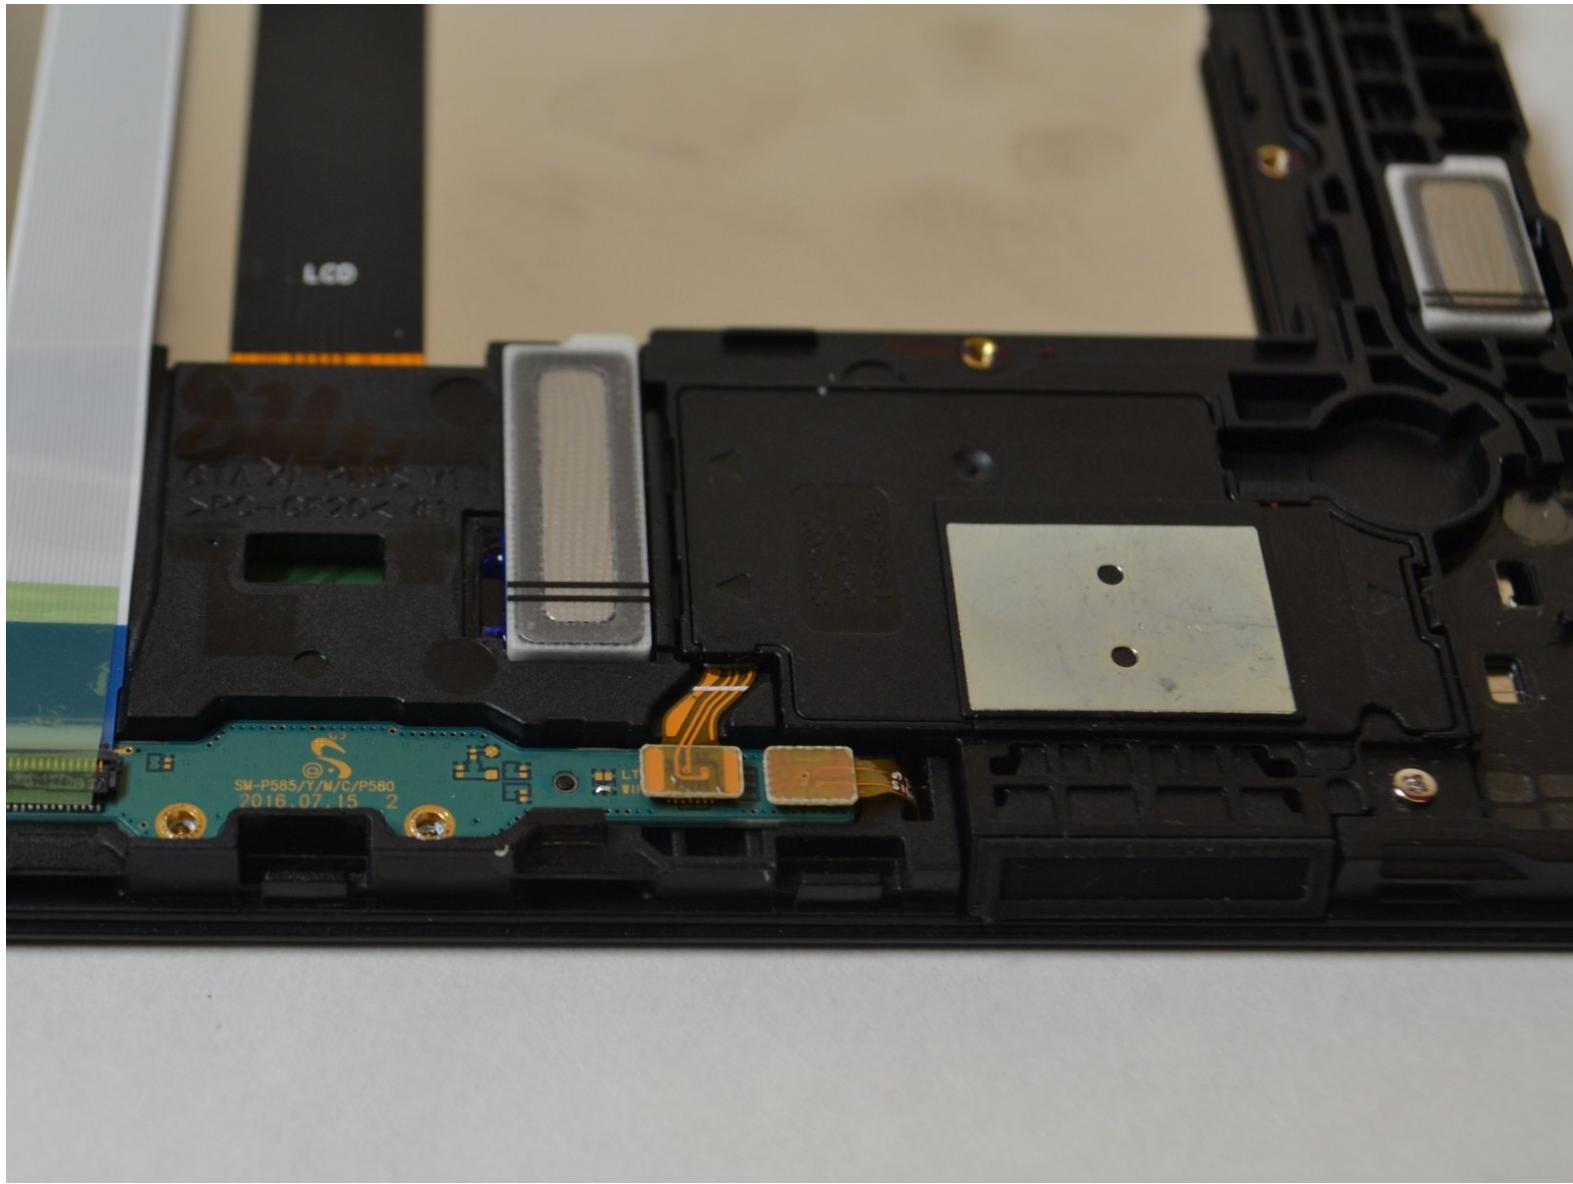

This document was generated on 2019-11-14 04:02:21 AM (MST).


INTRODUCTION

This guide will guide provide you with step by step instructions on how to replace speakers of the Samsung Galaxy Tab A 10.1 tablet.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery

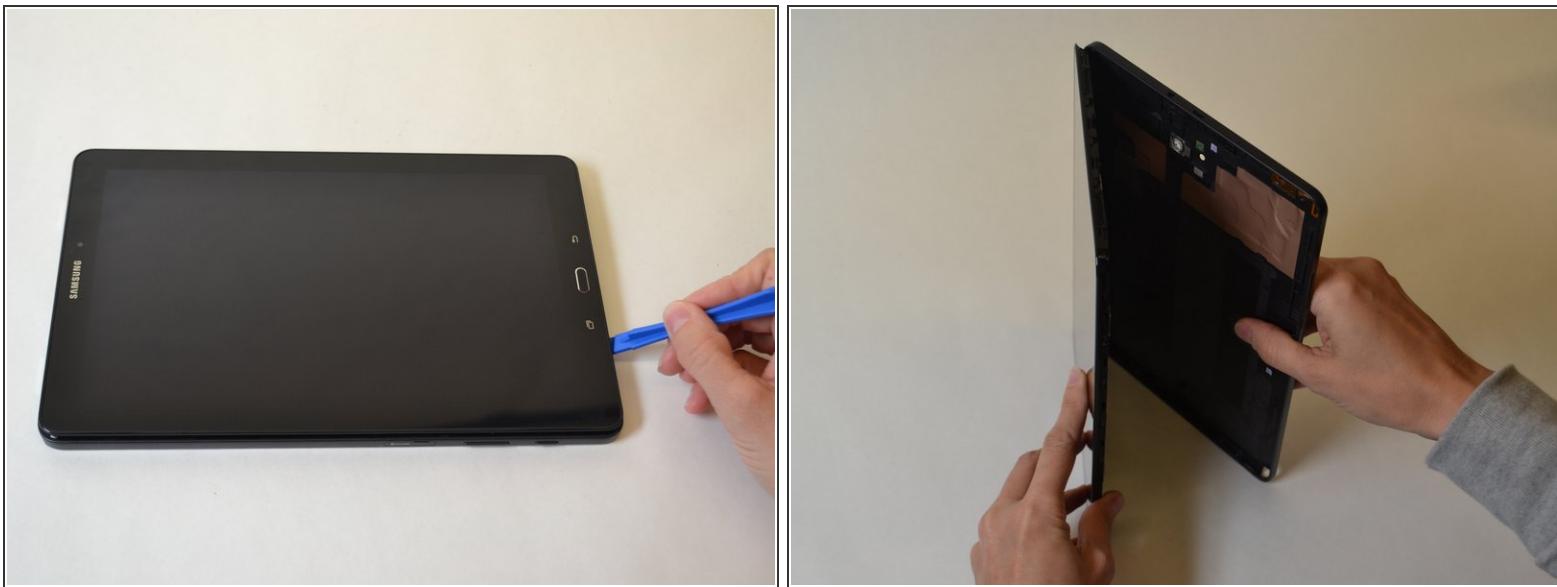


- Remove all external power and turn off the tablet.
- Insert a plastic opening tool between the screen and rear casing.
- Pry the screen and rear casing apart.

Step 2

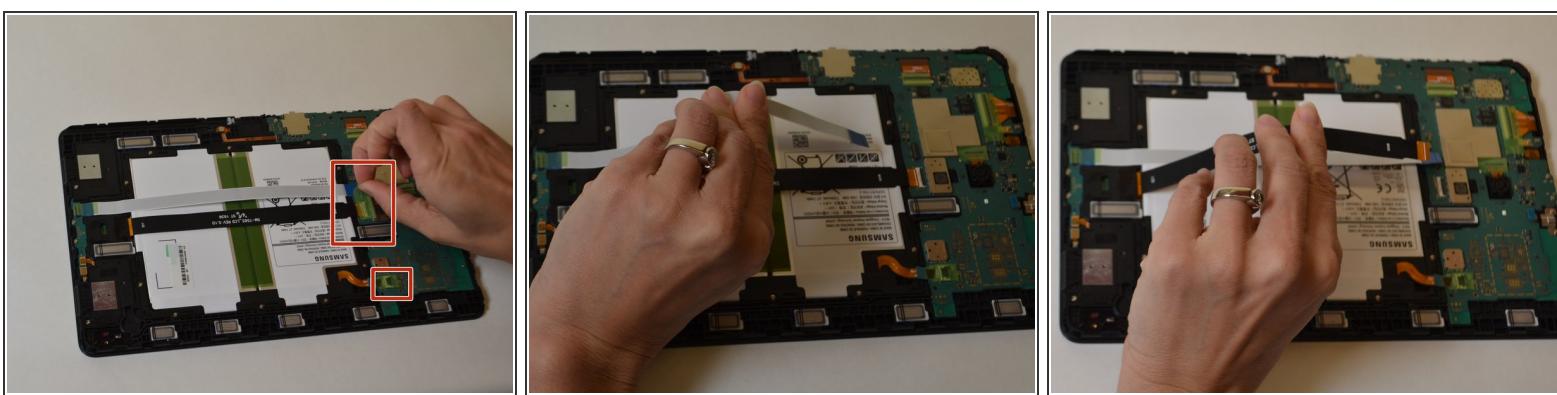


- Remove the three green pieces of tape covering the white, black, and gold ribbon cables.
- Use a spudger to flip up the retaining flap on the three ribbon cable [ZIF](#) sockets.
- Pull the ribbon cables out of the sockets.

Step 3

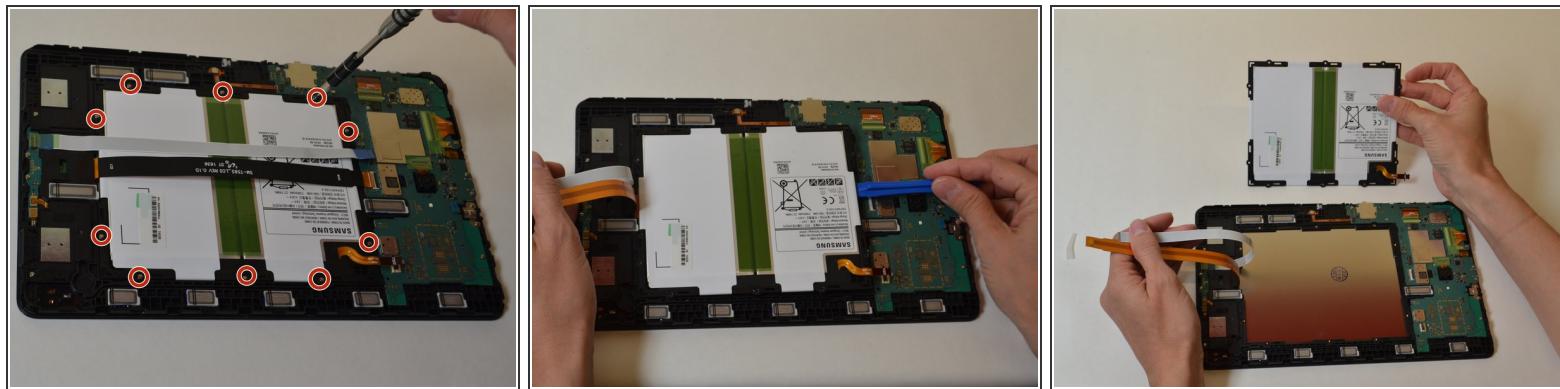


- Remove the ten 4mm Phillips #000 screws from the battery.
- Use a plastic opening tool to pry up the battery.
- Remove the battery.

Step 4 — Speaker

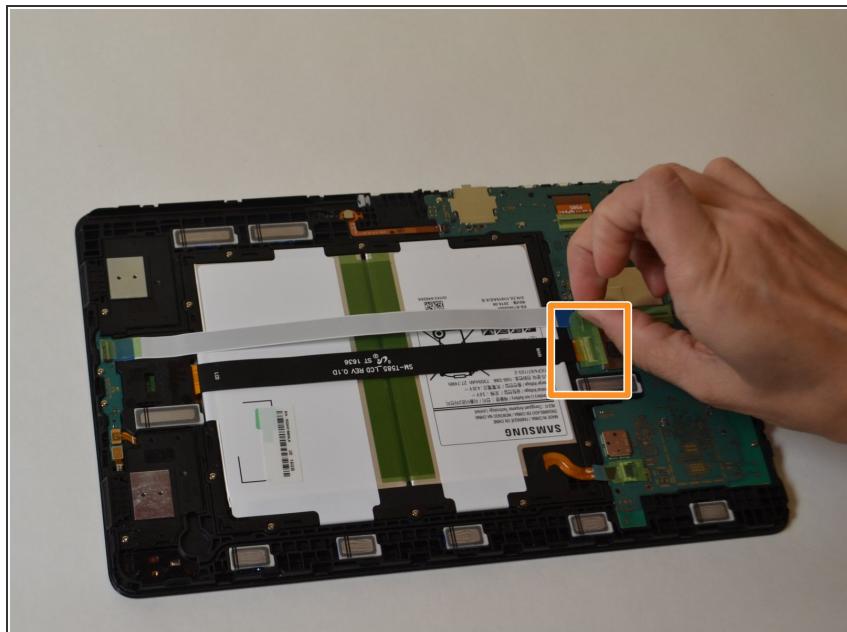


- Use a spudger to flip up the retaining flap on the ribbon cable [ZIF](#) socket.

Step 5

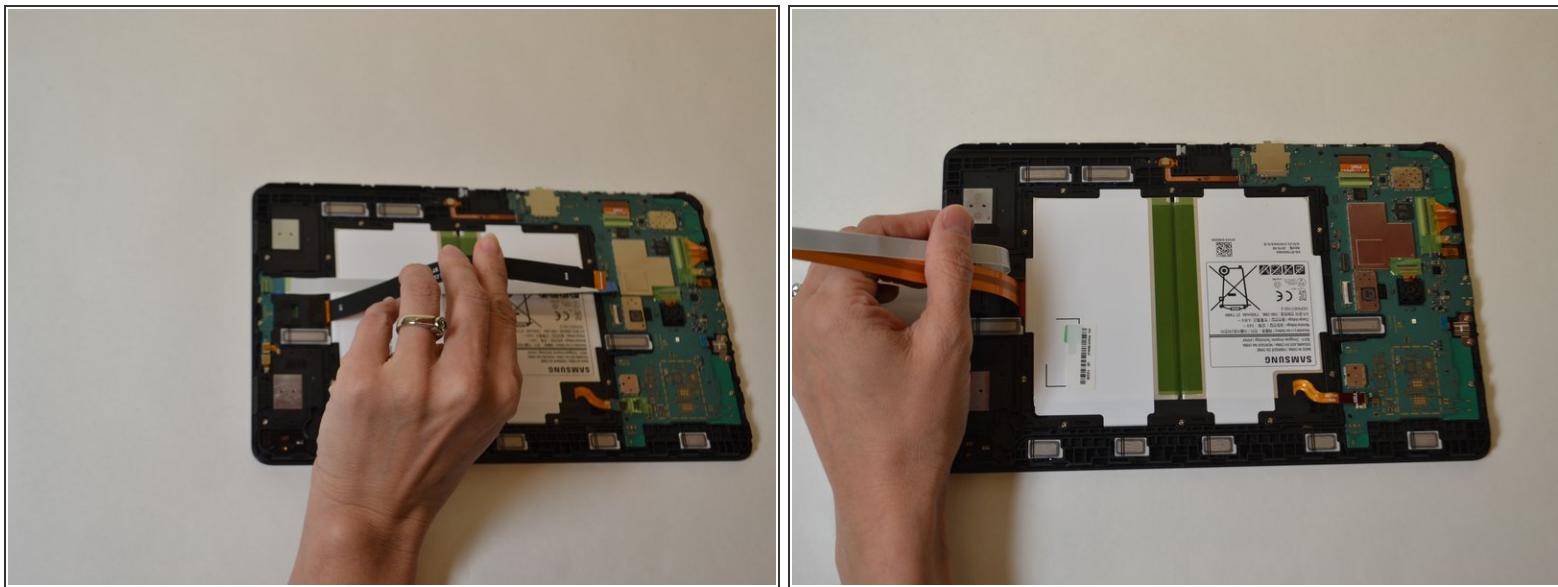


- Remove the ribbon cable from the socket.

Step 6

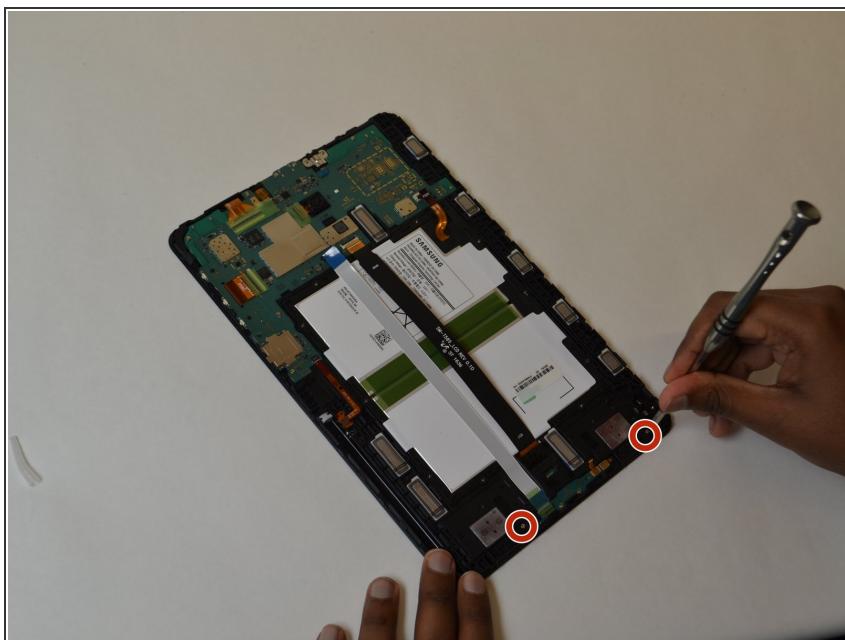

- Remove the two 4mm Phillips #000 screws from the speakers.

Step 7

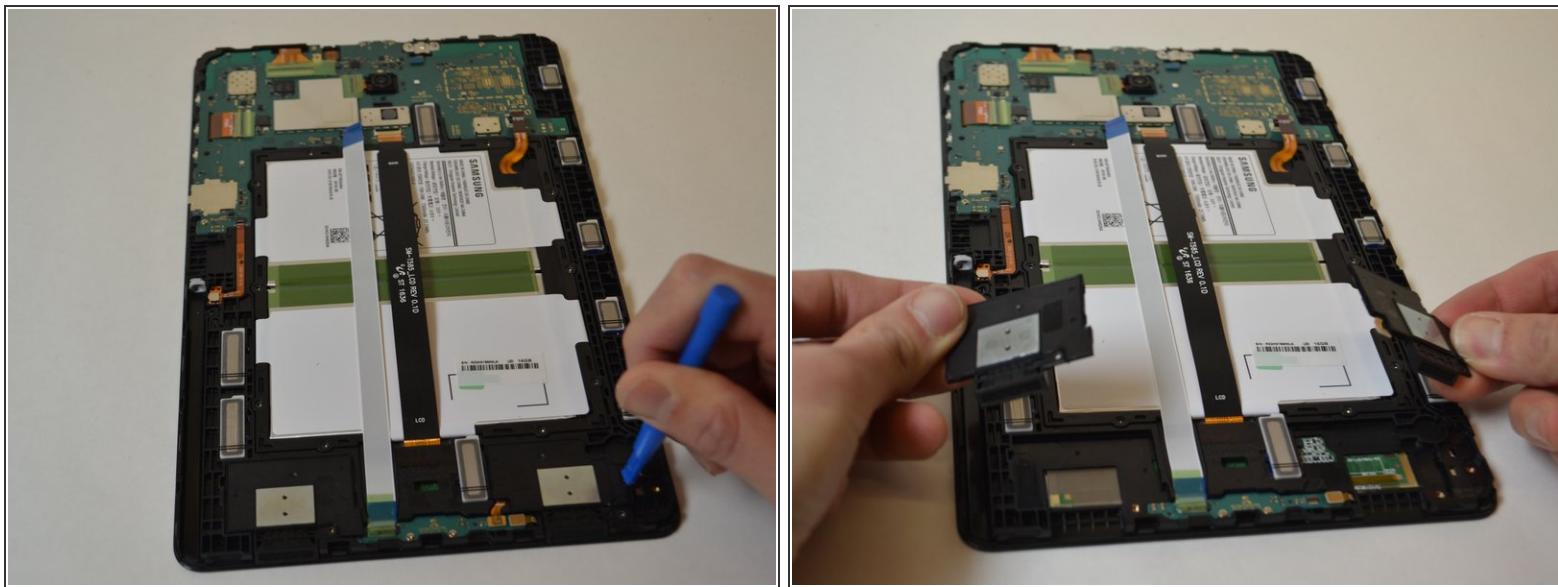

- Use a plastic opening tool to pry the speakers out of the tablet

To reassemble your device, follow these instructions in reverse order.