




# Samsung Galaxy Tab 3 Lite Camera Replacement

This guide will walk you through how to replace the Camera in your Samsung Galaxy Tab 3 Lite.

Written By: Patricia Laird

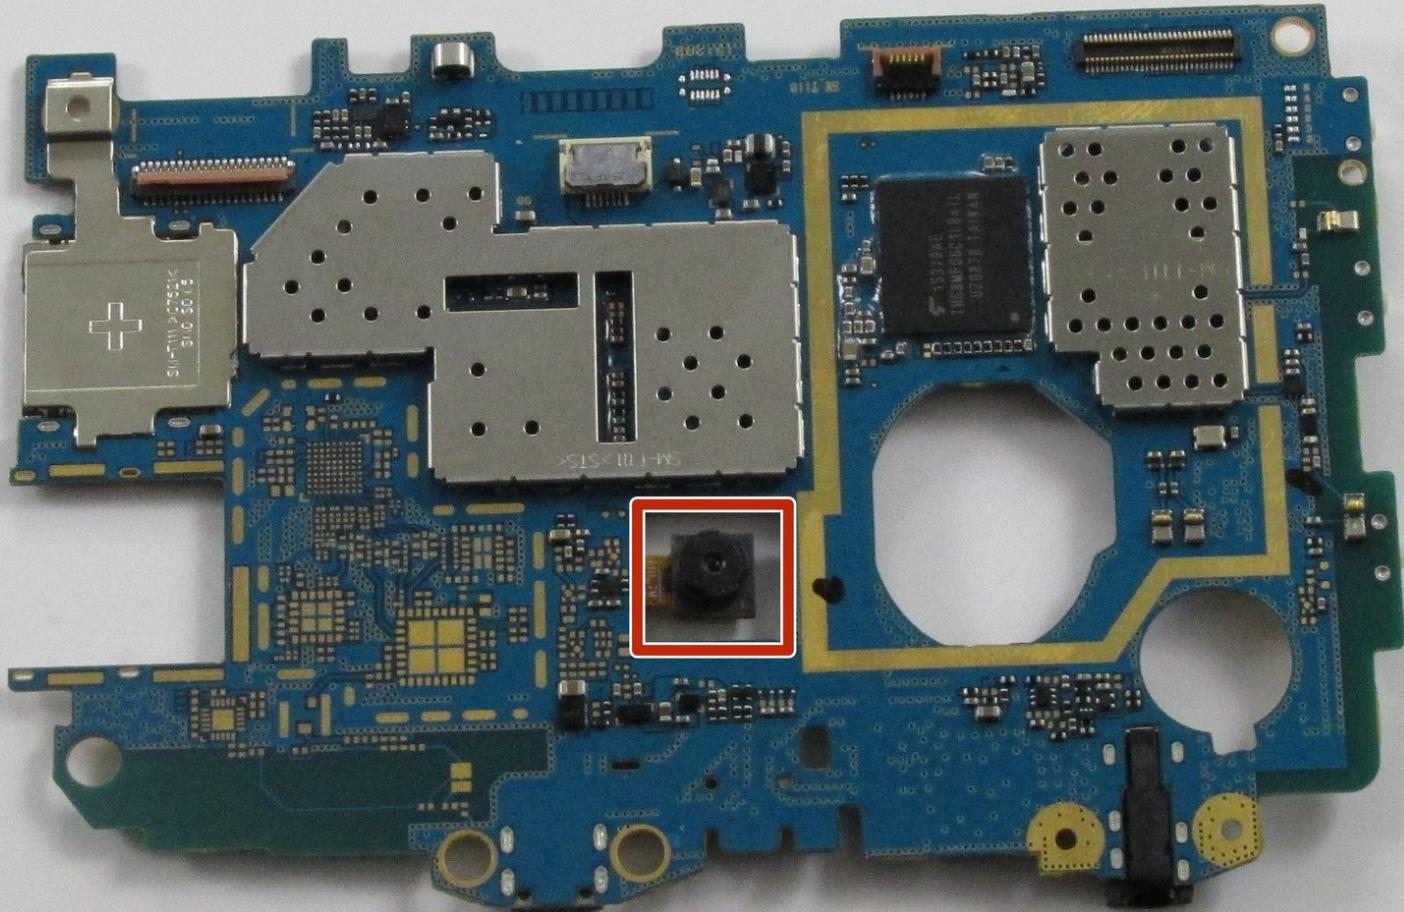

## INTRODUCTION

This guide will walk you through how to replace the Camera in your Samsung Galaxy Tab 3 Lite. To do this, you'll need to remove the back case of your tablet beforehand. The guide for that is listed here as well. Follow all instructions carefully, and take your time.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Precision Tweezers Set](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Rear Case




- Using a plastic opening tool, wedge in the seam between the screen and the case.
- Rock the tool by moving it towards and away from the middle of the screen, trying to separate the tape holding the screen and case together.
- This is a long process, so don't try and rush it. Also, be careful about applying pressure.

## Step 2




- After separating the tape holding the screen and case together, slowly start taking the screen off the case from the opposite side of the side with the buttons

## Step 3 — Motherboard

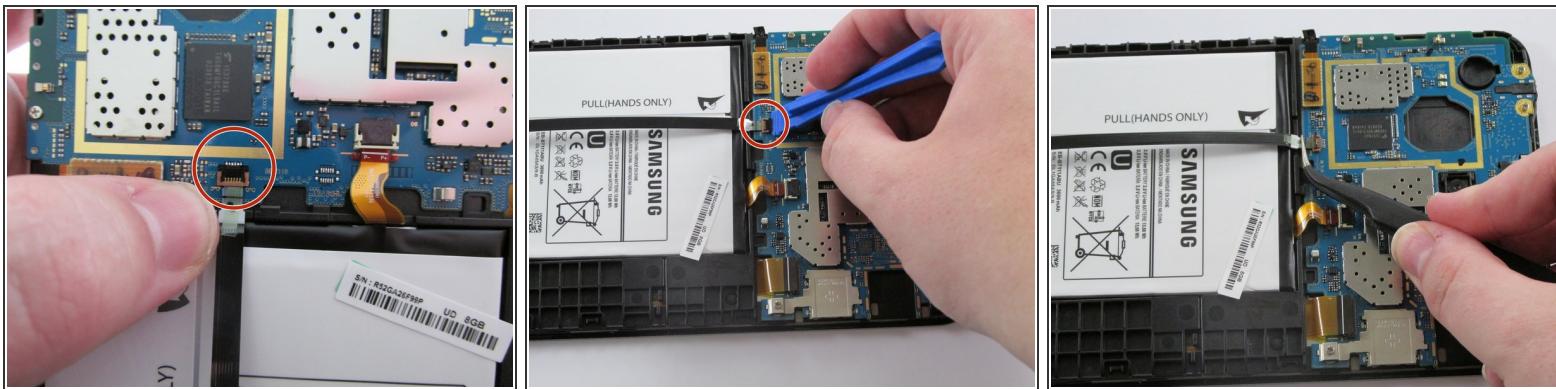


- Use a plastic opening tool to lift up the zero insertion force (ZIF) connector holding down the ribbon cable.
- Use the precision tweezers to gently pull the ribbon cable out of the ZIF connector.

## Step 4

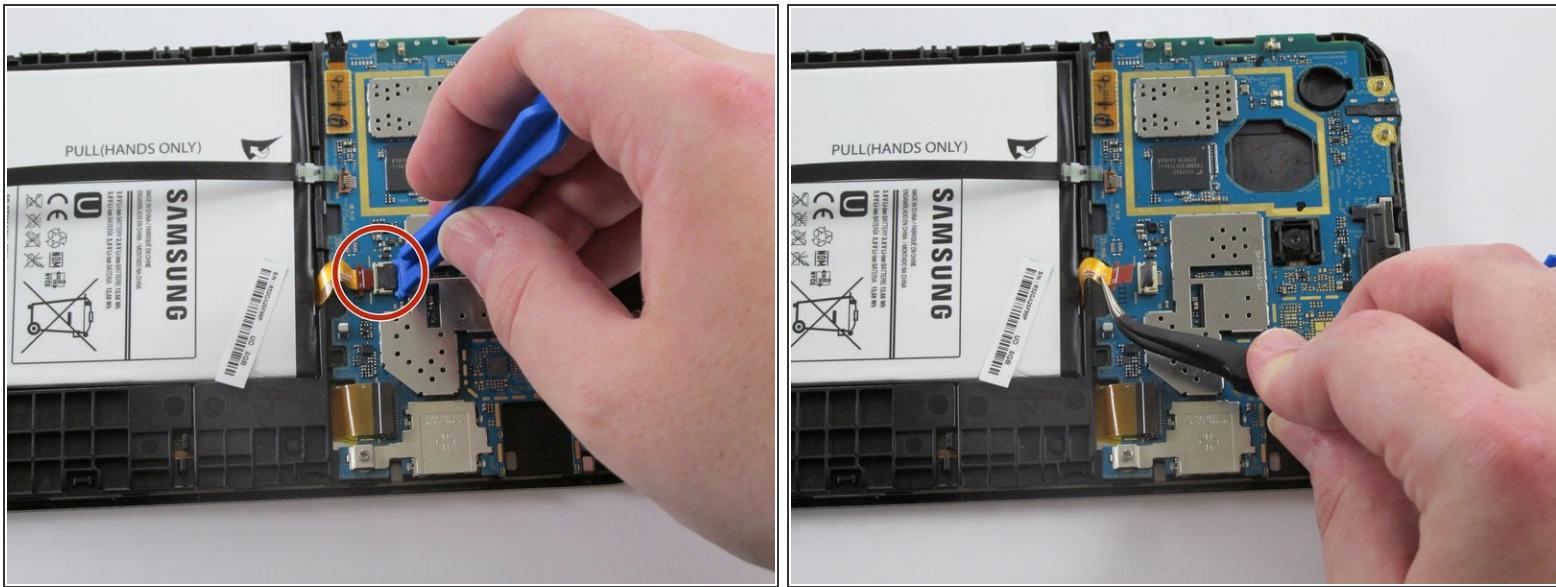

- Use the plastic opening tool to lift up the zero insertion force (ZIF) connector holding down the battery ribbon cable.
- Use the precision tweezers to remove the ribbon cable from the ZIF connector.

## Step 5

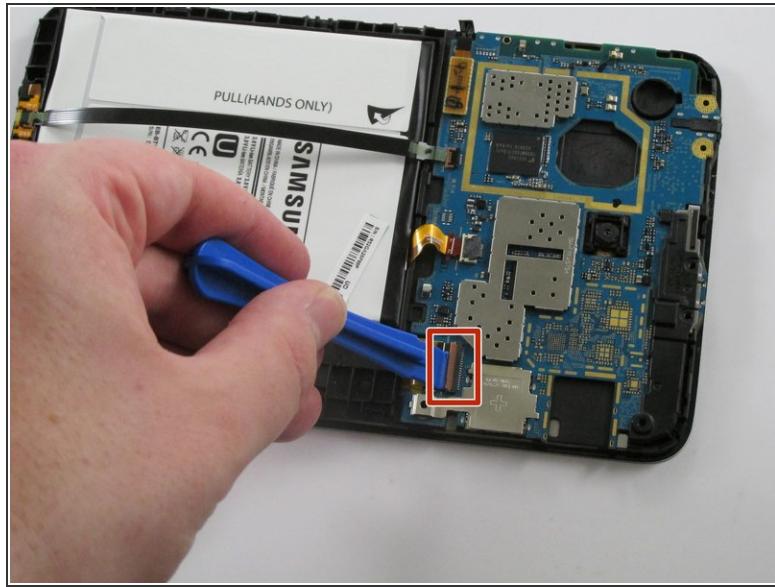


- Use the plastic opening tool to lift up the zero insertion force (ZIF) connector holding down the battery ribbon cable.
- Use the precision tweezers to remove the ribbon cable from the ZIF connector.

## Step 6




- Remove the seven 4mm Phillips J000 screws holding the motherboard in place.

## Step 7

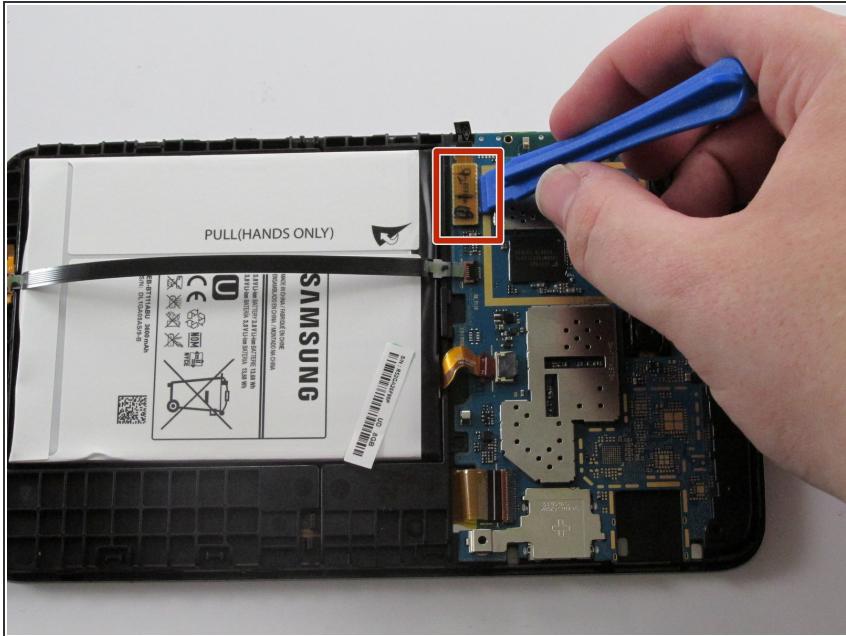



- Use the plastic opening tool and gently pry up the tab holding the motherboard in place.

## Step 8

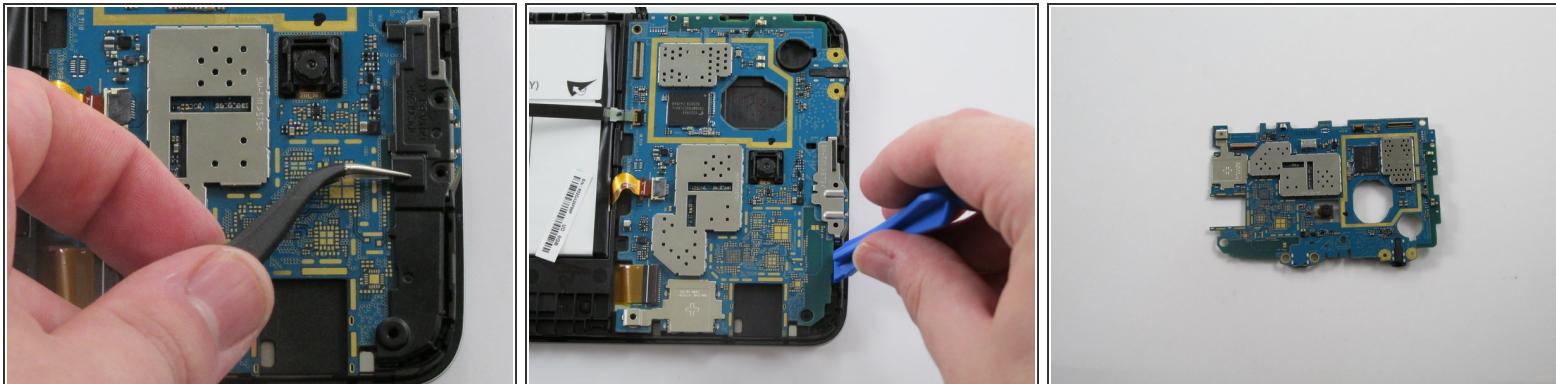



- Use the precision tweezers to remove the black plastic corner on top of the motherboard.
- Use the plastic opening tool to pull the motherboard off the case.

## Step 9 — Camera

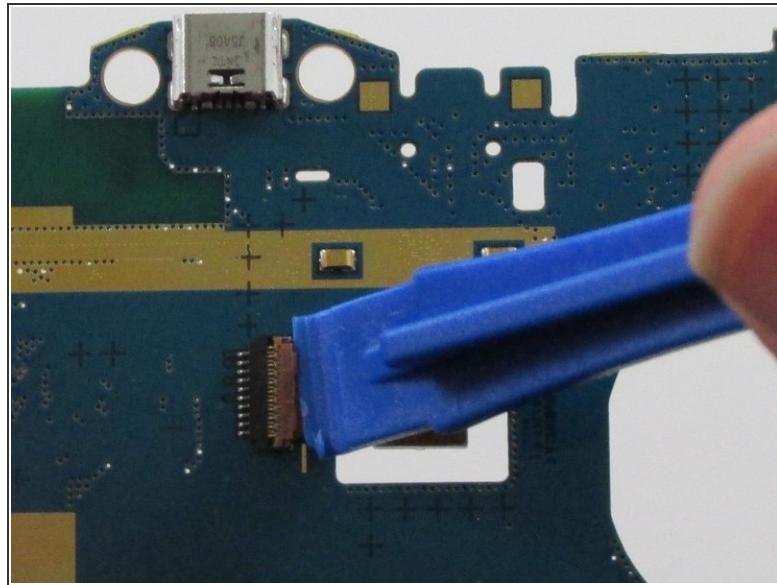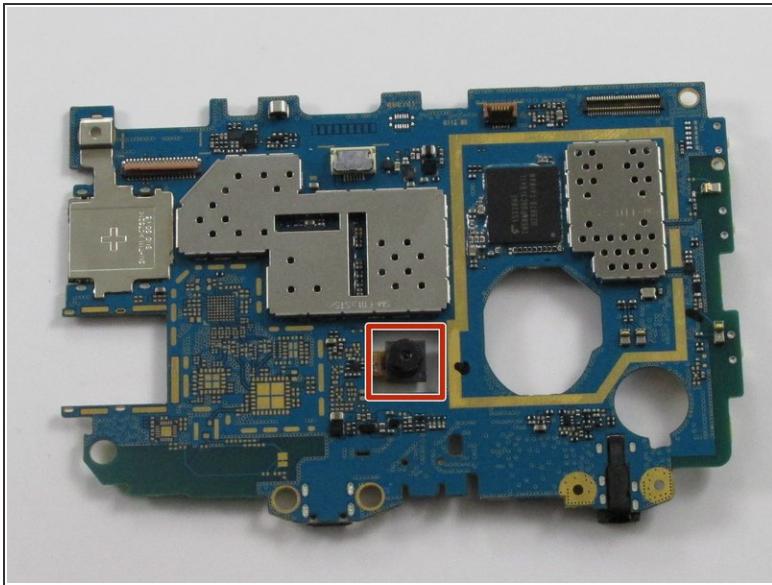

- Flip the motherboard over and locate the camera in the middle.
- Use the plastic opening tool to gently lift up the flap holding the camera cable in place.

## Step 10

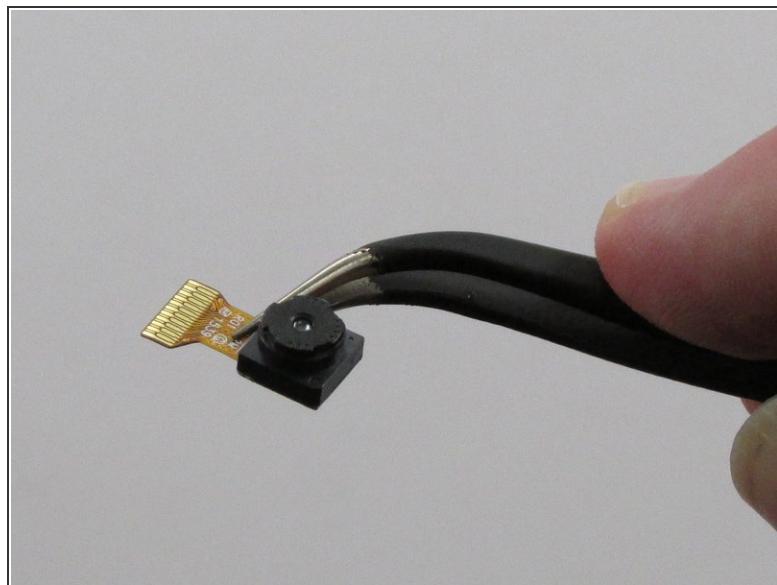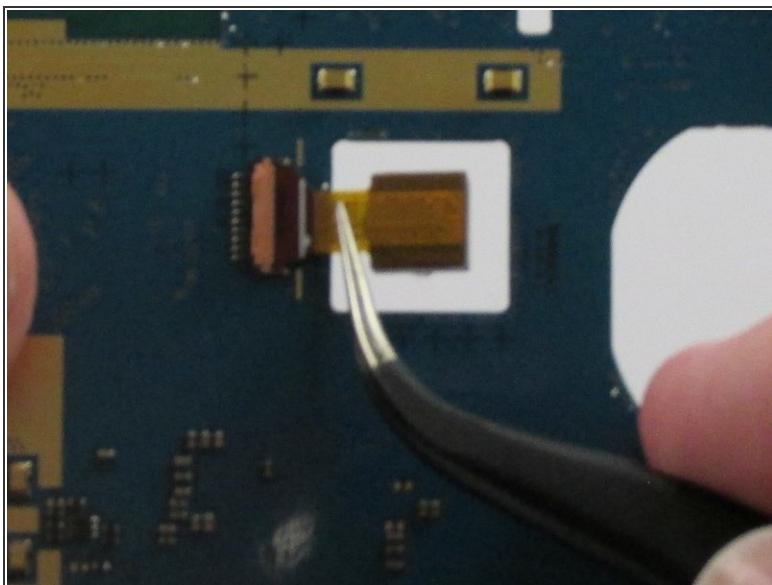

- Using precision tweezers, gently pull the camera off the motherboard.

To reassemble your device, follow these instructions in reverse order.