




Samsung Odyssey NP800G5M Speaker Replacement

This guide will help you to remove faulty speakers and install new speakers into the Samsung Odyssey NP800G5M.

Written By: Sean Surrency

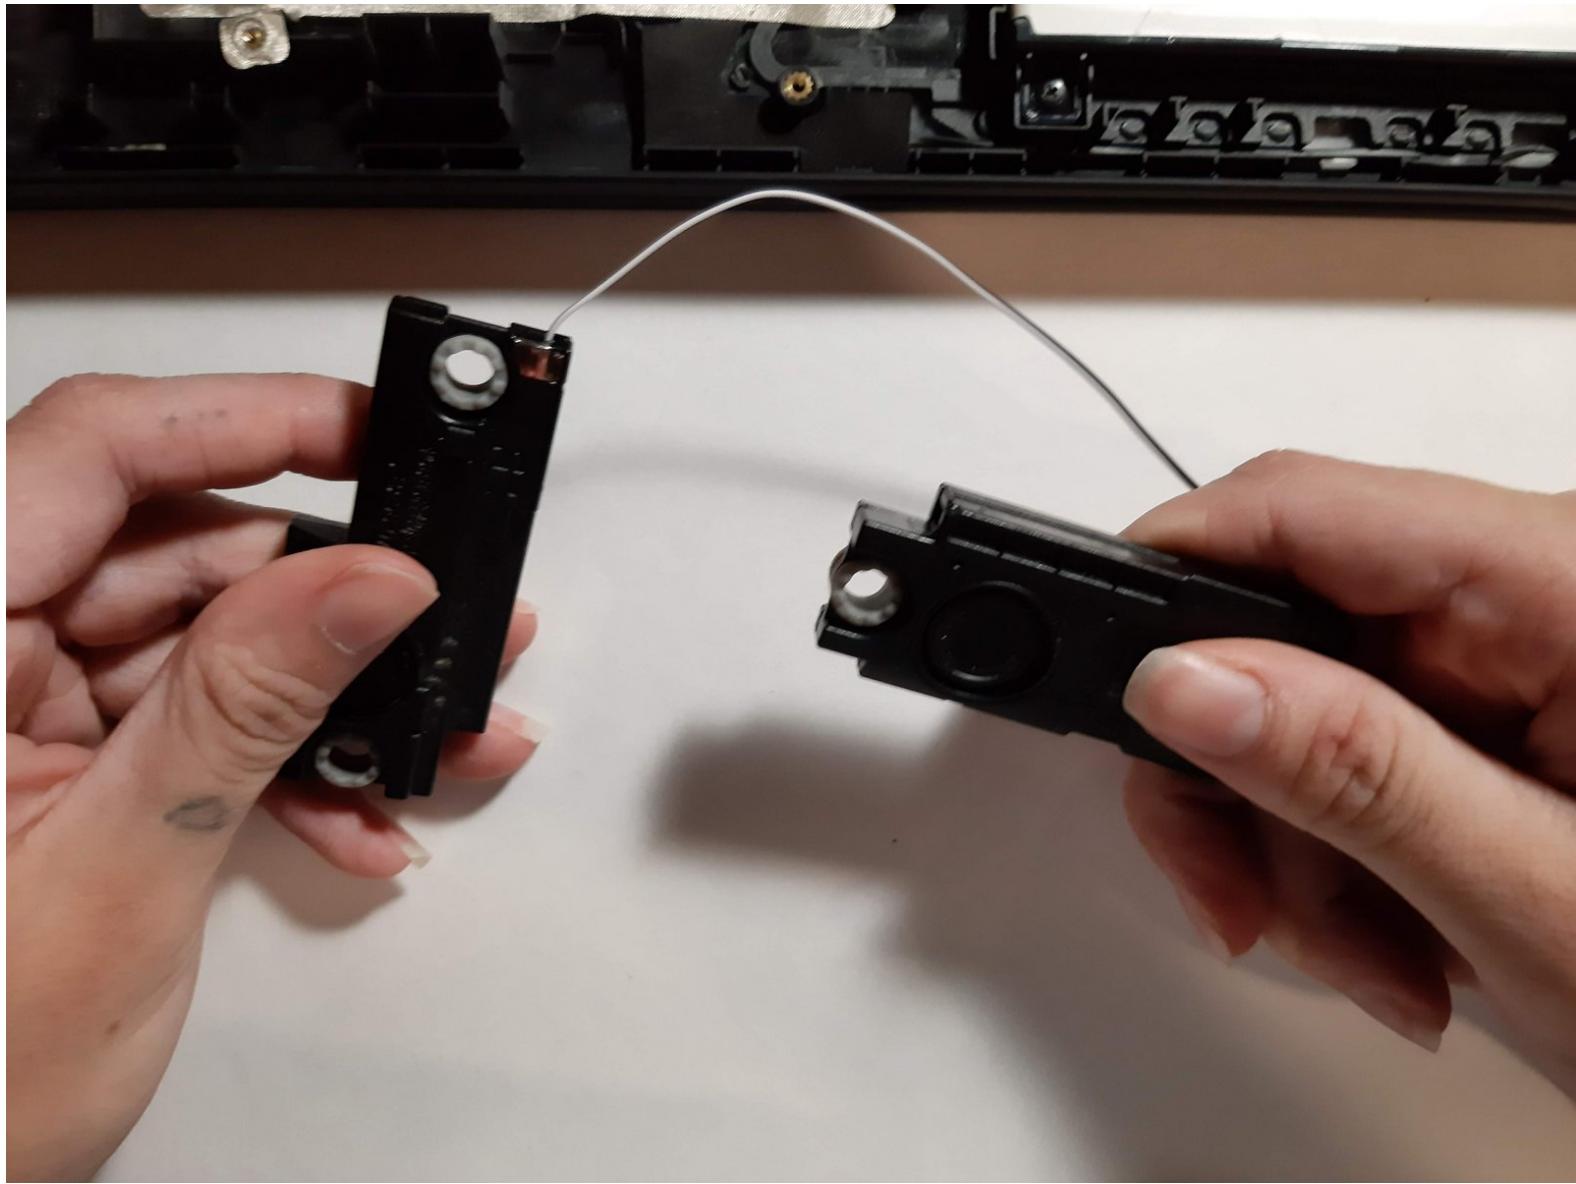

This document was generated on 2020-01-08 04:55:19 PM (MST).

INTRODUCTION

Built -in speakers are one of the benefits of owning a laptop, so any malfunctioning or broken speakers are an inconvenience to laptop users. Rather than purchasing external speakers or wearing headphones whenever audio is needed, this issue can be remedied in a more cost effective way by installing a new speaker into the laptop. This guide will show you how to replace the speakers in your laptop.

TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



- Remove the eleven 6.6 mm screws on the back of the computer using the Phillips #0 screwdriver.

Step 2



- Using the opening tool, gently pry apart the back corners until the plastic separates from the body of the laptop.
- Work your way around the body of the laptop until the back cover is completely separated.
- Remove the back casing.

This document was generated on 2020-01-08 04:55:19 PM (MST).


Step 3



- Disconnect the battery connector cable.

⚠ Working on the device without removing the battery connector cable can damage major components of the device.

Step 4

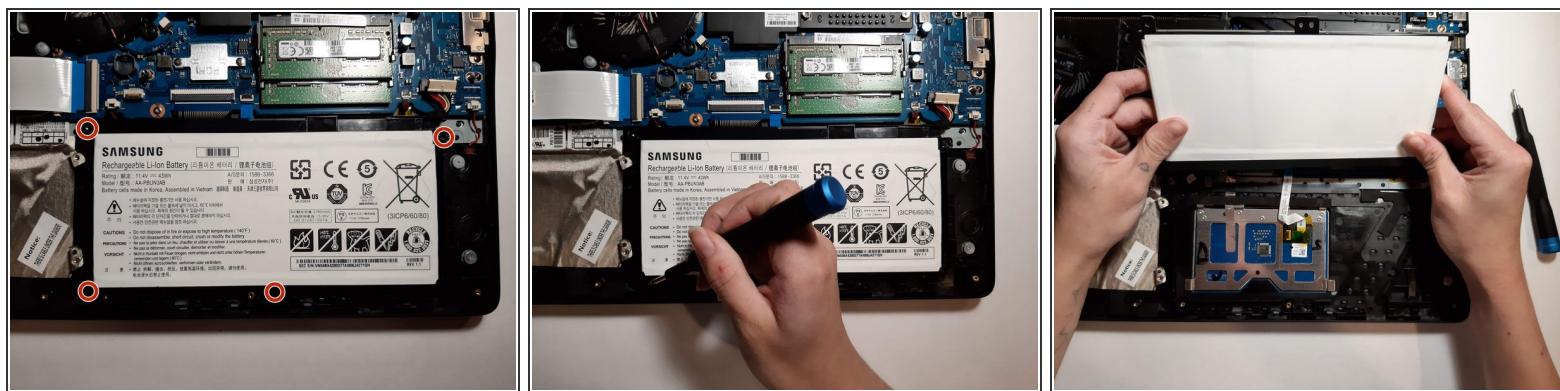


- Remove the four 6.6 mm screws using the Phillips #0 screwdriver.
- Remove the battery from the device.

Step 5 — Speaker




- Using the spudger, lift the black tab to release the ribbon cable.
- Disconnect the USB ribbon cable.

Step 6

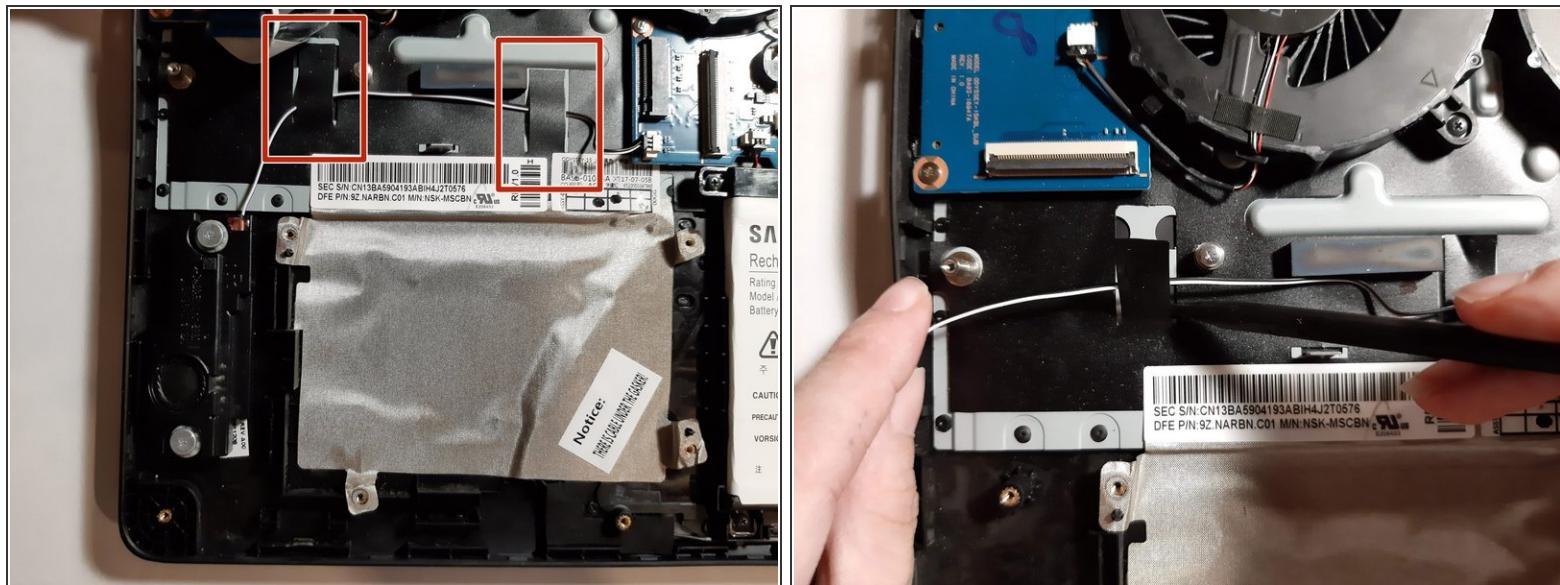

- Remove the tape securing the wire down.
- *(i)* This tape will remain sticky after removal.

Step 7

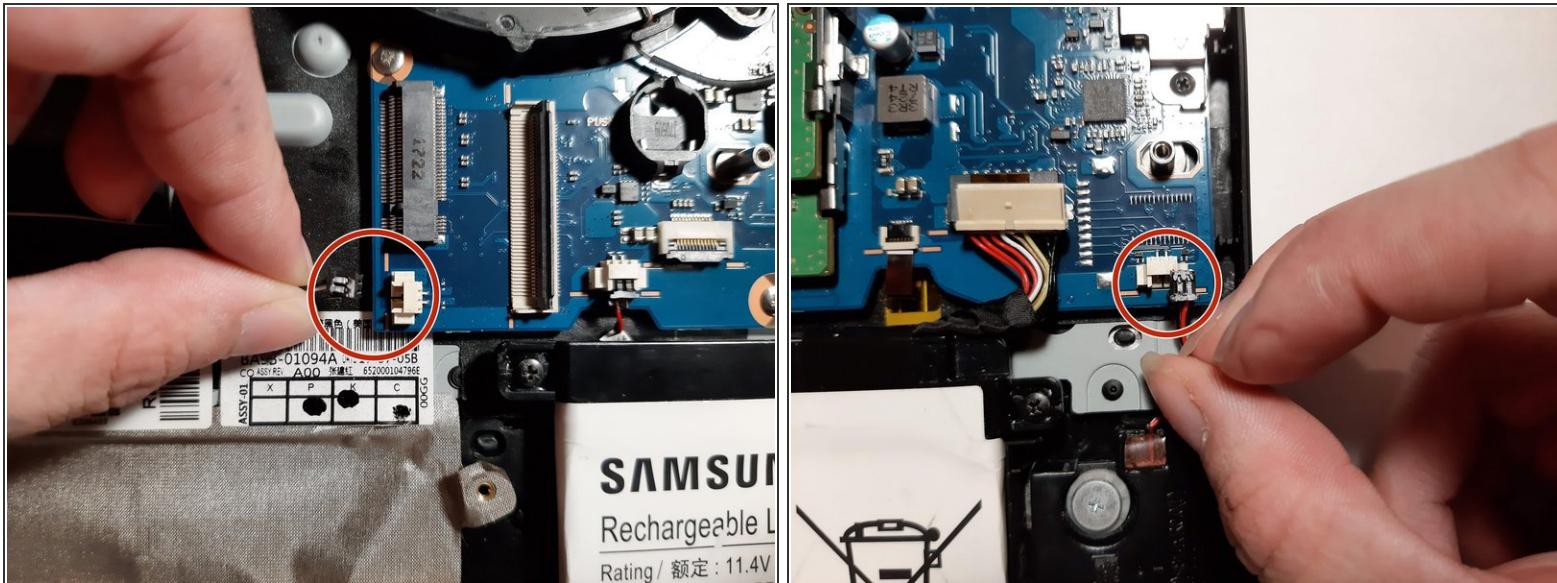

- Disconnect the speakers by pulling the plugs out of their sockets.

Step 8



- Using the Phillips #0 screwdriver, remove the four screws holding the speakers to device.
- Remove the speakers from the device.

To reassemble your device, follow these instructions in reverse order.