



# Samsung SGH-T639 Keypad Replacement

This guide will give instructions for removing the keypad of the Samsung SGH-T639.

Written By: Yi Ren



## INTRODUCTION

This guide contains photos that do not include pictures of the back cover or battery. However, the instructions have been adjusted to reflect this lack of visual aid.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Magnetic Project Mat](#) (1)

## Step 1 — Battery



- Flip the phone over and take off the back cover

*i* Note: These images do not contain the back cover or battery of the phone.

## Step 2



- Use button to remove battery from the phone.

*i* Note: These images do not contain the back cover or battery of the phone.

## Step 3 — SIM Card




- Locate SIM card
- Slide SIM card down and gently pull out of the card slot

## Step 4 — Motherboard



- Locate the six (4mm) screws on the back casing of the phone.
- Unscrew each one using a phillips head #000 screwdriver.
- Place screws on magnetic mat.

## Step 5

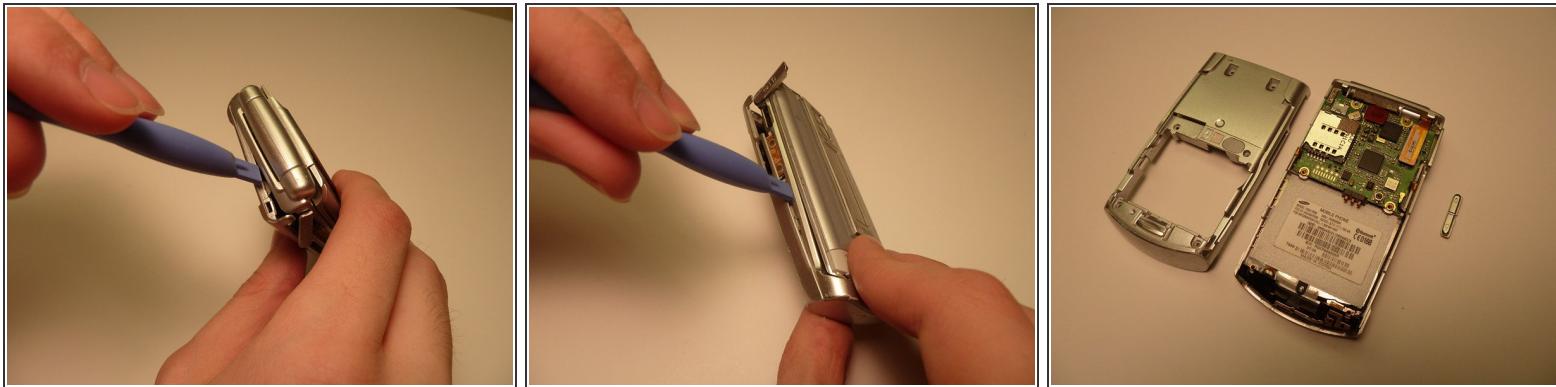

- Starting at the top of the phone, carefully insert plastic opening device into the seam.
- Carefully slide device along the seam and around the corners of the phone until the back is separated from the front.

*(i)* Note: Some force must be exerted. Be careful when taking off panel. Go slow.

*(i)* Note: The volume button may separate from the case, this is normal. It is not broken.

## Step 6



- Locate the connection point of black wire running from the microphone to the motherboard.
- Carefully disconnect the gold connector from the motherboard using tweezers.

## Step 7




- Locate the red connector at the top of the motherboard.
- Carefully lift and remove the connector from the motherboard using tweezers.

## Step 8




- Locate the gold connector that connects the screen to the motherboard.
- Carefully disconnect the connector from the motherboard using tweezers.

## Step 9

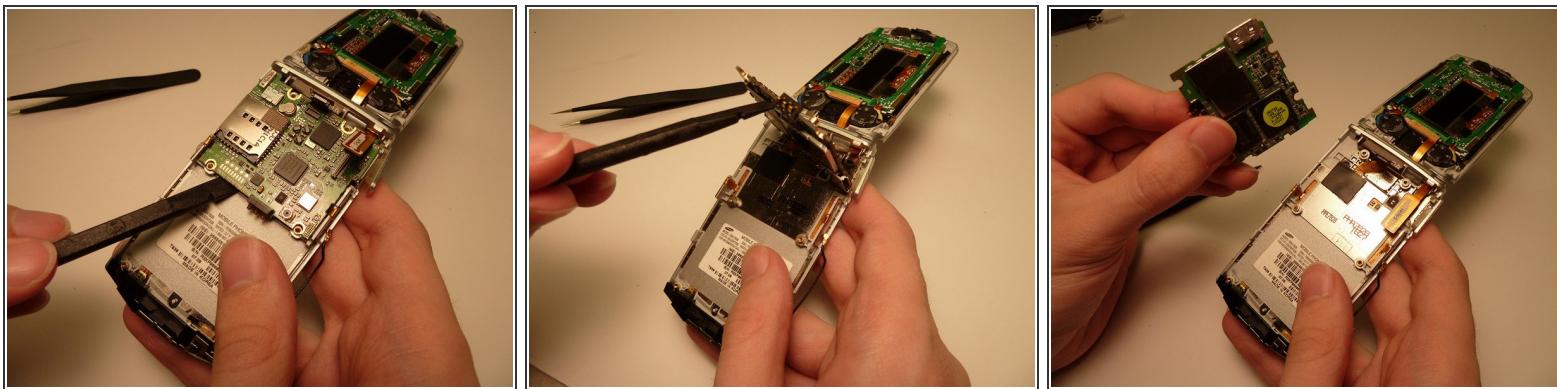

- Start at the bottom of the motherboard and gently pry it from the back of the cell phone using the plastic opening tool.
- Lift the motherboard from the cell phone.

## Step 10

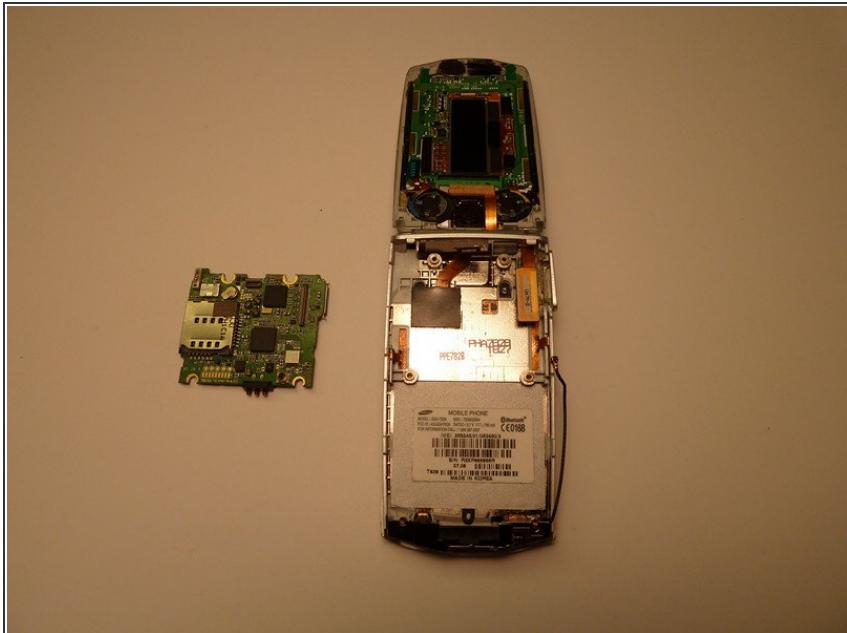



- Remove the motherboard from the cell phone.

## Step 11 — Keypad



- Locate the two black, rubber tabs near the top of the back of the phone.
- Locate the one black, rubber tab near the base of the phone.

## Step 12

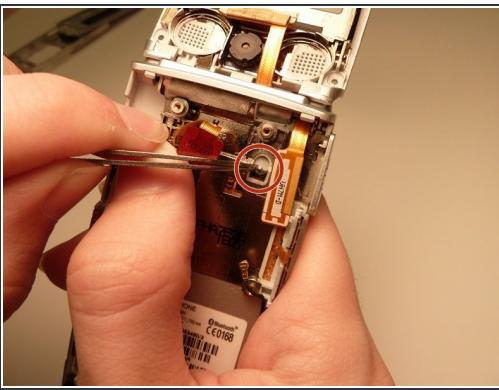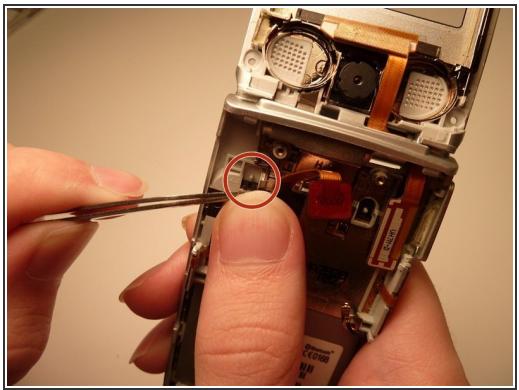

- Using tweezers, pry each of the tabs open.
- Tuck each tab behind the white notch.

*(i)* By tucking the tabs behind each notch. This allows improves the ease of removing the keypad.

## Step 13



- Flip phone over to make the keypad visible.
- Carefully lift keypad around the edges.
- Remove keypad from the cell phone.

To reassemble your device, follow these instructions in reverse order.