



Samsung Series 5 UltraTouch Battery Replacement

This guide will show how to replace the battery in the Samsung Series 5 Ultrabook.

Written By: Timothy



INTRODUCTION

This guide will show how to remove the covers from the underside of the laptop, remove the battery, and replace it with the new battery.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:


- [Samsung AAPLWN4AB and AAPBYN4AB Replacement Laptop Battery](#) (1)

Step 1 — Remove the Screws on the Back Cover

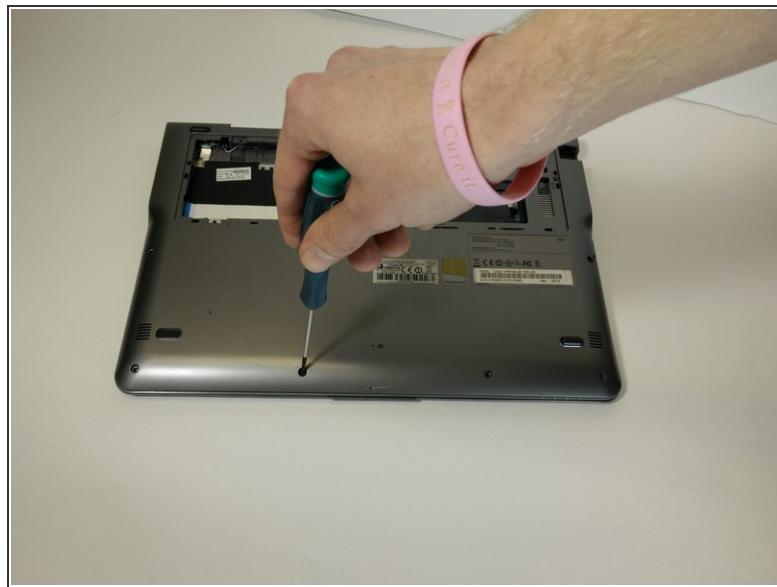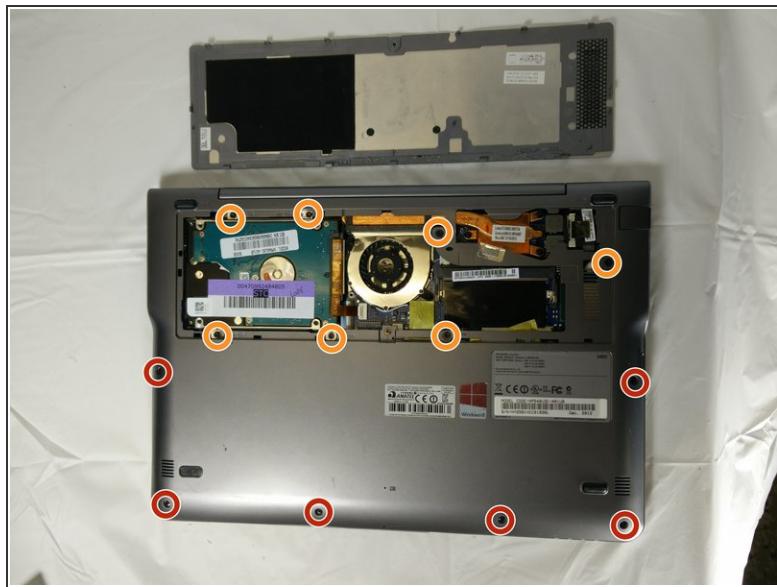


- Power off the device. Remove the remaining screws holding the back cover in place:
 - Six 4.0 mm Phillips #00 screws.
 - Seven 6.7 mm Phillips #00 screws.

Step 2 — Remove the Rubber Pads

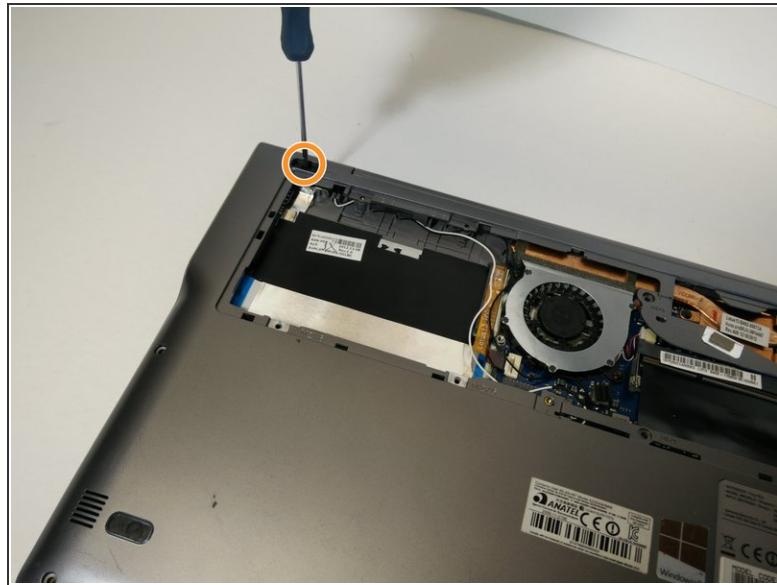


- Remove the two rubber pads concealing the final bottom case screws.
- Remove the two 4 mm Phillips #00 screws found under these pads.

Step 3 — Remove the Back Cover

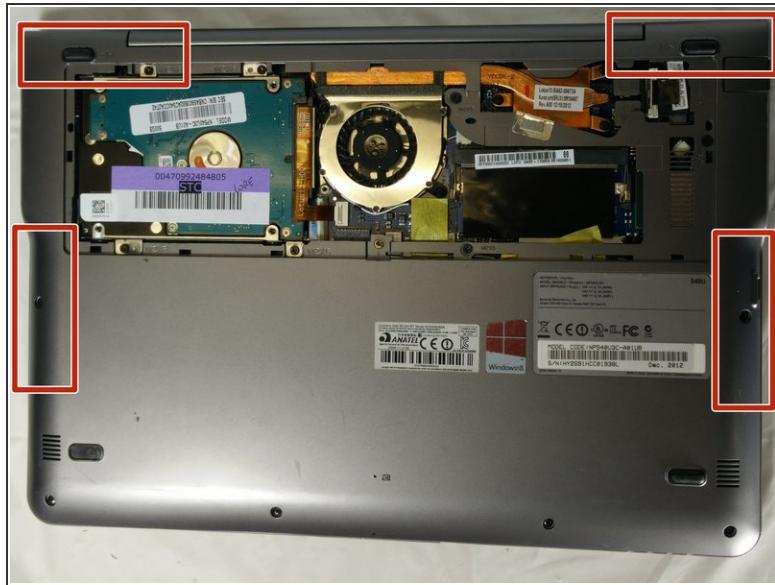

- There are clips along the edges of the back cover that hold it in place. Be careful not to break these.
- Remove the entire rest of the back cover.

Step 4

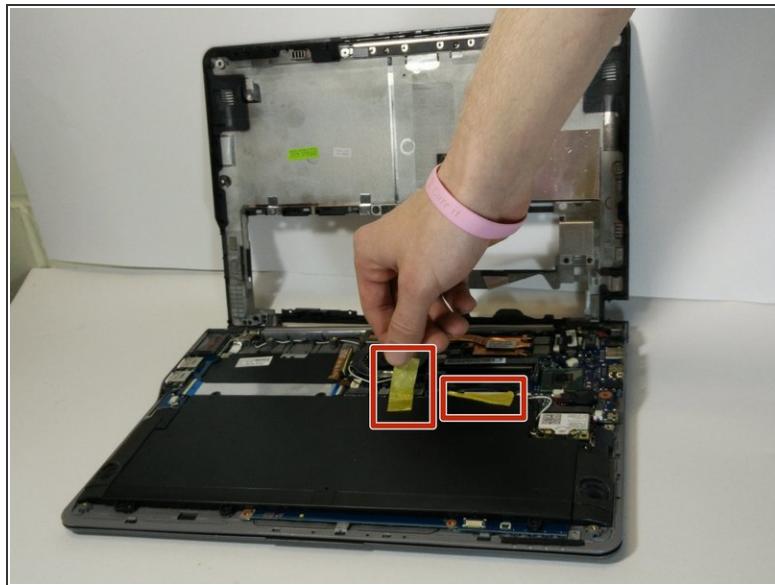

- Remove the tape holding the wires in place.

Step 5



- Remove the following Phillips 00 screws securing the battery:
 - Four 4.5 mm screws
 - Two 6.7 mm Phillips screws

Step 6 — Remove the Battery



- Pull the battery connector towards the battery to disconnect it.

Step 7



- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.