



# Shark IONFlex 2X Brush Roll Band Replacement

This replacement guide shows the user how to replace their brush roll band for the Shark IONFlex 2X.

Written By: Eric Dean



This document was generated on 2019-09-25 04:51:52 PM (MST).

## INTRODUCTION

This replacement guide uses a metal spudger, T20 Torx screwdriver, and a large plastic opening tool. This guide will show the user how to open the device casing, access the brush roll band, and replace the band.

**CAUTION:** Use care when using the metal spudger, as the edges of the tool are sharp and can cut you if you are not careful.

### **TOOLS:**

- [T20 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Metal Spudger \(1\)](#)

## Step 1 — Brush Roll Band




- Press and slide the “access brush roll” buttons towards the text and lift plastic brush roll cover off.

## Step 2



- Gently pry the circular screw cover off of the side of the casing with the shoe print mark on it with the small metal spudger.

## Step 3

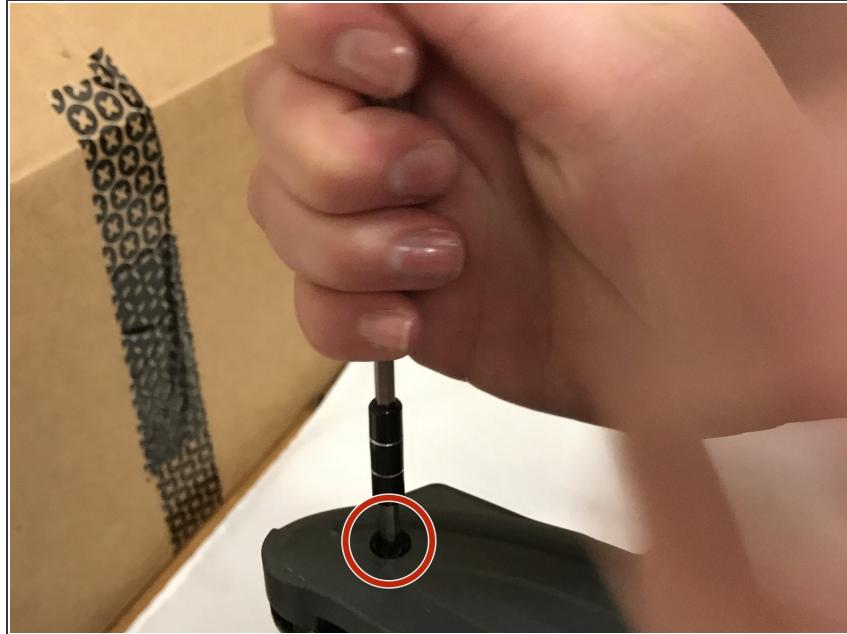

- Use a T20 screwdriver to unscrew the 12.3 mm screw beneath the cover you just removed.

## Step 4




- Move to the side of the casing with the shoe print mark. Use the T20 screwdriver to unscrew the 18mm screw.

## Step 5




- Use the small metal spudger to gently separate the side casing from the main body.

## Step 6

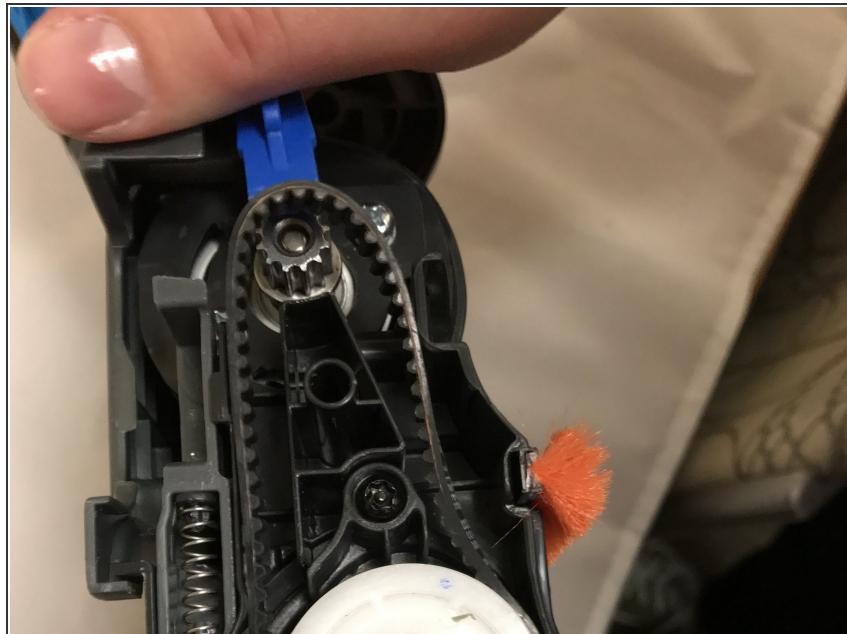

- Use the large plastic opening tool to pry the rubber brushroll band towards you until the rubber brush roll band comes off of the small metal gear.

## Step 7

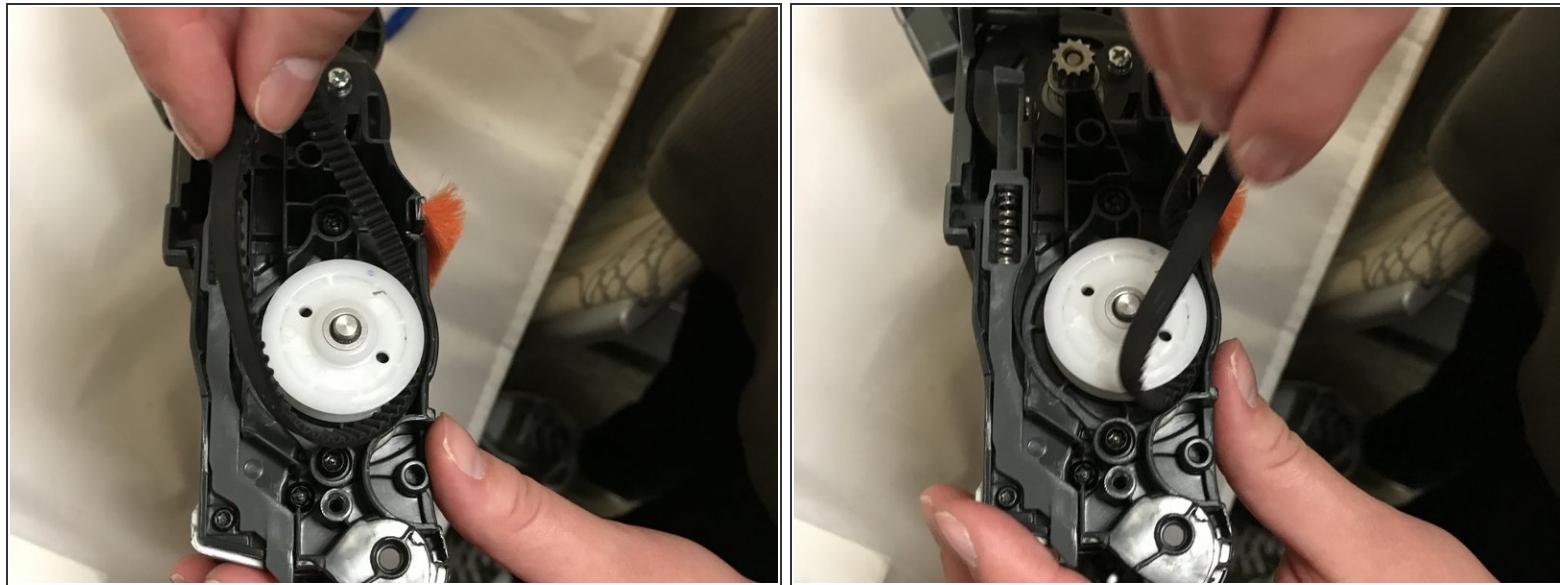

- Pull the rubber brush roll band out of the large white gear.

To reassemble your device, follow these instructions in reverse order.